



QUICK START GUIDE & Installation Manual
GUIDE DE DÉMARRAGE RAPIDE & Manuel d'installation
GUÍA DE INICIO RÁPIDO & Manual de instalación

NX604
FX503



Smart Access



Radio®



DVD MULTIMEDIA STATION WITH BUILT-IN NAVIGATION & 6.2-INCH TOUCH PANEL CONTROL

MULTIMEDIA STATION & 6.2-INCH TOUCH PANEL CONTROL

STATION MULTIMÉDIA DVD AVEC NAVIGATION INTÉGRÉE ET COMMANDE PAR ÉCRAN TACTILE DE 6,2 POUCES

STATION MULTIMÉDIA ET COMMANDE PAR ÉCRAN TACTILE DE 6,2 POUCES

ESTACIÓN MULTIMEDIA DVD CON NAVEGACIÓN INTEGRADA Y CONTROL DE PANEL TÁCTIL DE 6,2"

ESTACIÓN MULTIMEDIA CON CONTROL DE PANEL TÁCTIL DE 6,2"

CLARION PRODUCT REGISTRATION INFORMATION

For USA and Canada only
www.clarion.com

Dear Customer:

Congratulations on your purchase of a Clarion mobile electronic product. We are confident that you'll enjoy your Clarion experience.

There are many benefits to registering your product. We invite you to visit our website at www.clarion.com to register your Clarion product.

We have made product registration simple with our easy to use website. The registration form is short and easy to complete. Once you're registered, we can keep you informed of important product information.

Register at www.clarion.com - it's easy to keep your Clarion product up to date.

INFORMATIONS DE L'ENREGISTREMENT DE PRODUITS CLARION

Pour les États Unis et le Canada seulement
www.clarion.com

Cher client:

Nous vous remercions d'avoir acheté ce produit électronique mobile Clarion. Nous sommes confiants que vous apprécierez votre expérience Clarion.

Il y a beaucoup d'avantage à enregistrer votre produits. Nous vous invitons à visiter notre site Web www.clarion.com pour enregistrer votre produit Clarion.

Nous avons facilité la tâche d'enregistrement de produit simple et facile grâce à notre site Web. Le formulaire d'enregistrement est court et facile à compléter. Lorsque vous êtes enregistrer, nous pouvons vous tenir informé des informations important de produits.

Enregistrer à www.clarion.com - c'est facile de mettre à jour votre produit Clarion.

INFORMACIÓN DEL REGISTRO DE PRODUCTO DE CLARION

Para USA y Canada nomas
www.clarion.com

Querido Cliente:

Felicitaciones por su compra de producto electrónico móvil de Clarion. Estamos seguros que usted gozará de su experiencia con el producto de Clarion.

Hay muchas ventajas al registrar su producto. Le invitamos a que visite nuestro sitio en internet www.clarion.com para registrar su producto de Clarion.

Hemos hecho el registro de producto fácil en nuestro sitio. La forma de registro es corta y fácil de completar. Una vez que lo registre, podremos proporcionarle la información de su producto.

Registrese en www.clarion.com - es fácil mantener su producto de Clarion actualizado.

This guide is intended to guide you through the basic functions of the unit.

Contents

PRECAUTIONS	1	Start using Clarion Mobile Map	9
Operation Panel/Generalities	1	Selecting the destination of a route	9
Trademarks	2	Map screen	10
Names and functions of parts	3	Quick menu	10
Basic method of use	5	About Total Traffic Network (NX604 only)	10
Turning the power on	5	INSTALLATION AND WIRE CONNECTION MANUAL	11
Switching the language	5	1. SAFETY PRECAUTIONS	11
Setting the time (FX503 only)	5	2. PACKAGE CONTENTS	12
Selecting a Source	5	3. GENERAL CAUTIONS	12
Source Media Modes	5	4. CAUTIONS ON INSTALLATION	12
Viewing DVDs (NX604 only)	5	5. INSTALLING THE MAIN UNIT	12
Listening to microSD card/		6. REMOVING THE MAIN UNIT	14
USB memory files	5	7. CAUTIONS ON WIRING	14
Listening to the radio	6	8. INSTALLING THE GPS ANTENNA (NX604 ONLY)	14
Bluetooth Operations	6	9. WIRE CONNECTION	15
Registering Bluetooth-compatible devices (pairing)	6		
Screen during a telephone call	7		
Entering a number to make a call	7		
Receiving telephone calls	7		
Using Smart Access	7		
What is Smartphone linking?	7		
Linking-compatible applications	8		
Procedure up to Smartphone linking	8		
Starting up applications	8		
Using Intelligent VOICE (NX604 only) ...	9		

- For details of functions and operation of this product, refer to "Owner's manual".
- The screens shown in the examples may differ from actual screens. Actual screens may be changed without notice for performance and function improvements.

PRECAUTIONS




- **For your safety, the driver should not watch the DVD video/movie data or operate the controls while driving. Please note that watching and operating the DVD video/movie data while driving are prohibited by law in some countries. Also, while driving, keep the volume to a level at which external sounds can be heard.**

1. When the inside of the car is very cold and the player is used soon after switching on the heater, moisture may form on the disc (DVD/CD) or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc (DVD/CD), wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.
2. Driving on extremely bumpy roads which cause severe vibration may cause the sound to skip.
3. This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts.
4. Insert and remove the microSD card after turning off the unit, because the microSD card might get damage.
5. This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).
6. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

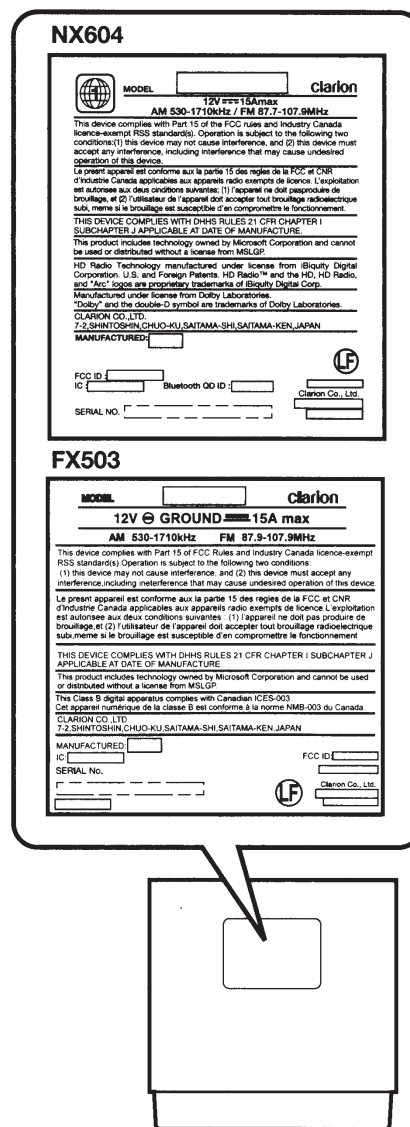

Operation Panel/Generalities

For a longer service life, be sure to read the following cautions.

- Do not allow any liquids on the set from drinks, umbrellas, etc. Doing so may damage the internal circuitry.
- Do not disassemble or modify the set in any way. Doing so may result in damage. Also, subjecting the operation panel to shocks may result in breakage, deformation, or other damage.
- Do not let cigarettes burn the display. Doing so may damage or deform the cabinet.
- If a problem should occur, have the set inspected at your store of purchase.
- The optional remote control unit may not work if the remote control sensor is exposed to direct sunlight.
- In extremely cold weather, the display movement may slow down and the display may darken, but this is not a malfunction. The display will work normally when the temperature increases.
- Small black and shiny spots inside the operation panel are normal for LCD products.
- The touchkeys on the display operate when slightly touched. Do not press the touchkey screen with much force.
- Do not push the case surrounding the touchkey panel with much force. This may cause malfunctioning of the touchkeys.

Trademarks

- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited. Use of this product by the customer is restricted to play program materials to which the Rovi copyright protection process has been applied. (NX604 only)
 - Manufactured under license from Dolby Laboratories.
“Dolby” and the double-D symbol are trademarks of Dolby Laboratories. (NX604 only)
-  **DOLBY DIGITAL**
-  is the trademark of DVD Format/Logo Licensing Corporation. (NX604 only)
 - microSDHC Logo is a trademark of SD-3C, LLC.
 - “Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPhone, iPod, iPod classic, iPod nano, iPod touch, and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.

Lightning is a trademark of Apple Inc.

Made for



iPod



iPhone

- DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.
DivX Certified® to play DivX® video, including premium content.
Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274
ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video.
Visit divx.com for more information and software tools to convert your files into DivX videos.
ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies.
To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration. (NX604 only)

DIVX.

- HD Radio™ Technology manufactured under license from iBiquity Digital Corporation.
U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp. (NX604 only)
- Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.
- Pandora®, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. used with permission.
Pandora is currently only available in the United States, Australia and New Zealand.
If you have any issues with the Pandora application on your mobile phone, please direct them to pandora-support@pandora.com.

 **Radio®**

(SiriusXM)
READY

WORKS WITH
PANDORA

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Clarion Co., Ltd, is under license.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

 **Bluetooth®**


HDMI®
HIGH-DEFINITION MULTIMEDIA INTERFACE

- Android is the trademark of Google Inc.
- © Clear Channel Broadcasting, Inc.
- How to get source code that is considered open source.
This unit uses open source software. If you want to get this software's source code, you can download it from our website.
Refer to the following website about getting the source code.
<http://www.clarion.com/us/en/open-source/index.html>

Names and functions of parts

The following describes the button names on the operation panel of the unit and their functions.

NX604

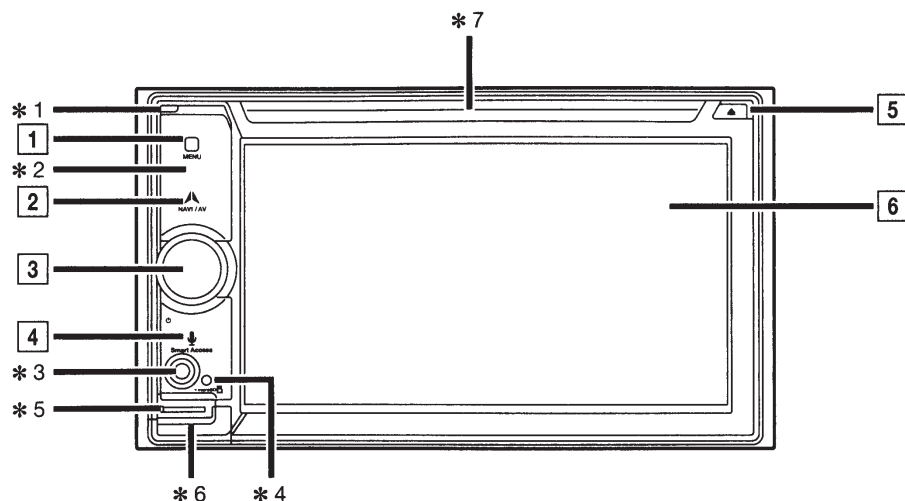


Insert and remove the microSD card after turning off the unit, because the microSD card might get damage.

- * 1 This is the built-in microphone. This is used as the microphone for the hands free function when the unit is connected to a Bluetooth compatible cellphone by a wireless connection.
- * 2 This is the remote control sensor. This receives the signal from the remote control (sold separately).
- * 3 This is the AUX terminal. Audio and video from external devices connected to this terminal can be played when the audio mode is switched to AUX.
- * 4 This is the Antitheft Indicator. This light blinks when the Antitheft Activation setting is set to "ON" to indicate that the antitheft function is activated.
- * 5 This is where the microSD card is inserted to enjoy data in microSD cards.
- * 6 The map microSD is housed in here. To update the map, open this cover, and remove and insert the card.
Do not open the cover for other operations.
- * 7 This is where DVD video, CD, MP3, WMA, and DivX discs are inserted.

This document uses the following inline graphics and conventions to indicate operations using the buttons on the operation panel.

Number	Inline graphic	Description of operation	
1	MENU	Short press	This displays the main menu screen.
2	NAVI AV	Short press	This switches between the current position map screen and currently selected audio screen.
3	—	Turn	This is the rotary volume knob. Use this to adjust the volume of the audio-visual function or the route audio guidance, etc.
		Short press	This turns off the screen and stops audio output.
4	Smart Access	Short press	This starts up the voice recognition application.
		Long press	This starts up Smart Access.
5		Short press	This ejects the disc inserted in the unit.
6	—	Touch	This is the monitor and touch panel. This functions as a touch panel by touching the screen when it is displayed.

FX503

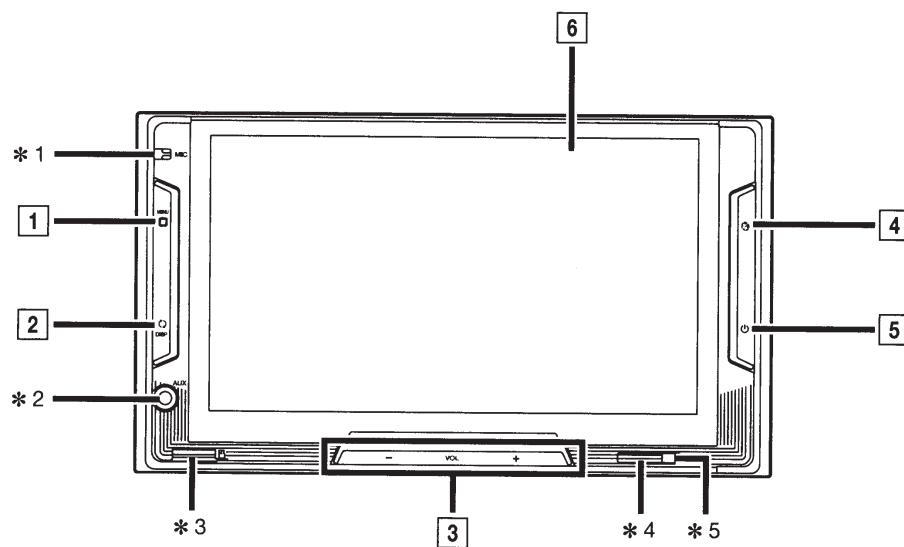

Insert and remove the microSD card after turning off the unit, because the microSD card might get damage.

- * 1 This is the built-in microphone. This is used as the microphone for the hands free function when the unit is connected to a Bluetooth compatible cellphone by a wireless connection.
- * 2 This is the AUX terminal. Audio and video from external devices connected to this terminal can be played when the audio mode is switched to AUX.
- * 3 This is where the microSD card is inserted to enjoy data in microSD cards.
- * 4 This is the remote control sensor. This receives the signal from the remote control (sold separately).
- * 5 This is the Antitheft Indicator. This light blinks when the Antitheft Activation setting is set to "ON" to indicate that the antitheft function is activated.

This document uses the following inline graphics and conventions to indicate operations using the buttons on the operation panel.

Number	Inline graphic	Description of operation	
1	MENU	Short press	This displays the main menu screen.
2	DISP	Short press	This switches to the audio screen.
3	VOL+ VOL-	Short press	Use this to adjust the volume of the audio-visual function.
4	Smart Access	Short press	This starts up Smart Access.
5	POWER	Short press	This turns off the screen and stops audio output.
6	—	Touch	This is the monitor and touch panel. This functions as a touch panel by touching the screen when it is displayed.

Basic method of use

Turning the power on

- 1 Turn the engine key to the "ACC" or "ON" position.

The unit turns on.

After the opening screen is displayed, touch **OK**. The current position map screen or the audio screen is displayed.

When the engine key is turned to the "OFF" position, the unit is turned off.



MEMO:

- When the Antitheft Activation function is set, the password entry screen is displayed.

Switching the language



When the unit turns on, the default language is set to English.

Switch to your language to use the unit.

- 1 **MENU** ►  ► 
- 2 **System Language**
- 3 Select the language you use.
- 4 **OK**



When you switch the language, the unit is automatically restarted and the language is switched to the selected language.

Setting the time (FX503 only)

- 1 **MENU** ►  ► 
- 2 **Time**
- 3 Set the hour, the minute and AM/PM.
- 4 **Set**

Selecting a Source

Press **MENU** to display the main menu screen.


Touching the main menu screen and quickly sliding your finger up or down then removing it, moves you to the previous or next page. This operation is called flicking. The screen can be switched to the next or previous menu screen by flicking or touching  .

You can select the desired source in the main menu screen.

Source Media Modes


When you select the desired source mode (for example, the DVD Video, USB or iPod mode), the following screen will appear.

Viewing DVDs (NX604 only)

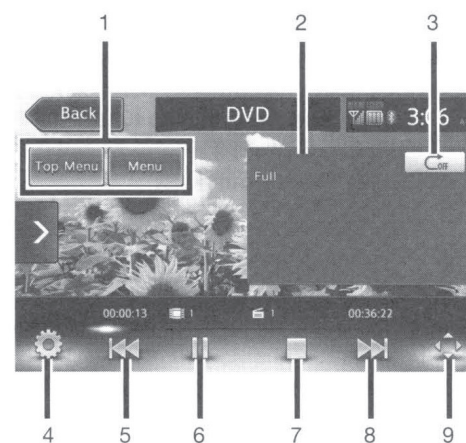

1. Display the disc menu
2. Play status/Information of the monitor size
3. Trick Play key
4. Display the option screen
5. Play the previous chapter/Rewind (long press)
6. Play/Pause
7. Stop play
8. Play the next chapter/Fast forward (long press)/Slow play (long press while pausing)
9. Display the operation key to operate the disc menu.

Listening to microSD card/USB memory files

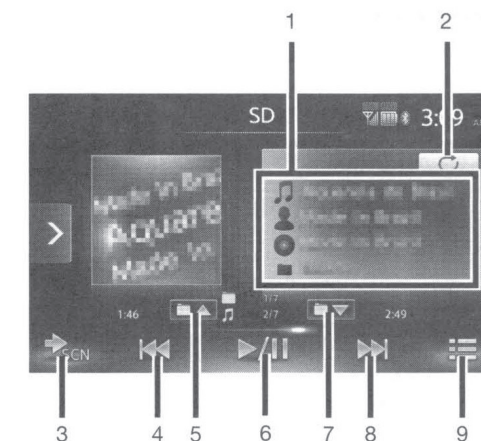


* The above screen is for playing a microSD card.


1. Song/Artist/Album/Folder information
2. Trick Play key
3. Scan key
4. Play the previous track/Rewind (long press)
5. Play the previous folder
6. Play/Pause
7. Play the next folder
8. Play the next track/Fast forward (long press)
9. Display the folder list/track list

Listening to the radio

When receiving digital FM broadcasting is being received (NX604 only)

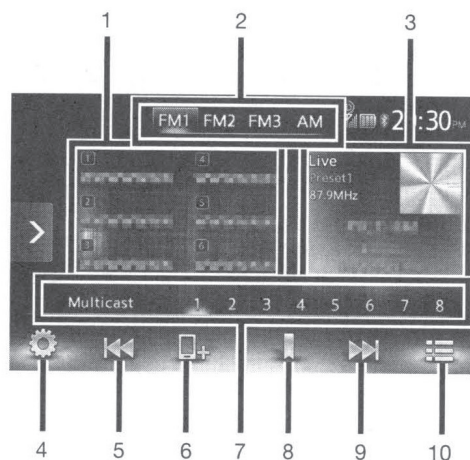

When receiving the analog FM broadcasting

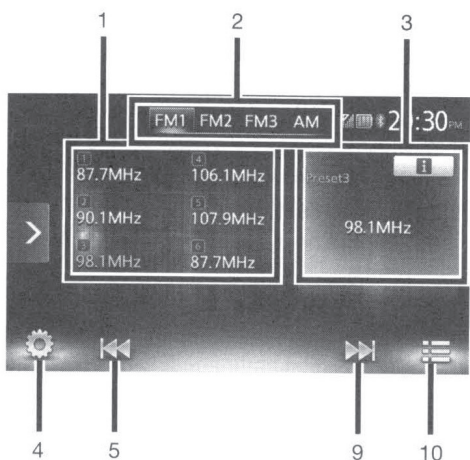

1. Preset channel list (Station list)
2. Band switch
3. Preset channel number/Frequency/Program information, etc.
4. Display the option screen
5. Manual tune backward/Auto tune backward (long press)
6. Tag the song information (NX604 only)
7. Multicast channels (NX604 only)
8. Register the song information as a bookmark (NX604 only)
9. Manual tune forward/Auto tune forward (long press)
10. Display the bookmark list

Bluetooth Operations

Registering Bluetooth-compatible devices (pairing)

When using a Bluetooth-compatible device for the first time, the device must be registered (paired) with the unit.

Notice

- Pairing cannot be executed while you are driving.
- Also, pairing sometimes cannot be executed if the Bluetooth function is not enabled on the Bluetooth-compatible device, too. For details, refer to the User's Manual for the Bluetooth-compatible device.
- During hands free operations (making outgoing calls, taking incoming calls, telephone calls, connection (telephone calls, communications) with other Bluetooth-compatible devices and pairing are not possible. Also, during hands free operation, there is no audio output.

MEMO:

- Functions that you can use vary depending on the Bluetooth connection method. For details, refer to "Owner's Manual".

Handsfree + Smartphone Linking:

Select this when using the cellphone as a hands free phone and for Smartphone linking.

Handsfree + Music:

Select this when using the cellphone as a hands free phone and for Bluetooth Audio.

Handsfree Only:

Select this when using the cellphone only as a hands free phone.

Music Only:

Select this when using the cellphone only for Bluetooth Audio.

Smartphone Linking Only:

Select this when using the cellphone for Smartphone linking.

- 1 **MENU** ► ►
- 2 **Set** at [BT Devices Connection]
- 3 **Add** for the device you want to add
- 4 Select the Bluetooth connection mode.

- 5 Select "CAR-BT" (default) from the Bluetooth-compatible device, and enter the PIN "1234" (default).

The Bluetooth-compatible device searches for the unit to complete pairing.

MEMO:


- The [Connect with Bluetooth] setting on the Settings screen of the portable device changes to on. Confirm that this setting is on to use Bluetooth functions.

When **MENU** ► **Phone** is next touched, the screen changes to the telephone number entry screen.

Screen during a telephone call

The following screen is displayed during a telephone call:

Screen during a telephone call

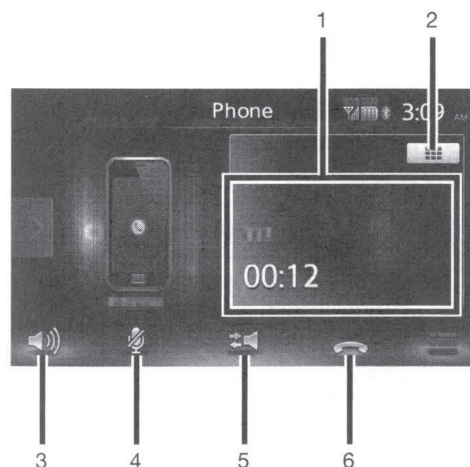

1. The call time/The name registered in the hands free phonebook/Telephone number information
2. Enter the numbers for the password, etc. during the telephone call when the number entry screen is displayed
3. Display the option screen
4. Mute the phone outgoing volume
5. Switch to telephone calls on the cellphone unit
6. End the telephone call

Entering a number to make a call

— Attention —

- While you are driving, you cannot enter telephone numbers to make a call. Always stop at a safe location before making a telephone call.

— Notice —

- Always input the area code when calling a land-line phone.
- With some cellphones, you may not be able to redial immediately after hanging up a call you dialed. Wait a while before dialing the number again.

- 1 **MENU** ► **Phone**
- 2 **Enter the telephone number.**
- 3 The telephone number is dialed and the other party is called.
- 4 **To end a telephone call** You can make calls from the outgoing/incoming calls log or the registered phonebook.

Receiving telephone calls

CAUTION

- When you receive a call while you are driving, be sure to check the safety around you before taking the call.

- 1 **When you have an incoming call** The screen switches to the telephone call screen.
 : Touching this during an incoming call, rejects the call.
- 2 **To end a telephone call**

Using Smart Access

Smart Access is a cloud information network service provided by Clarion so that all automobile users can enjoy comfortable, safe and convenient driving. By “linking” vehicles to Smart Access by smartphone, etc., Smart Access provides customers in vehicles with various conveniences such as entertainment, driving related information and Internet information.

What is Smartphone linking?

You can connect the unit to your smartphone and operate the various applications that run on your smartphone from the unit. For example, you can output audio that is played from the speakers connected to the unit or display images displayed in applications on the unit. This is called “Smartphone linking.”

The following lists the smartphones that can be linked to the unit:

- Covered models: iPhone 4, iPhone 4S, Android smartphones
- * For the device with Lightning connector, it can be linked to the unit using the Apple Lightning-Digital AV adaptor (sold separately) and the HDMI cable (sold separately).

(as of March 2014)

<Android devices only>

- Compatible Bluetooth profile:
SPP (serial port profile)
HID (human interface device profile)
- HDMI output resolution:
480p (720X480/640X480)
576p (720X576)

MEMO:

- With some Android devices, the HDMI output setting on the smartphone must be enabled.

Also, with this function, only applications compatible with Smartphone linking can be used. This User's Manual refers to these as “linking-compatible applications.”

— Attention —

- Use of Smartphone linking function is charged to smartphone communications fees. Charges are borne by the person contracted to the smartphone being used. Charges billed from the cellphone carrier may be expensive depending on the method of use. Before use, check the price plans and methods of use with the cellphone carrier you are contracted to. We recommend using the optimum price plan, such as a flat-rate data plan based on the frequency of use.

— Notice —

- While you are driving, some applications cannot be operated so as to prevent obstruction to driving.
- Information content that is distributed in real time belongs to third parties having the rights concerned. The content of services might be changed or suspended for reasons of third parties having the rights concerned.

❑ Linking-compatible applications

To use Smartphone linking, linking-compatible applications and application management software "Smart Access" must be installed on the software.

First, search for "Smart Access" from the App StoreSM or Google PlayTM and install this.

Next, install the linking-compatible applications. Start up Smart Access on the smartphone and install the linking-compatible applications from recommended lists.

Linking-compatible applications are scheduled to be added as they become available.

For details on how to use applications, refer to the Help for each application that is started up on the smartphone.

❑ Procedure up to Smartphone linking

The Smartphone linking procedure is as follows.

— Notice —

- During Smartphone linking, operations on the iPhone are not possible.

(For iPhone)

1. Set "iPhone" for "Device Type" on the Settings menu.
2. Start Smart Access on the iPhone.
3. (Only for the device with Lightning connector)
Set "Usage Setting" in "BT Devices Connection" on the Settings menu, and then connect iPhone via Bluetooth.

4. Connect the iPhone to the unit

For the device with 30-pin connector, connect iPhone with the CCA-750 video jack (sold separately) still connected to the VTR cable.

For the device with Lightning connector, the Apple Lightning-Digital AV adaptor (sold separately) and the HDMI cable (sold separately) are necessary.

MEMO:

- For the device with Lightning connector, the music and video in the iPhone cannot be played from **USB / iPod** on the main menu screen. Please use the Smart Access linking-compatible application "Media4car".

5. Start the application on the unit.

(For Android smartphones)


1. Set "Android" for "Device Type" on the Settings menu.
2. Start Smart Access on the smartphone.
3. Set "Usage Setting" in "BT Devices Connection" on the Settings menu, and then connect your smartphone via Bluetooth.

4. Connect the unit to the smartphone.


The following two connection methods are also available for some smartphones.

1. For MHL connection

Connect to the cigarette lighter port, etc. on the vehicle to supply power.

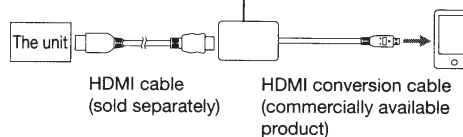

 2. For HDMI connection



— Attention —

- Use only an HDMI conversion cable that supports EDID transfer.

5. Start the application on the unit.

Starting up applications

— Notice —

- The unit sometimes does not support smartphone multi-touch or flicking functions.
- Applications cannot be added or deleted from the unit. Execute addition or deletion of applications on the smartphone.
- During Smartphone linking, do not set the smartphone to a sleep state. Doing so might prevent the smartphone from functioning properly.

MEMO:

- When Smart Access is used for the first time, the Terms of Use confirmation screen is displayed. Check the terms of use, and touch **Check**.
- "!" will be displayed when there is a new version of Smart Access available. To update Smart Access, remove the smartphone from the unit, and execute the update by operating the application on the smartphone.

1

MENU ▶ **Smart Access**

Start up Smart Access. The list of linking-related applications installed on the smartphone is displayed. When an application is started up on the smartphone, the screen is switched to the application screen.

2

Select the application you want to start up.

The application starts up. The application can be operated from screens on the unit as if you are operating the smartphone.

Touch **MENU** ▶ **Smart Access** to return to the application list screen.

Using Intelligent VOICE (NX604 only)

Intelligent VOICE is a voice recognition service that lets you search for destinations by just saying what's on your mind, based on Google™ Voice recognition technology and Google's vast local search information. You can verbally input a destination you want to search for by using Smartphone linking.

The application links to the Google server via the smartphone and searches for the destination.

For details refer to the following website:
<http://www.clarion.com>

! WARNING

- For your safety, the driver must not operate the smartphone while driving.

— Attention —

- Please note that the communication conditions may cause a delay in verbal input.
- There may be some delays when the service is used for the first time, regardless of the communication conditions when downloading the required data.
- Please update Smart Access to the latest version.

Preparations

- Install and start up Smart Access on the smartphone.
- For iPhone, connect iPhone to the unit via Bluetooth or USB.
For Android smartphones, connect the smartphone to the unit via Bluetooth.


- 1 **Smart Access**
- 2 **Talk to the interior microphone on the unit.**
Destination History:
This displays the search history.
Cancel:
This cancels the voice recognition.
Try again:
Select this to try to talk again.
MEMO:
 - Examples of verbal input:
 - "Steak house"
 - "Japanese restaurant"

The search results list screen is displayed.

The words you talked or the related items are displayed.

The search history is displayed.

This displays the details of the place, the expiration date of Intelligent VOICE etc. and sets as a destination or a waypoint.

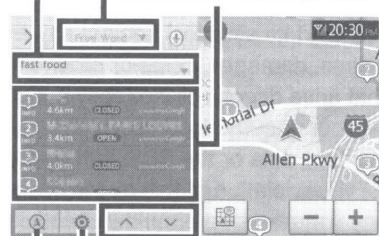

This scrolls through the list.

This switches the units of mi/km and deletes the search history.

This switches the search area to the around of destination or current location.

- 3 **Select a destination you want.**

Start using Clarion Mobile Map

When Clarion Mobile Map is started the first time, you need to do the following:



1. Select the written language of the application interface. Later you can change it in Settings.
2. Select the language and speaker used for voice guidance messages. Later you can change it in Settings.
3. Read and accept the End User Licence Agreement.
4. Read and accept the road safety warning.

After this, the Navigation menu appears and you can start using Clarion Mobile Map.

Selecting the destination of a route

To enter an address as the destination, do as follows:

1. If you are on the Map screen, tap **Menu** to return to the Navigation menu.
2. In the Navigation menu, tap **Find**.

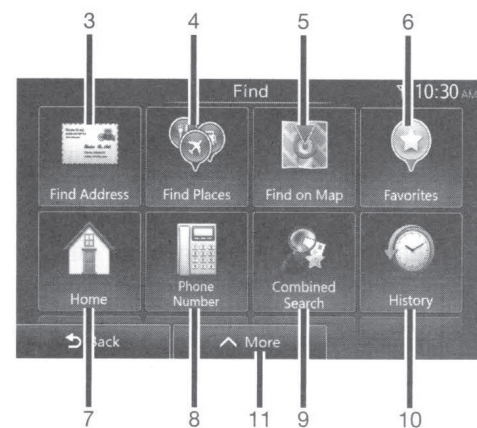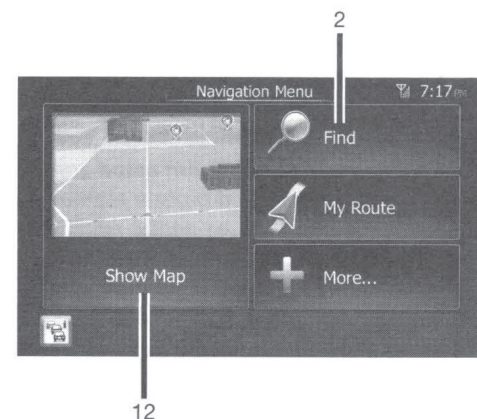


3. Selecting a destination by entering the address or the postal code
4. Selecting the destination from the Places of Interest
5. Selecting a map location as the destination
6. Selecting the destination from your Favourites
7. Selecting your Home location
8. Searching for a Place of Interest by its phone number
9. Entering the name of the destination

10. Selecting a recent destination from the History
11. Additional options


* For the information about other ways, see the user manual.


Map screen

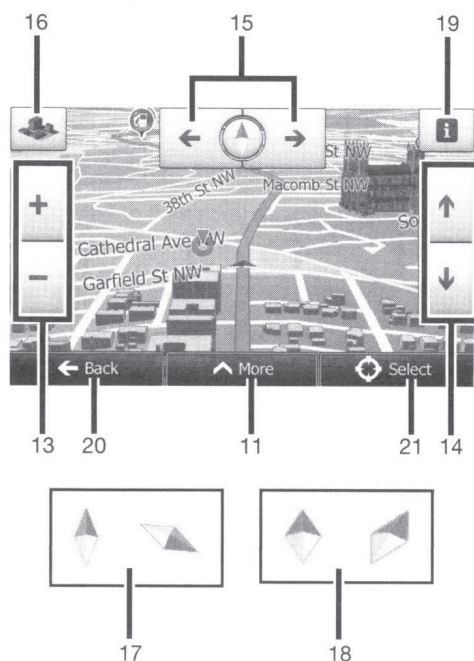

12. To enlarge this small map and open the Map screen, tap [Show Map] button
13. Zooming in and out
14. Tilting up and down
15. Rotating left and right
16. 2D or 3D view
17. Compass in 2D map view mode
18. Compass in 3D map view mode
19. Location information
20. Return to normal navigation
21. Set the cursor position as the destination

Quick menu

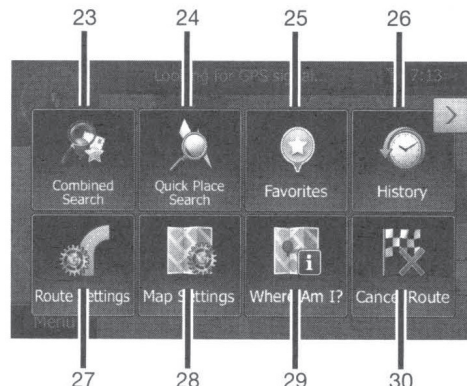

22. The Quick menu is a selection of controls and functions that are frequently needed during navigation. It can be opened directly from the Map screen by tapping .
23. Combined Search lets you search for a destination by entering the place name, address, or place category, after you specify the search area.
24. Find / Find Places /Quick Search (This function lets you search for a Place along your route or around your current location if there is no route calculated)
25. Find / Favourite (This button opens the list of your Favourite destinations)
26. Find / History (This button opens the History list.)
27. More / Settings / Route Settings (This button opens the route related settings)
28. More / Settings / Map Settings (This button opens the map related settings)
29. Tap the Current Street field on the Map screen (This button opens a special screen with information about the current position and a button to search for nearby emergency or roadside assistance.
30. My Route / Cancel Route (This button cancels the route and stops navigation. The button is replaced with the next one if waypoints are given)

30. My Route / Cancel Route (This button cancels the route and stops navigation. The button is replaced with the next one if waypoints are given)

About Total Traffic Network (NX604 only)

This is the original text in English.

© Clear Channel Broadcasting Inc.
See Clarion.com for service terms and conditions.

A.Total Traffic Network, a division of Clear Channel Broadcasting, Inc., holds the rights to the traffic incident data and RDS-TMC network through which it is delivered. You may not modify, copy, scan or use any other method to reproduce, duplicate, republish, transmit or distribute in any way any portion of traffic incident data. You agree to indemnify, defend and hold harmless Inrix, Inc. and Clear Channel Broadcasting, Inc. (and its affiliates) against any and all claims, damages, costs or other expenses that arise directly or indirectly out of (a) your unauthorized use of the traffic incident data or the RDS-TMC network, (b) your violation of this directive and/or (c) any unauthorized or unlawful activities by you in connection herewith.

B.Total Traffic Network traffic data is informational only. User assumes all risk of use. Total Traffic makes no representations about content, traffic and road conditions, route usability, or speed.

C.THE LICENSED MATERIAL IS PROVIDED TO LICENSEE "AS IS" AND "WHERE IS". TOTAL TRAFFIC NETWORK, INCLUDING, BUT NOT LIMITED TO, ANY AND ALL THIRD PARTY PROVIDERS OF ANY OF THE LICENSED MATERIAL, EXPRESSLY DISCLAIMS, TO THE FULLEST EXTENT PERMITTED BY LAW, ALL WARRANTIES OR REPRESENTATIONS WITH RESPECT TO THE LICENSED MATERIAL (INCLUDING WITHOUT LIMITATION, THAT THE LICENSED MATERIAL WILL BE ERROR-FREE, WILL OPERATE WITHOUT INTERRUPTION OR THAT THE TRAFFIC DATA WILL BE ACCURATE), EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING FROM A COURSE OF DEALING OR USAGE OF TRADE.

D.TOTAL TRAFFIC NETWORK WILL NOT BE LIABLE TO YOU FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, EXEMPLARY, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST REVENUES, ANTICIPATED REVENUES, OR PROFITS RELATING TO THE SAME) ARISING FROM ANY CLAIM RELATING DIRECTLY OR INDIRECTLY TO USE OF THE TRAFFIC DATA, WHETHER A CLAIM FOR SUCH DAMAGES IS BASED ON WARRANTY, CONTRACT, TORT (INCLUDING, WITHOUT LIMITATION, NEGLIGENCE OR STRICT LIABILITY).

INSTALLATION AND WIRE CONNECTION MANUAL

1. SAFETY PRECAUTIONS

□ Symbol Identification

This manual uses symbols and icons to indicate safety precautions and concerns during the installation procedure. Be sure to carefully read and understand each precaution prior to beginning the installation.

⚠ WARNING

- This symbol is intended to alert the user to the presence of important operating instructions. Failure to heed the instructions may result in severe injury or death.


⚠ CAUTION

- This symbol is intended to alert the user to the presence of important operating instructions. Failure to heed the instructions can result in injury or material damage.

□ Before Use

⚠ WARNING

- Confirm the battery voltage of the vehicle to be installed. This unit is designed only for vehicles with DC 12V power supply.
- Disconnect the negative terminal of the battery before connecting wires, otherwise an electric shock, injury by short circuit may occur.

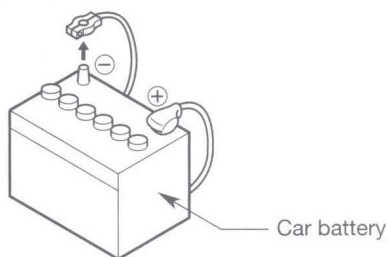

□ Installation Precautions

⚠ WARNING

- When installing the unit to a vehicle with an airbag system, never install it in a place where it may affect the operation of the airbag.
- Do not install this unit in the following locations:
A location interfering with the driver's visual range or operation.
A location where the gear shift or brake pedal are hindered.
A location where passengers are at risk.
An unstable location, or where the system may fall.

⚠ CAUTION

- Do not install the system in the locations described below. This may cause a fire, accident or electrical shock:
A location exposed to rain or dust.
An unstable location, or where the system may fall.
- Do not install this unit in a place exposed to direct sunlight, heat or a place where the vent holes or heat radiation holes are covered.
- When you install the antenna, mount it in a place where the elements of the antenna do not protrude beyond the edge of the front, back, left and right of the vehicle.
If it comes in contact with pedestrians, it may cause an accident.

□ Installation Notes

⚠ WARNING

- Please note the position of pipes, tanks and electrical wirings before installing the unit into the vehicle; failure in avoiding these may cause a fire or malfunction.

⚠ CAUTION

- Use only the supplied parts.
If unspecified parts are used, they may cause damage.
- Any holes made in the body of the vehicle should be sealed with a silicon adhesive.
If exhaust fumes or water penetrates into the vehicle, this may cause an accident.
- Fasten the bolts securely when installing the unit. If the bolts are loose an accident or malfunction could occur.

□ Connection Notes

⚠ WARNING

- Loom all cables according to the instruction manual, so as not to hinder operation.
- Wire the connecting cords/cables away from high temperature areas. If the coatings of the cables melt, it could cause an accident/fire by a short circuit.
Take care when wiring in the engine compartment.
- When wiring the connecting cables in a vehicle with an airbag system, never feed the cables through a place where it may affect the operation of the airbag.
An airbag not operating correctly in an emergency may cause increased injury.

CAUTION

- Verify wires with a digital multi-meter prior to making any connections. Many new vehicles use multiplexed and/or low voltage circuits that can be damaged if a test light or logic probe is used.
- Connect cables appropriately. If a wrong connection is made, this may cause a fire or accident.
- When passing cables through the body of the vehicle, use non-conductive grommets. If the coatings of the cables are worn out by rubbing, this may cause an accident, fire or a short circuit.
- After wiring cables, fix them with insulation tape.
- Be sure to switch off the vehicle when connecting or disconnecting cables to/from the unit, otherwise an electric shock, injury or accident may occur.

2. PACKAGE CONTENTS

- ① Main unit
- ② Quick Start Guide & Installation Manual
- ③ CD-ROM
 - Owner's manual
 - Owner's manual - Navigation (NX604 only)
- ④ Power supply cable
- ⑤ RCA pin cable (6ch)
- ⑥ RCA pin cable (Rear AUX-IN/Rear Video Out)
- ⑦ Bag for accessories
 - Flat head screw (M5 × 8 mm)8
 - Hexagonal bolt (M5 × 8 mm)8
 - Rubber cap (for RCA pin cable)10
 - Cable holder (NX604 only)3
 - Double-sided tape for fastening GPS antenna (NX604 only)1
 - Cable tie1
- ⑧ Finisher
- ⑨ Warranty card
- ⑩ GPS antenna (NX604 only)
- ⑪ USB Cable

Notice


- The provided disc (CD-ROM manual) cannot be played back on this unit.

3. GENERAL CAUTIONS


- Do not open the case. There are no user-serviceable parts inside. If you drop anything into the unit during installation, consult your dealer or an authorized Clarion service center.

4. CAUTIONS ON INSTALLATION

- Prepare all articles necessary for installing the main unit before starting.
- Install the unit within 35° of the horizontal plane. (Figure 1)

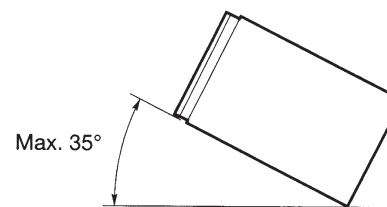**Figure 1**

- If you have to do any modification on the car body, such as drilling holes, consult your car dealer beforehand.
- Use the included screws for installation. Using other screws can cause damage. (Figure 2)


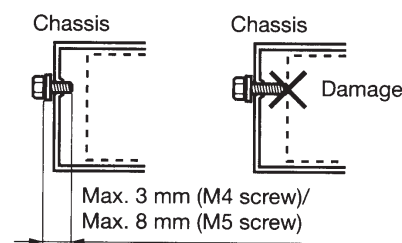
**Figure 2****5. INSTALLING THE MAIN UNIT**

This unit is designed for fixed installation in the dashboard.


- When installing the main unit in NISSAN vehicles, use the parts attached to the unit and follow the instructions in Figure 3.

When installing the main unit in TOYOTA vehicles, use the parts attached to the vehicle and follow the instructions in Figure 4.

- Wire as shown in Section 9→ P.15.
- Reassemble and secure the unit in the dashboard and set the face panel and center panel.

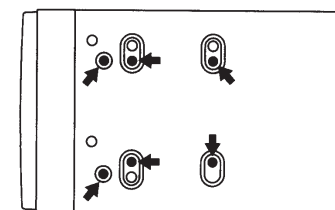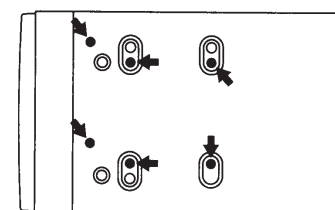Mounting Screw Holes (Side View of the Main Unit)**For NISSAN vehicle****For TOYOTA vehicle**

❑ Installing the Main Unit in a NISSAN Vehicle

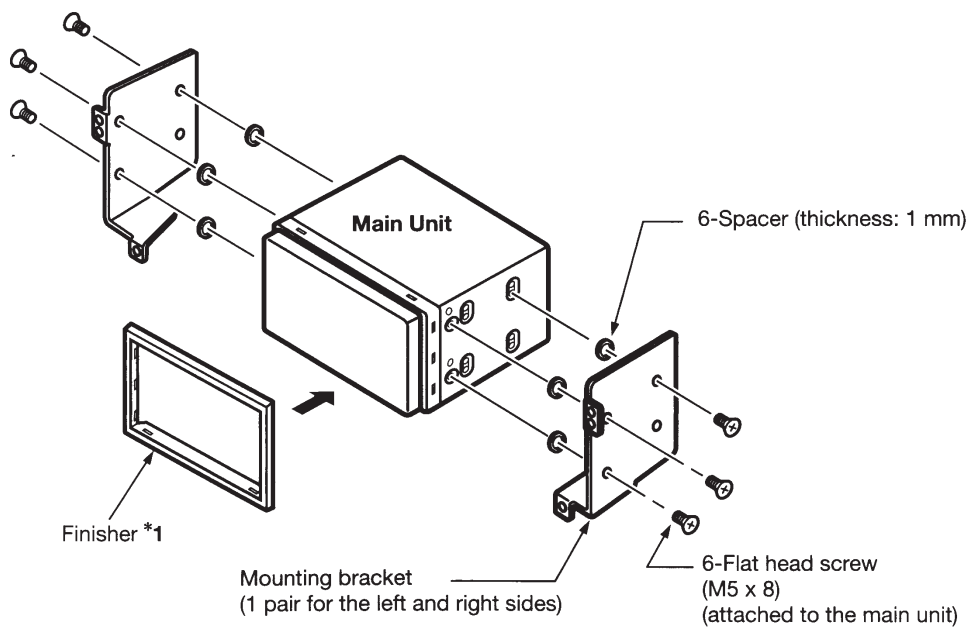

*1 Position the face panel with its wide edge at the bottom. Fit the edge into the groove of the main unit.

❑ Installing the Main Unit in a TOYOTA Vehicle

Install by using parts attached to the vehicle. (Screws marked ★ are attached to the vehicle.)


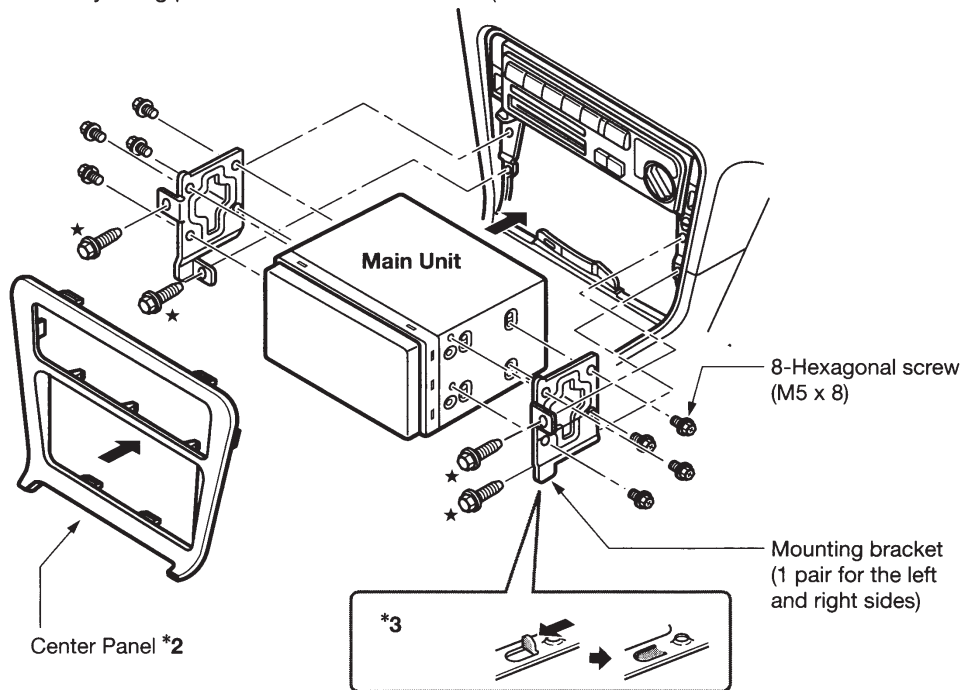


Figure 4


*2 Some panel openings are too small for the unit depending on the vehicle type and model. In such a case, trim the upper and lower sides of the panel frame by about 0.5 to 1.5 mm so the unit can be inserted smoothly.

*3 If a hook on the installation bracket interferes with the unit, bend and flatten it with a nipper or similar tool.


Typical Mounting Brackets

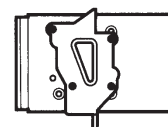

Example 1

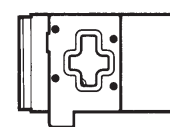

Example 2

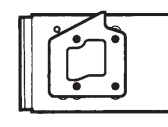

Example 3

Affix the screws to the ● marks.

❑ Vehicles other than NISSAN and TOYOTA

In some cases the center panel may require modification. (Trimming, filing, etc.)

6. REMOVING THE MAIN UNIT

When the main unit is to be removed, disassemble it in the reverse of the order in "INSTALLING THE MAIN UNIT". → P.12

7. CAUTIONS ON WIRING

- Be sure to turn the power off before wiring.
Be particularly careful where you route the wires.
- Keep them well away from the engine, and exhaust pipe, etc. Heat may damage the wires.
- If the fuse should blow, check to see if the wiring is correct.
If a fuse is blown, replace it with a new one of the same specification as the original.
- To replace the fuse, remove the old fuse of the power supply cable and insert the new one. (Figure 5)

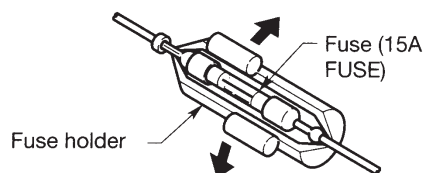


Figure 5

- There are various types of fuse holder. Do not let the battery side touch other metal parts.

⚠ CAUTION

- After connecting the HDMI and USB cables to the unit, use a cable tie to tie them down. (Figure 6)

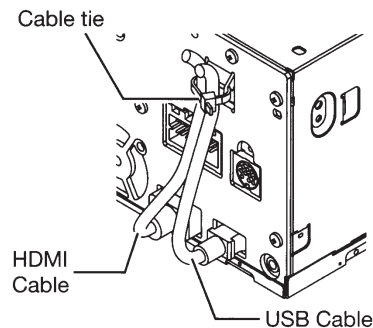



Figure 6

8. INSTALLING THE GPS ANTENNA (NX604 ONLY)




- Do not install the GPS antenna in a place where it may interfere with the operation of the airbag or hinder the driver's visual range.
- Do not use the navigation system with the GPS antenna cable cut off. The power line in the cable may be short-circuited.

- The supplied GPS antenna is for installation inside the vehicle. Do not install it outside the vehicle.
- Install the GPS antenna more than 19.7in (50 cm) away from the main unit, other audio devices such as CD player, and a radar detector. If it is installed near these devices, GPS reception may be impaired.
- To improve the GPS signal reception, install the GPS antenna horizontally on a flat plane.
- Do not wax or paint the cover of the GPS antenna. This may reduce the performance of the GPS antenna.
- Install the GPS antenna at least 3.9in (10 cm) away from the windshield.
- Wipe off the dirt of the mounting surface before installing the GPS antenna.
- Stick the double-sided tape to the bottom face of the GPS antenna.

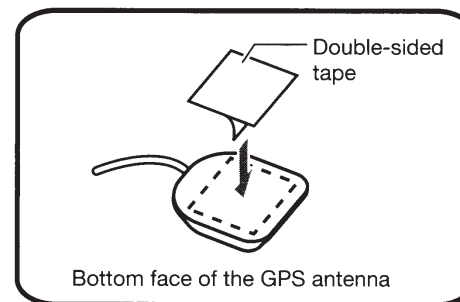



- Mount the GPS antenna.
Stick it surely on a flat plane of the passenger-side dashboard where GPS signal interruption is minimized.
- Wire the GPS antenna cable.
Fasten the cable using the Cable holders.

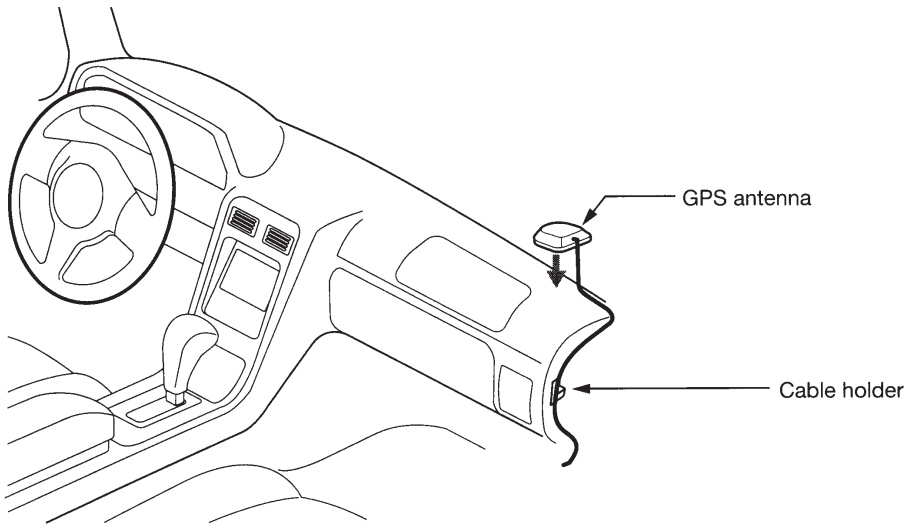

(Shows an example in case of the left-hand traffic.)

9. WIRE CONNECTION

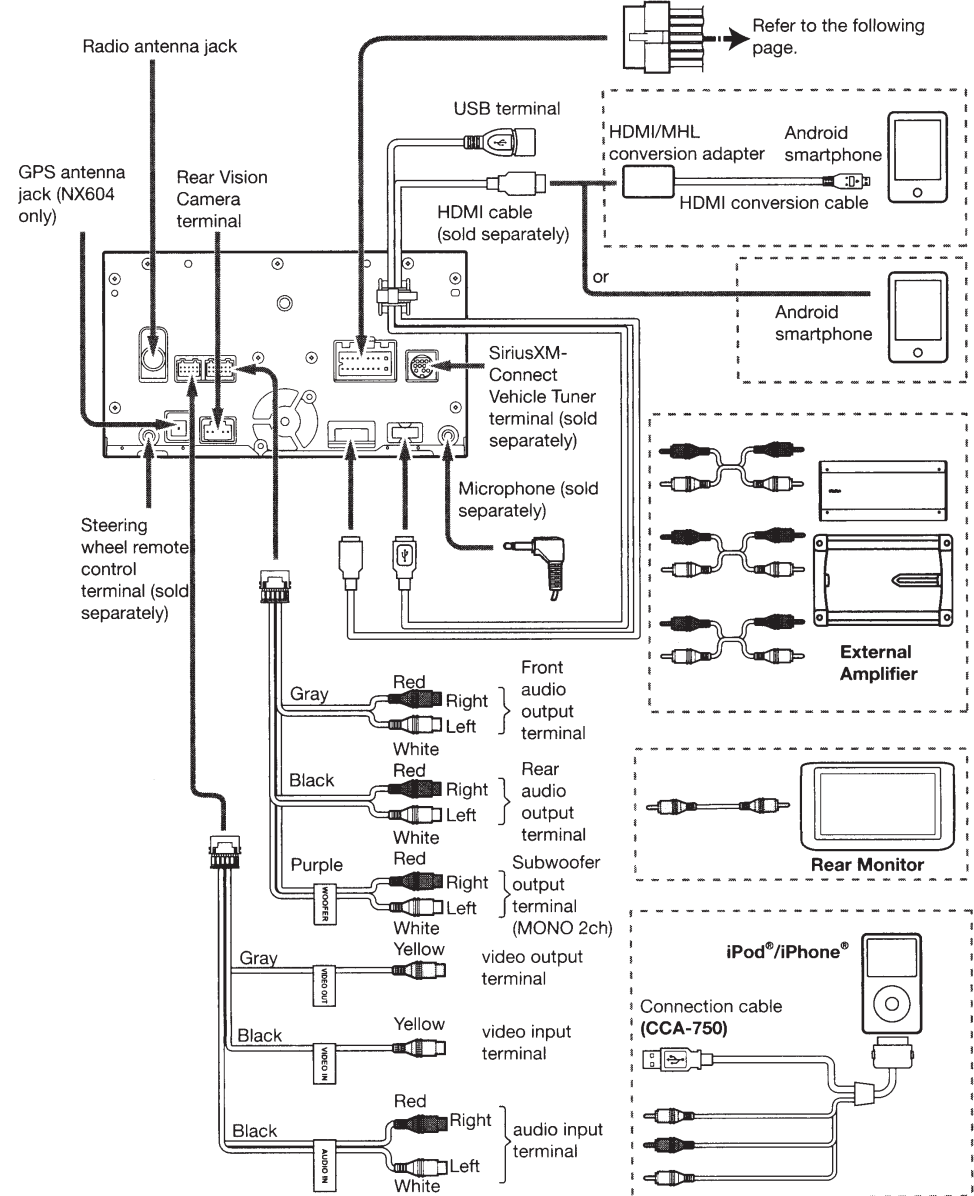

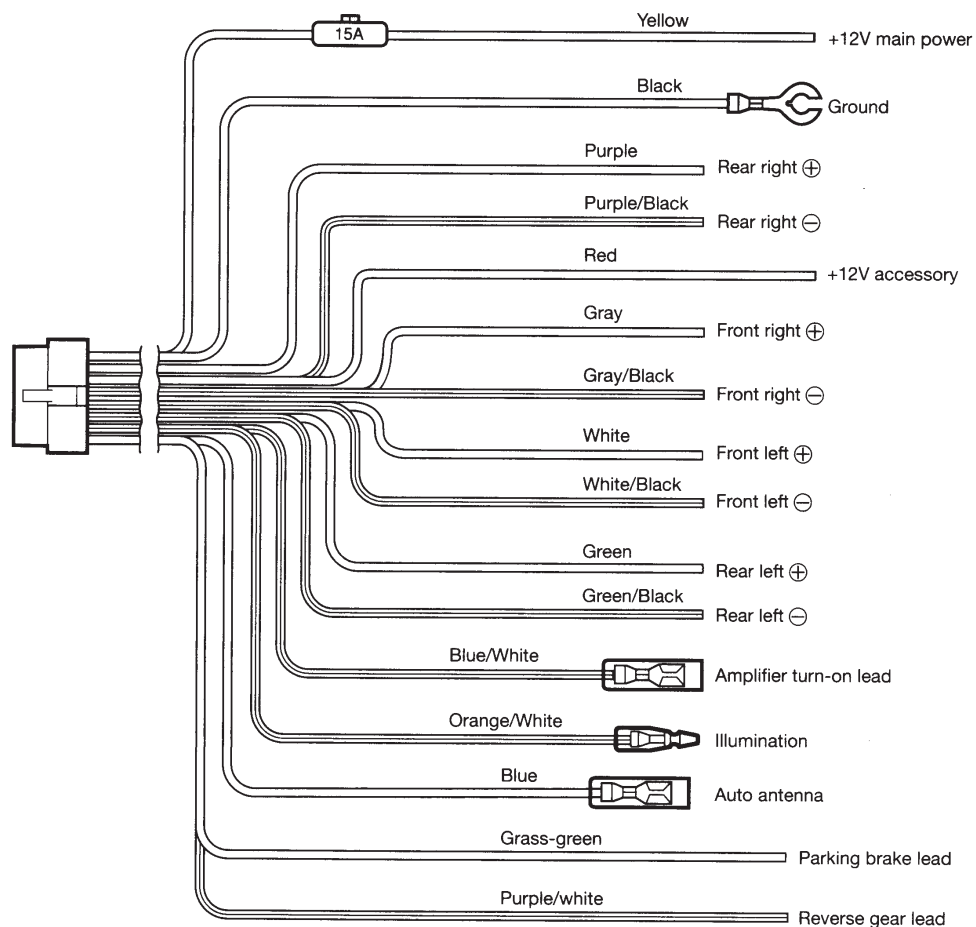


See next page for how to connect the parking brake lead.

Connecting the parking brake lead


Connect the lead to parking brake lamp ground in the meter panel.

- Connecting the parking brake lead to lamp ground allows you to watch video images when the parking brake is engaged.
- When the parking brake lead is not connected, the monitor will not display video images.
- If “**Audio Only**” appears on the screen just after turning on the ACC power of the car, release the parking brake while confirming safety, and then engage the parking brake again.

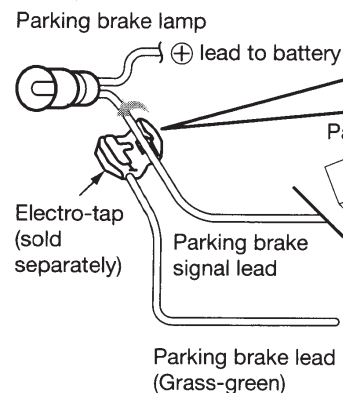

● How to attach the electro-tap

1. Place the Parking brake lead at the stopper, and fold it back in the direction of the arrow.
2. Pass the Parking brake signal lead through, and fold it back in the direction of the arrow.

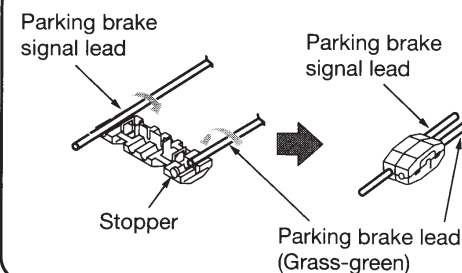

■ Connecting the Accessories

Connection to the Rear Vision Camera for vehicle

The Rear Vision Camera for vehicle can be connected to optional Rear Vision Camera input cable (CCA-644) with RCA pin cable. For detailed information, refer to the instruction sheet or manual for the Rear Vision Camera.

- Be sure to connect the reverse gear lead to the vehicle's relevant terminal.
- Connect the Rear Vision Camera to the RCA pin cable; if not, the screen turns black while the gearshift lever is in the reverse gear position.

SiriusXM-Connect Vehicle Tuner

Connect this tuner to SiriusXM-Connect Vehicle Tuner terminal.

For more information on how to install the SiriusXM Connect Vehicle tuner, consult the installation guide included with the tuner.



280-9286-00

Clarion Co., Ltd.

All Rights Reserved. Copyright © 2014: Clarion Co., Ltd.
Printed in Japan / Imprimé au Japon / Impreso en Japón

QY-1110U/QZ-3110U

2014/4



Owner's manual

NX604
FX503



Smart Access



Radio®



DVD MULTIMEDIA STATION WITH BUILT-IN NAVIGATION & 6.2-INCH TOUCH PANEL CONTROL
MULTIMEDIA STATION & 6.2-INCH TOUCH PANEL CONTROL

CLARION PRODUCT REGISTRATION INFORMATION

For USA and Canada only
www.clarion.com

Dear Customer:

Congratulations on your purchase of a Clarion mobile electronic product. We are confident that you'll enjoy your Clarion experience.

There are many benefits to registering your product. We invite you to visit our website at www.clarion.com to register your Clarion product.

We have made product registration simple with our easy to use website. The registration form is short and easy to complete. Once you're registered, we can keep you informed of important product information.

Register at www.clarion.com - it's easy to keep your Clarion product up to date.

INFORMATIONS DE L'ENREGISTREMENT DE PRODUITS CLARION

Pour les États Unis et le Canada seulement
www.clarion.com

Cher client:

Nous vous remercions d'avoir acheté ce produit électronique mobile Clarion. Nous sommes confiants que vous apprécierez votre expérience Clarion.

Il y a beaucoup d'avantage à enregistrer votre produits. Nous vous invitons à visiter notre site Web www.clarion.com pour enregistrer votre produit Clarion.

Nous avons facilité la tâche d'enregistrement de produit simple et facile grâce à notre site Web. Le formulaire d'enregistrement est court et facile à compléter. Lorsque vous êtes enregistrer, nous pouvons vous tenir informé des informations important de produits.

Enregistrer à www.clarion.com - c'est facile de mettre à jour votre produit Clarion.

INFORMACIÓN DEL REGISTRO DE PRODUCTO DE CLARION

Para USA y Canada nomas
www.clarion.com

Querido Cliente:

Felicitaciones por su compra de producto electrónico móvil de Clarion. Estamos seguros que usted gozará de su experiencia con el producto de Clarion.

Hay muchas ventajas al registrar su producto. Le invitamos a que visite nuestro sitio en internet www.clarion.com para registrar su producto de Clarion.

Hemos hecho el registro de producto fácil en nuestro sitio. La forma de registro es corta y fácil de completar. Una vez que lo registre, podremos proporcionarle la información de su producto.

Regístrese en www.clarion.com - es fácil mantener su producto de Clarion actualizado.

Thank you for purchasing the Clarion NX604 or FX503.

- Please read this owner's manual thoroughly before operating this equipment.
- After reading this manual, be sure to keep it on hand for future reference.
- Check the contents of the enclosed warranty card and keep it carefully with this manual.
- The provided disc (CD-ROM manual) cannot be played back on this unit.

In particular, read the descriptions in "To Ensure Safe Use." This describes cautions to ensure safe use of the unit without inflicting harm or damage on yourself or others. → P.3

- The content of this manual may differ in part with that of the actual product due to modifications, etc. to the specifications.
- The content of this manual may be changed in part without notice.

When transferring or reselling the unit or disposing of it, delete (initialize) all data saved on it to protect your personal information and copyright protection.

Meanings of Symbols Used in This Manual

WARNING

This indicates the possibility that failure to follow this instruction might lead to death or serious injury.

CAUTION

This explains things that may cause injury if instructions are not followed.

Attention

Though this does not fall under the category of "WARNING" or "CAUTION", this indicates that there is the danger of money or time being lost.

Preparations

This explains what must be done beforehand to operate the product.

Notice

This explains limitations related to operations.

MEMO:

This explains supplementary information for mastering use of the unit.

Hard buttons and touch keys

The operation descriptions in this manual, hard buttons on the main unit are indicated by dotted frames as the example shown below.


Example: **MENU**

The unit uses a touch panel system that you can operate simply by touching the screen with your fingertip.


In this manual, operations performed by touching keys on screen are indicated by the grayed out keys as the example shown below.

Example: **Tuner**

NX604

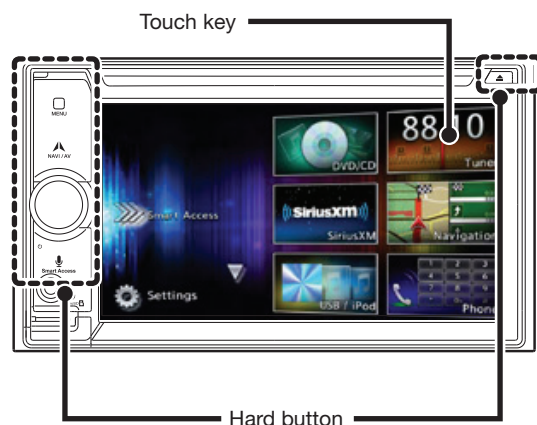

FX503

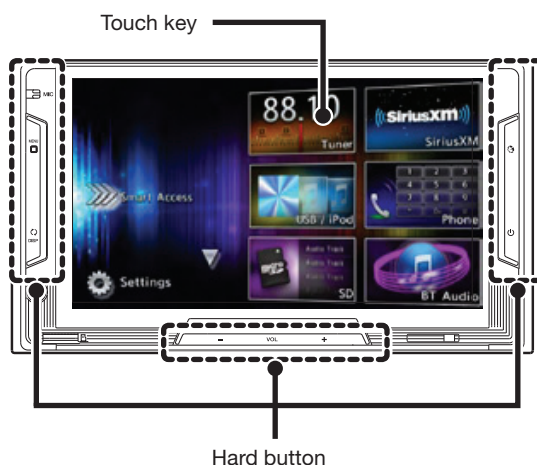

Contents

To Ensure Safe Use	3
Symbols relating to safety	3
WARNING.....	3
CAUTION	4
Request and Notice	4
Before Starting Operations	5
Features available on the unit	5
Expanding Systems	5
PRECAUTIONS	6
Operation Panel/Generalities	6
Names and functions of parts	7
Basic method of use	9
Turning the power on	9
How to use menus	9
Using the shortcut menu	9
How to enter text	9
Operating lists	9
Moving between pages in a list	9
Using the index to select a list	9
Adjusting numerical values	10
Inserting and removing discs (NX604 only)	10
How to insert discs.....	10
How to remove discs.....	10
Inserting and removing the microSD card (NX604)	10
How to insert the microSD card	10
How to remove the microSD card	10
Inserting and removing the microSD card (FX503).....	10
How to insert the microSD card	10
How to remove the microSD card	10
Adjusting the audio volume	11
Switching the display screen (NX604 only)	11
Switching to the audio screen	11
Switching to the map screen	11
Displaying the AV control bar (NX604 only)	11
Turning off the screen.....	11
Listening to the radio	11
Setting the unit to receive HD Radio broadcasts (NX604 only)	11
Receiving radio broadcasts	12
Switching between AM and FM radio.....	12
Automatically selecting a station	12
Manually selecting a station	12
Selecting stations from the list.....	12
Receiving multicast channels (NX604 only)	12
Using the radio preset channel list ...	12
What is a “preset channel”?	12
Using reception bands	12
Automatically registering to lists (auto store)	13
Manually registering to lists	13
Using bookmarks (NX604 only)	13
Registering a bookmark	13
Selecting a bookmark	13
Deleting a bookmark	13
iTunes Tagging (NX604 only).....	14
Tagging music	14
Downloading tags to your iPod	14
Listening to SiriusXM Satellite Radio ...	14
Displaying the SiriusXM Radio ID.....	14
Receiving SiriusXM Satellite Radio ...	14
Selecting channels	15
Selecting channels from preset channels ...	15
Selecting from the category list	15
Selecting channels from channel lists.....	15
Entering a channel number to select it ...	15
Registering preset channels	15
Using Parental Control	15
Locking a channel	15
Changing passwords.....	16
SiriusXM Satellite Radio Advisory Messages	16



Viewing DVDs (NX604 only)	17	Playing from the folder list/track list	23	Bookmarking	30	Battery related precautions	38
Playing DVDs	17	Playing the previous/next folder	23	Making stations	30	Replacing the battery	38
Stopping play	17	Repeat/shuffle play	23	Deleting stations	31	How to use the remote control	38
Pausing.....	17	Scan play	23	Registering Bluetooth-compatible devices	31	Names and functions of remote control parts	38
Playing the previous or next chapter	17	Listening to iPod/viewing iPod video ...	24	What is "Bluetooth"?	31	Using the rear camera	39
Rewinding/fast forwarding	17	Compatible iPod models	24	Registering Bluetooth-compatible devices (pairing)	31	Image in the rear camera	39
Slow play	17	Playing iPod models	24	Switching the connected Bluetooth-compatible device	32	Displaying the image in the rear camera	39
Repeat play	17	Listening to iPod models	25	Deleting registered Bluetooth-compatible devices	32	Adjusting the image quality of the monitor (rear camera)	40
Playing from menus	18	Watching iPod video	25	Using cellphones.....	33	Displaying guidelines	40
Entering a title or chapter number to play a title or chapter	18	Rewinding/fast forwarding	25	Screen during a telephone call	33	Adjusting the guidelines.....	40
Setting DVDs	18	Playing the previous/next track/chapter... ..	25	Entering a number to make a call ...	33	Displaying the quasi bumper line	41
Switching the audio language/subtitle language/angle	18	Repeat/shuffle play	25	Making calls from the outgoing/incoming calls log	33	Adjusting the quasi bumper line	41
Adjusting image quality	18	Playing under specified conditions	26	Deleting the incoming/outgoing calls log	33	Using the rear seat monitor (NX604 only)	41
Switching the screen size	18	Setting iPod (video only)	26	Registering a phonebook	34	Video images displayable on the rear seat monitor	41
Setting the monitor size	19	Adjusting the image quality of iPod video ...	26	Making calls from the phonebook ...	34	Various settings	41
Setting priority language	19	Listening to Bluetooth audio	26	Deleting phonebook data	34	Making general settings for the unit ...	41
Setting the parental level	20	To listen to Bluetooth audio	26	Receiving telephone calls	34	Setting the Shortcut Menu	42
Setting the country code	20	Playing Bluetooth audio.....	27	Setting the call volume	34	Setting the illumination display color on the control panel (NX604 only) ...	42
Listening to music on CDs or discs (MP3/WMA) (NX604 only)	20	Playing Bluetooth Audio	27	Using Smart Access	35	This sets the desired illumination color. ...	42
Playing discs	20	Rewinding/fast forwarding	27	What is Smartphone linking?	35	Setting the password for antitheft activation.....	42
Playing CDs.....	21	Playing the previous/next track	27	Linking-compatible applications	35	Adjusting Bluetooth settings.....	43
Playing MP3/WMA discs	21	Playing from the track list	27	Procedure up to Smartphone linking	35	Renaming devices and changing the PIN... ..	43
Rewinding/fast forwarding	21	Playing under specified conditions	27	Starting up applications.....	36	Setting sound quality	43
Playing the previous/next track	21	Repeat/shuffle play	27	Adjusting the screen size (Android smartphones only)	36	Adjusting speaker volume balance and vocal volume balance.....	43
Playing the previous/next folder (only when playing MP3/WMA)	21	Viewing connected external devices (AUX)	28	Correcting the touch position on screen (Android smartphones only)	37	Selecting and setting sound quality effects memory	43
Playing from the folder list/track list	21	Connecting external devices.....	28	Ending Smartphone linking	37	Setting preferred sound quality effects ...	43
Repeat/shuffle play	21	Listening to audio from external devices.....	28	Using Intelligent VOICE (NX604 only)... ..	37	Adjusting the Volume Smoother	44
Scan play	21	Watching video from external devices... ..	29	Using a remote control (sold separately)	37	Setting screens	44
Viewing DivX content (NX604 only) ...	22	Setting external device listening	29	Cautions during remote control operations	37	Other settings	44
Viewing DivX content	22	Compensating for volume differences ...	29			Troubleshooting	45
Playing DivX content	22	Adjusting image quality	29				
Listening to microSD card/USB memory files	22	Switching the screen size	29				
Playing microSD card/USB memory... ..	22	Listening to Pandora internet radio ...	30				
Playing microSD card or USB memory ...	22	How to listen to Pandora internet radio ...	30				
Rewinding/fast forwarding	23	Playing stations	30				
Playing the previous/next track	23	Pausing play	30				
		Skipping the track being played	30				
		Rating the track currently being played... ..	30				

Navigation related (NX604 only)	45	To protect your privacy... ..	56
Audio related	45	To protect copyright... ..	56
Smartphone linking.....	47	Deleting data (initializing)	56
Rear camera.....	48	Bluetooth connection method and	
Others	48	function compatibility table	56
Discs that can be used on the unit		INSTALLATION AND WIRE	
(NX604 only).....	49	CONNECTION MANUAL	57
CDs that can be played	49	1. SAFETY PRECAUTIONS	57
CDs that cannot be played	49	Symbol Identification	57
DVDs that can be played	49	Before Use	57
Note on region numbers of DVD video discs		Installation Precautions	57
.....	49	Installation Notes	57
DVD Video Features	49	Connection Notes	57
DVDs that cannot be played	50	2. PACKAGE CONTENTS	58
microSD cards/USB memory that can		3. GENERAL CAUTIONS	58
be used on the unit	50	4. CAUTIONS ON INSTALLATION	58
microSD card handling precautions ...	50	5. INSTALLING THE MAIN UNIT	58
Audio files that can be played on the		Installing the Main Unit in a NISSAN Vehicle	
unit.....	50	59
MP3 files	51	Installing the Main Unit in a TOYOTA Vehicle	
WMA files	51	59
Folder structure of discs	51	Vehicles other than NISSAN and TOYOTA ...	60
Folder structure of microSD card/USB		6. REMOVING THE MAIN UNIT	60
memory	52	7. CAUTIONS ON WIRING	60
Notes for playing back MP3 and WMA		8. INSTALLING THE GPS ANTENNA (NX604	
on the unit	52	ONLY)	60
Video files that can be played on the		9. WIRE CONNECTION	61
unit (NX604 only).....	52	Connecting the Accessories.....	62
Country code	53	Index	63
Daily care and handling	53		
Daily care and handling of main unit...	53		
Warranty and customer support	53		
Specifications	53		
Trademarks	54		
About Total Traffic Network (NX604 only)			
.....	55		
Disposal, transfer and resale of this			
product.....	56		
Deletion of data from the unit	56		

To Ensure Safe Use

Symbols relating to safety

The “possibility of the driver or other people being injured” is indicated as follows, and the following describes these dangers and how to avoid them. Be sure to read these important warnings.

 WARNING	This indicates the possibility that failure to follow this instruction might lead to death or serious injury.
 CAUTION	This explains things that may cause injury if instructions are not followed.

WARNING

- ❑ **Do not use the product's guidance information for finding emergency facilities. (NX604 only)**

This product does not contain information on all hospitals, fire stations, police stations, etc. Also, this information may differ from actual information, so there is the possibility that you might not reach these facilities within the expected time.

- ❑ **Always disconnect the negative terminal of the battery before doing any work.**

Failure to do so might cause electric shock, injury or device malfunction.

- ❑ **The driver must not operate or stare at the unit while driving.**

The driver may be distracted and cause a traffic accident. Always stop in a safe location.

- ❑ **Follow all applicable traffic regulations. (NX604 only)**

Information such as maps, one-way traffic signs, traffic regulation marks and signs, etc., or route advice (recommended routes and voice guidance), etc. displayed on navigation screens may differ from actual road conditions. Be sure to follow actual road signs and traffic conditions when driving. Failure to do so might cause traffic accidents.

- ❑ **Do not disassemble or modify the product.**

Do not open the case to oil parts or cut through the insulation on wires to supply power to other devices. Doing so might cause accidents, fire, electric shock, or malfunction.

- ❑ **Ask a professional engineer to replace any fuses and use only fuses with the rated capacity.**

Use of fuses exceeding the rated capacity might cause fire or malfunctions.

❑ **Do not use the product if it has malfunctioned or is not operating properly.**

Stop using the product immediately if there is no image or audio, if any foreign objects get inside it, if it gets wet, if it emits smoke, strange noises, or strange smells. Failure to do so might cause fire or electric shock.

❑ **Do not use benzene or paint thinner, car cleaner, polish spray, or similar fluids.**

Use of these fluids inside the vehicle will, for example, cause inflammable gas to ignite and cause fire.

Also, use of these for daily care of this product will deform material or cause paint to peel off.

❑ **Do not leave microSD memory cards within the reach of children.**

They might swallow them by mistake. Seek medical treatment immediately if anyone swallows a microSD memory card.



CAUTION

❑ **Ask a professional engineer to install, remove, change installation or wire the unit.**

Installation and wiring must be done correctly. If it is installed or wired incorrectly, it may interfere with driving and cause an accident or malfunction.

❑ **Do not use the main unit except in a vehicle.**

Doing so may cause injury or electric shock.

❑ **Set the volume during driving to a level that allows you to hear sounds outside the vehicle.**

Driving without being able to hear sounds outside the vehicle might cause an accident.

❑ **Do not place objects on the control panel or subject it to strong impact.**

Doing so might cause the control panel or LCD to malfunction, break or be deformed.

- Do not place objects on it.
- Do not press strongly with your hand.
- Do not hit it with hard objects such as the tip of a pen, pin or fingernails.
- Do not splash it with water, juice or other liquids.

Request and Notice

LCD display

- Small black spots or bright spots may appear on the screen, this is a phenomenon unique to LCD monitors, and is not a malfunction.
- Do not stick protective sheets, etc. on the touch panel. This might cause malfunctions or reduce response time. When the LCD panel becomes dirty, refer to "Daily care and handling of main unit." → P.53

Operating environment

- To prevent the battery from going flat, operate the unit with the engine running.
- The unit has a high-speed CPU, which means that the case may get hot. Pay particular attention to handling the unit during use or immediately after turning the engine off.
- On vehicles with a keyless entry system, the unit may stop operating if you bring the key close to it. Also, skipping might occur if you bring the key close to the unit or Bluetooth Audio device. If this happens, move the key away.
- There may be static or the screen may be distorted if electrical components that generate strong electrical noise are used near the unit. If this happens, either move the electrical component considered the cause of the electrical noise away from the unit or stop using it.

Routes

- When the position of a facility displayed from the search function is set as it is as a destination, you may be guided to an inappropriate location such as the back of the facility or on to an expressway. Please understand this and check the route near the destination.
- Names may be difficult to understand, depending on the audio data.
- When a route cannot be calculated, move the destination to a main road nearby and try calculating again. Routes sometimes cannot be calculated depending on conditions such as distance to the destination.

Cautions about the Warranty within the warranty period

- Contact your retailer about using the warranty for repairs.
- You may need to return accessories when you use the warranty for repairs.
- Data that could not be saved due to the unit malfunctioning and data that has disappeared is not covered by the Warranty.
- The Warranty is not applied in the following cases even within the warranty period:
 - Careless handling (inappropriate operations not described in the User's Manual, dropping, impact, splashing with water, etc.)
 - Malfunction and damage caused by improper repair, modification and disassembly
 - Malfunction and damage caused by fire, salt damage, gas damage, earthquakes, storm and flood damage, lightning strikes, abnormal voltage, and other natural disasters
 - Scratching, discoloring and dirt resulting from use or damages from improper storage

Copyright

- Software and data whose copyright is owned by third parties licensed to Clarion in accordance with a licensing agreement is recorded on the unit. Excluding instances that are clearly indicated as being permitted in descriptions in the User's Manual, removing, reproducing, or modifying the software in the unit (including updates and data) is strictly forbidden by law.

Before Starting Operations

The following describes information you should know before you start using the unit.

Features available on the unit




NX604

- Cloud-based Speech Recognition and Destination Search
- Latest Map Guarantee
- Advanced Sound Tuning and 4V/6ch RCA Output

FX503

- Smartphone Connectivity
- Built-in Bluetooth® Hands-free (HFP) and Audio Streaming (A2DP & AVRCP)
- Advanced Sound Tuning and 4V/6ch RCA Output

Expanding Systems

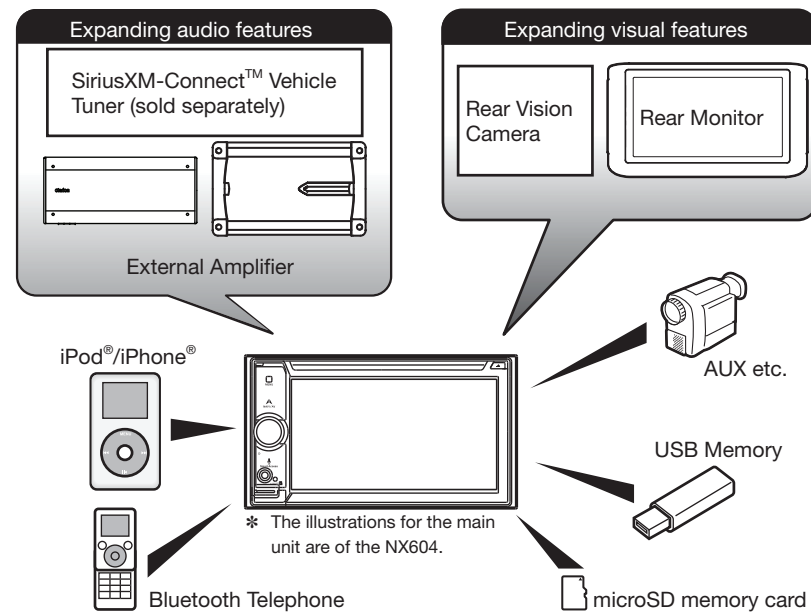

* The items listed outside of the frames are the commercial products generally sold.

PRECAUTIONS

⚠ WARNING

- **For your safety, the driver should not watch the DVD video/movie data or operate the controls while driving. Please note that watching and operating the DVD video/movie data while driving are prohibited by law in some countries. Also, while driving, keep the volume to a level at which external sounds can be heard.**


1. When the inside of the car is very cold and the player is used soon after switching on the heater, moisture may form on the disc (DVD/CD) or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc (DVD/CD), wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.
2. Driving on extremely bumpy roads which cause severe vibration may cause the sound to skip.
3. This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts.
4. Insert and remove the microSD card after turning off the unit, because the microSD card might get damage.

5. This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body .

6. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

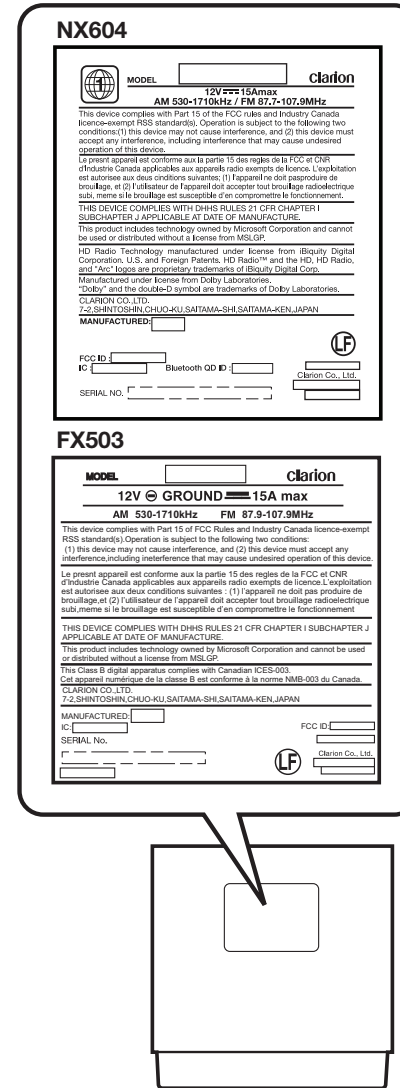

❑ Operation Panel/Generalities


For a longer service life, be sure to read the following cautions.

- Do not allow any liquids on the set from drinks, umbrellas, etc. Doing so may damage the internal circuitry.
- Do not disassemble or modify the set in any way. Doing so may result in damage. Also, subjecting the operation panel to shocks may result in breakage, deformation, or other damage.
- Do not let cigarettes burn the display. Doing so may damage or deform the cabinet.
- If a problem should occur, have the set inspected at your store of purchase.
- The optional remote control unit may not work if the remote control sensor is exposed to direct sunlight.
- In extremely cold weather, the display movement may slow down and the display may darken, but this is not a malfunction. The display will work normally when the temperature increases.
- Small black and shiny spots inside the operation panel are normal for LCD products.
- The touchkeys on the display operate when slightly touched. Do not press the touchkey screen with much force.
- Do not push the case surrounding the touchkey panel with much force. This may cause malfunctioning of the touchkeys.

Names and functions of parts

The following describes the button names on the operation panel of the unit and their functions.

NX604

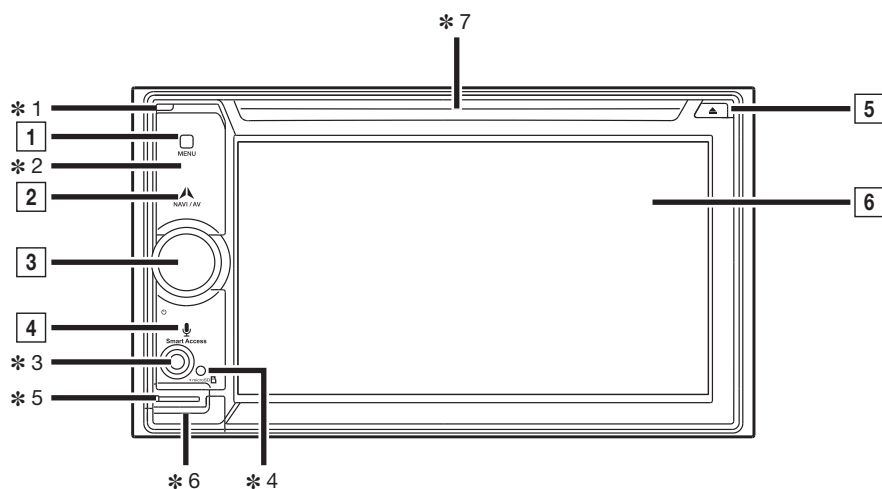


Insert and remove the microSD card after turning off the unit, because the microSD card might get damage.

- * 1 This is the built-in microphone. This is used as the microphone for the hands free function when the unit is connected to a Bluetooth compatible cellphone by a wireless connection.
- * 2 This is the remote control sensor. This receives the signal from the remote control (sold separately).
- * 3 This is the AUX terminal. Audio and video from external devices connected to this terminal can be played when the audio mode is switched to AUX. → P.28
- * 4 This is the Antitheft Indicator. This light blinks when the Antitheft Activation setting is set to "ON" to indicate that the antitheft function is activated. → P.42
- * 5 This is where the microSD card is inserted to enjoy data in microSD cards. → P.10
- * 6 The map microSD is housed in here. To update the map, open this cover, and remove and insert the card.
Do not open the cover for other operations.
- * 7 This is where DVD video, CD, MP3, WMA, and DivX discs are inserted. → P.10

This document uses the following inline graphics and conventions to indicate operations using the buttons on the operation panel.

Number	Inline graphic	Description of operation	
1	MENU	Short press	This displays the main menu screen.
2	NAVI/AV	Short press	This switches between the current position map screen and currently selected audio screen.
3	—	Turn	This is the rotary volume knob. Use this to adjust the volume of the audio-visual function or the route audio guidance, etc.
		Short press	This turns off the screen and stops audio output.
4	Smart Access	Short press	This starts up the voice recognition application. → P.37
		Long press	This starts up Smart Access.
5		Short press	This ejects the disc inserted in the unit.
6	—	Touch	This is the monitor and touch panel. This functions as a touch panel by touching the screen when it is displayed.

FX503

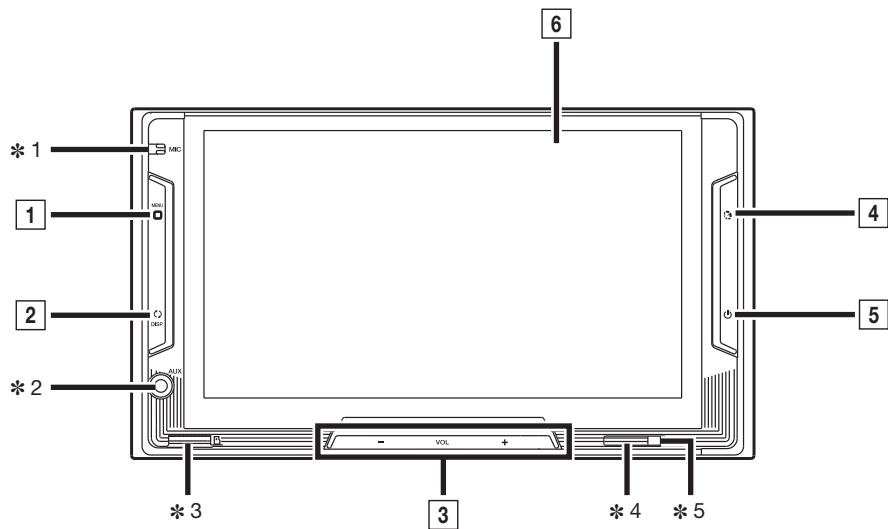

Insert and remove the microSD card after turning off the unit, because the microSD card might get damage.

- * 1 This is the built-in microphone. This is used as the microphone for the hands free function when the unit is connected to a Bluetooth compatible cellphone by a wireless connection.
- * 2 This is the AUX terminal. Audio and video from external devices connected to this terminal can be played when the audio mode is switched to AUX. → P.28
- * 3 This is where the microSD card is inserted to enjoy data in microSD cards. → P.10
- * 4 This is the remote control sensor. This receives the signal from the remote control (sold separately).
- * 5 This is the Antitheft Indicator. This light blinks when the Antitheft Activation setting is set to “ON” to indicate that the antitheft function is activated. → P.42

This document uses the following inline graphics and conventions to indicate operations using the buttons on the operation panel.

Number	Inline graphic	Description of operation	
1	MENU	Short press	This displays the main menu screen.
2	DISP	Short press	This switches to the audio screen.
3	VOL+ VOL-	Short press	Use this to adjust the volume of the audio-visual function.
4	Smart Access	Short press	This starts up Smart Access.
5	POWER	Short press	This turns off the screen and stops audio output.
6	—	Touch	This is the monitor and touch panel. This functions as a touch panel by touching the screen when it is displayed.

Basic method of use

Turning the power on

1 Turn the engine key to the “ACC” or “ON” position.

The unit turns on.

After the opening screen is displayed, touch **OK**. The current position map screen or the audio screen is displayed.

When the engine key is turned to the “OFF” position, the unit is turned off.

MEMO:


- When the Antitheft Activation function is set, the password entry screen is displayed. → P.42

How to use menus

The unit has a main menu for using all functions and a shortcut menu that groups together frequently used functions. Use of the shortcut menu allows you to quickly access frequently used functions.

1 **MENU**

The main menu screen is displayed.

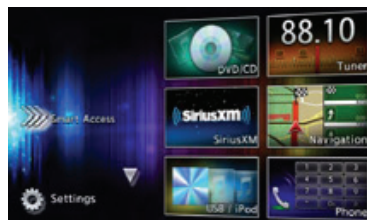

Touching the main menu screen and quickly sliding your finger up or down then removing it, moves you to the previous or next page. This operation is called flicking.

Screens can be changed by slowly sliding your finger across the screen.



Touch these to move to the previous or next menu screen.

Smart Access :

This displays the Smart Access mode. → P.35

DVD/CD :

This displays the DVD, CD or DivX modes. (NX604 only)
→ P.17, P.20, P.22

Tuner :

This displays the radio mode. → P.11

SiriusXM :

This displays the SiriusXM Satellite Radio mode. → P.14

Navigation :

This displays the navigation mode. (NX604 only) → “Owner’s Manual - Navigation”

USB / iPod :

This displays the USB audio mode or iPod audio/iPod video mode. → P.22, P.24

Phone :

This displays the telephone mode. → P.33

SD :

This displays the SD audio mode. → P.22

BT Audio :

This displays the Bluetooth audio mode. → P.26

Pandora Radio :

This displays the Pandora Radio mode. → P.30

AUX1 :

This displays the AUX1 mode. → P.28

AUX2 :

This displays the AUX2 mode. → P.28



(Settings) :

This displays the various setting screens. → P.41

Using the shortcut menu

You can open a shortcut menu by touching **>** in the top screen of a function selected from the main menu screen.

Up to five frequently used functions can be registered to the shortcut menu. → P.42

Touching **<** returns the screen to the previous screen.

How to enter text

In the text entry screen, letters and numbers can be entered by touching the keypad.

This deletes one character. Continuously touching this deletes all characters.



This switches between uppercase and lowercase.

This switches to the alphabet/number entry mode.

This applies the character string you entered.

Operating lists

When a list contains many items, the list is displayed over two or more pages.

☐ Moving between pages in a list

1 **<>** or **<>**



You can also scroll through pages in a list by flicking.

☐ Using the index to select a list



When alphabet keys are displayed on the left side of the screen, items beginning with the letter of the alphabet that was touched can be displayed as a list. The following example explains how to select items beginning with the letter “B” from the list.

1 **B**





Items beginning with “B” are displayed.

2 Select the relevant item from the list.

If all indexes are not displayed, either touch  or  or flick to move to the next page.

□ Adjusting numerical values

When  and  are displayed, numerical values, volume, etc. can be adjusted.

Inserting and removing discs (NX604 only)


To enjoy data in CD, MP3/WMA or DVD discs, the disc must be loaded into the unit.

— Attention —

- Do not leave discs protruding from the loading slot. Either insert them completely or remove them.
- Do not touch the recording surface (shiny side) of the disc.
- Do not insert two discs at the same time.

□ How to insert discs

- 1 Insert the disc into the loading slot with its label surface face up.

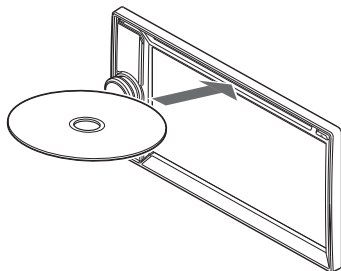


The disc is drawn in. After a while, the disc starts playing.

When the disc is inserted a short way, it is automatically drawn in. If the disc is not drawn in, this means that a disc is already loaded.

Do not exert unnecessary force when inserting discs. First remove the disc that is already loaded, and then load the new disc.

□ How to remove discs

- 1 

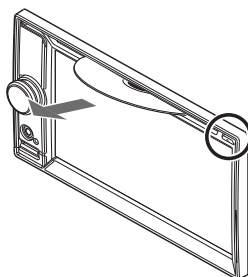

The disc is ejected.

- 2 Remove the disc.

MEMO:

- If a disc is not removed immediately, after a while it is automatically drawn in again.

Inserting and removing the microSD card (NX604)


To enjoy MP3/WMA data in microSD cards, the microSD card must be loaded into the unit.

— Attention —

- Insert and remove the microSD card after turning off the unit, because the microSD card might get damage.
- The map microSD card is already inserted into the microSD card loading slot under the slot cover. If the map microSD card is removed, the unit does not function. Do not remove or insert the map microSD card except to update map information.
- Do not touch the terminal surface of microSD cards.

□ How to insert the microSD card

- 1 Insert the microSD card into the loading slot with its label surface face up.

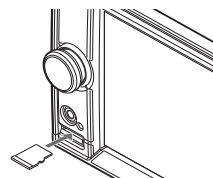

Firmly insert the microSD card as far as it can go.

□ How to remove the microSD card

- 1 Grip the microSD card with your fingers and pull it out.

To remove the microSD card, grip it with your fingers and pull it out.


Inserting and removing the microSD card (FX503)

— Attention —

- Do not touch the terminal surface of microSD cards.

□ How to insert the microSD card

- 1 Insert the microSD card into the loading slot with its label surface face down.

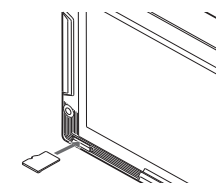

Firmly insert the microSD card as far as it can go until you hear it click in place.

□ How to remove the microSD card

- 1 Push in the microSD card. The microSD card springs out slightly.
- 2 Remove the microSD card. To remove the microSD card, grip it with your fingers and pull it out. The microSD card might spring out.

Adjusting the audio volume

- 1 Turn the rotary volume knob (NX604) or **VOL+** and **VOL-** (FX503).

MEMO:

- **VOL+** or **VOL-** changes the volume continuously. (FX503 only)

Switching the display screen (NX604 only)

The audio screen and map screen are switched by the following operation.

Switching to the audio screen

- 1 In the map screen **NAVI AV**
The audio screen of the selected source is displayed.


Switching to the map screen

- 1 In the audio screen **NAVI AV**
The map screen is displayed.

Displaying the AV control bar (NX604 only)

The AV control bar for quickly accessing audio-visual functions can be displayed. Display content differs according to the currently selected audio-visual type.

1 AV control bar display key

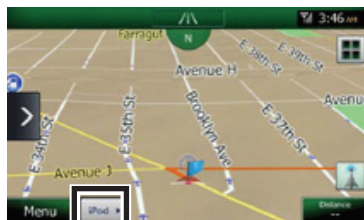

The AV control bar of the currently selected audio-visual is displayed. To hide the AV control bar, touch the bar display key.

Turning off the screen

Notice

- While the screen is off, the voice guidance of the navigation does not work. (NX604 only)

1 Press the rotary volume knob (NX604) or **POWER** (FX503).

The screen turns off.
Press the rotary volume knob (NX604) or **POWER** (FX503) again to display the screen as before.
When the audio screen is previously displayed, the audio main menu screen of the selected source is displayed.

MEMO:

- The screen temporarily turns on when you receive a call or use the camera.

Listening to the radio

You can enjoy both AM and FM radio on the unit.

You can also listen to CD-quality digital HD Radio™ broadcasts from your local AM and FM radio stations. (NX604 only)

You can receive HD Radio digital broadcasts automatically by tuning to an HD Radio station.

Notice

- You can enjoy HD Radio digital broadcasts only if you have NX604.
- To listen to HD Radio digital broadcasts, set the "HD Radio" setting on the radio settings screen to ON.
- Not all FM or AM stations offer HD Radio digital broadcasts. You can receive both analog and digital stations with the unit.

Setting the unit to receive HD Radio broadcasts (NX604 only)

HD Radio®

This HD Radio receiver enables:

PSD

HD2/HD3

Digital Sound

iTunes® Tagging

Artist Experience

1 **MENU** ► **Tuner**



3 **ON** or **OFF** on [HD Radio].

ON:

This receives HD Radio digital broadcasts and analog broadcasts. (Default)

OFF:

This receives analog broadcasts.

Receiving radio broadcasts

Switching between AM and FM radio

- 1 **MENU** ► **Tuner**
Radio broadcasts are received.
- 2 **FM1** , **FM2** , **FM3** , **AM**
Switches to the band you touch.

Automatically selecting a station

Notice

- This operation is available only for analog stations. Digital stations are not detected.

- 1 **MENU** ► **Tuner**
- 2 **◀◀** or **▶▶**
(Long press within 1.5 seconds)
When a receivable station is detected, the station is automatically received.
If **◀◀** or **▶▶** is long pressed for at least 1.5 seconds, the frequency switches continuously while the key is touched. When you release your finger from the key, receivable broadcast stations are automatically detected and received.

Manually selecting a station

- 1 **MENU** ► **Tuner**
- 2 **◀◀** or **▶▶**
Each touch switches the frequency.

Selecting stations from the list

Select a registered station from the list.

- 1 **MENU** ► **Tuner**
- 2 **Select the desired station.**
The selected station is received.

Receiving multicast channels (NX604 only)

HD Radio broadcasts can include multiple channels on the same frequency (multicasting). When a digital FM broadcast that has multicast channels is being received, you can receive up to eight additional channels in total.

Preparations

- Set "HD Radio" on the radio settings screen to ON. → P.11


- 1 **MENU** ► **Tuner**
 - 2 **Select a multicast channel.**
- 

Using the radio preset channel list

What is a "preset channel"?

You can register (preset) the frequency of a station that can be received in the area you are driving. You can receive any desired station at the touch of a button without having to adjust the frequency. There are four preset channel lists: FM1, FM2, FM3, and AM. Up to six stations can be registered in each list. There are two ways of registering to preset channel lists, manual and automatic.

When receiving digital FM broadcasting is being received ("HD Radio" setting is set to ON)

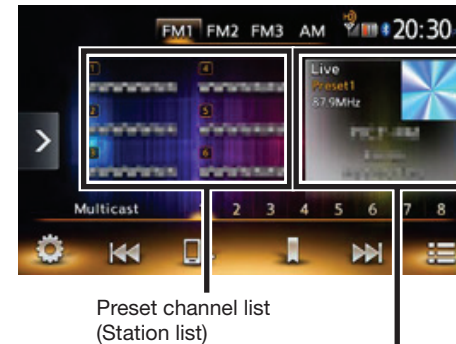

The status of the signal being received (preset channel number, frequency, name of artist and song currently playing, and images related to the song and other information) is displayed. The information differs depending on the station being received.

When receiving the analog FM broadcasting ("HD Radio" setting is set to OFF)

Touch it to display a description of the broadcast that is currently being received. (Only when FM broadcasting is being received)



The status of the signal being received (preset channel number, frequency, and name of broadcasting station) is displayed. The information differs depending on the station being received.

MEMO:

- When an RBDS channel is being received, the program information and broadcast content are displayed as text. (When an FM broadcast is being received)

Using reception bands

When the station differs according to region, reception bands can be switched and used at the touch of a button by setting preset channels in that area to each of FM1, FM2, FM3, and AM.

- 1 **MENU** ► **Tuner**
- 2 **FM1** , **FM2** , **FM3** , **AM**
The preset channel list display is switched.

❑ Automatically registering to lists (auto store)

— Notice —

- Stations cannot be selected during this operation. Wait for the operation to end.
- Auto store can be done only for analog stations. It is not available for digital stations.

- 1 **MENU** ► **Tuner**
- 2 **FM1** , **FM2** , **FM3** , **AM**
- 3
- 4 **Start** on [Auto Store].
- 5 **OK**
Receivable stations are overwritten to and registered to the current preset channel.
To cancel auto store, touch **Cancel**.

MEMO:

- When auto store is stopped midway, stations received so far are not registered.

❑ Manually registering to lists

- 1 **MENU** ► **Tuner**
- 2 **Receive the station you want to register.**
- 3 **Long press the channel to be overwritten in the preset channel list until you hear a sound.**
The station currently being received is overwritten to and registered to that channel.

Using bookmarks (NX604 only)

❑ Registering a bookmark

You can register the information for the song currently being broadcast as an HD Radio bookmark. (Up to 50 bookmarks)

Preparations

- Set "HD Radio" on the radio settings screen to ON. → P.11


- 1 **while receiving digital broadcasts.**
The information about the song being broadcast is registered as a bookmark.

— Notice —

- A bookmark for a song being broadcast can be created if one of the following items can be received.
The name of the song, artist, or album, information related to the URL, or image information

❑ Selecting a bookmark

- 1 **MENU** ► **Tuner**
- 2
The bookmark list is displayed.
- 3 **Select the items that you want to display.**
The bookmark information screen is displayed.

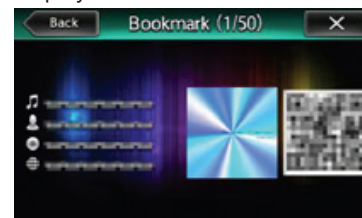

❑ Deleting a bookmark

- 1 **MENU** ► **Tuner**
- 2
The bookmark list is displayed.
- 3 **Delete Bookmark**
- 4 **Select the items that you want to delete.**
Delete All:
This deletes all bookmarks.
- 5 **OK**

Digital Sound

HD Radio broadcasting delivers CD-like digital sound quality.

PSD

Program Service Data that appears on your radio display. For example the song title and name of the Artist.

HD2/HD3

Extra FM channels adjacent to those you have always listened to are enabled. Thousands of HD2/HD3 channels are playing nationwide today.

iTunes® Tagging

Enables you to tag a song that you discover while listening to HD Radio broadcasts. The songs you tag will appear on your personal iTunes account so that you can elect to buy them.

Artist Experience

You'll see cool images on your radio like photos of artists in studios, DJs doing their shows and album cover art.*

* Not available in all markets.

iTunes Tagging (NX604 only)

iTunes tagging allows you to “Tag” songs playing on HD Radio stations for purchase later through iTunes.

The tagged song information can be transferred to your iPod when connected to the unit.

For details about compatible iPod models, refer to “Compatible iPod models”. → P.24
Your iPod might not operate correctly if the model is incompatible with the unit.

Tagging music

To tag a song, tune to an HD Radio station.

Preparations

- Set “HD Radio” on the radio settings screen to ON. → P.11

Notice

- The tagging function greatly depends on the reception of the radio station.
The name of the artist and the song that is being broadcast must be received to tag the song.

1 while receiving digital broadcasts.

This song information is saved to the unit. (Up to 50 songs)

MEMO:

- If a song is tagged while the iPod is connected to the unit, the tag information is transferred automatically to the iPod.

Downloading tags to your iPod

To download tags to your iPod, connect the iPod to the unit. All existing tags are automatically transferred to the iPod and deleted from the unit.

MEMO:

- When transferring tags to the iPod, the radio mode does not need to be selected.

Listening to SiriusXM Satellite Radio

Only SiriusXM® brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Vehicle Tuner and Subscription are required. For more information, visit www.siriusxm.com

In the USA, you can activate online or by calling SiriusXM Listener care:

- Visit www.siriusxm.com/activatenow
- Call SiriusXM Listener Care at 1-866-635-2349

For Canadian Subscriptions, please contact:

- Visit www.siriusxm.ca/activatexm
- Call XM customer Care at 1-877-438-9677

Preparations

- To subscriber to SiriusXM service, a SiriusXM Vehicle Connect Tuner is required which is sold separately.

A SiriusXM Radio ID number is also required to subscribe.

Displaying the SiriusXM Radio ID

The SiriusXM Radio ID is used, for example, for registering your membership or transactions with SiriusXM customer support.

1 **SiriusXM**

2

SiriusXM Radio ID is displayed.

The SiriusXM Radio ID can also be found by tuning to Channel 0. In addition, the Radio ID is located on the bottom of the SiriusXM Connect Vehicle Tuner.


Please note that the SiriusXM Radio ID does not include the letters I, O, S or F.

Receiving SiriusXM Satellite Radio

1 **SiriusXM**

2 or

Touching this displays the currently selected Content Info.

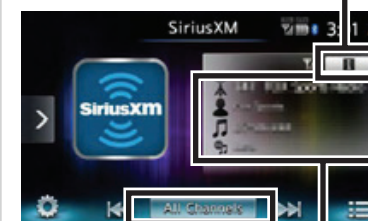

Seek Mode key

The preset number, channel number, category name, song title currently being played, and artist name are displayed.

SiriusXM Satellite Radio comes with three modes. (Default: All Channels)

Presets:

In this mode, the channels registered to the preset channels are selected.

Categories:



In this mode, the channels belonging to the category currently being received are selected.



All Channels:

In this mode, all channels currently being received are selected.

Each touch of the Seek Mode Key switches the mode in the following order:

All Channels→Presets→Categories→All Channels...

Touching  or  switches the channel in the currently selected mode.

Continuously touching  or  switches the channel while that key is held down. When you release your finger, the selected channel is received.

Notice

- Channels which parental lock is set are not included in tuning when All Channels or Categories is selected for Seek Mode.

Selecting channels

Selecting channels from preset channels





Frequently used channels can be selected and received from preset channel lists you have registered in advance.

Preparations





- To select a preset channel, the channel must first be registered. → P.15

-  
- 
- 
- Select the desired channel.





Selecting from the category list

-  
- 
- 
- Select the desired category.
- Select the desired channel.

Selecting channels from channel lists





-  
- 
- 
- Select the desired channel.

Entering a channel number to select it

-  
- 
- 
- Enter the channel number
- 

Registering preset channels

Up to 30 channels can be registered to preset channels.

-  
- Receive the channel you want to register.
- 
- 

5 Long press the channel to be overwritten in the preset channel list until you hear a sound.

The channel currently being received is overwritten to and registered to that channel.

Using Parental Control






The Parental Control feature allows you to limit access to any SiriusXM channels, including those with mature content. Channels can be locked by setting passwords for particular channels. (Default: 0000)

When a locked channel is selected, the password entry screen is displayed. The channel can be accessed and switched to by entering the correct password. From here onwards, the password does not need to be entered until the engine key is turned off.

Notice

- This operation is not possible while you are driving.

Locking a channel

-  
 - 
 -  at [Channel Lock]
 - Enter the 4-digit password

- The channel list is displayed.

5 Touch the channel you want to lock.


The password is set for the selected channel.

6 **Close**

MEMO:

- The lock setting of each channel is held in memory even if the engine key is turned off.
- The password is canceled by touching the channel again in step 5.

❑ Changing passwords

- 1 **MENU** ► **SiriusXM**
- 2 
- 3 **Set** at [Channel Lock Password]
- 4 Enter the password ► **OK**
- 5 Enter the new password ► **OK**
- 6 Enter the password again for confirmation ► **OK**
This completes changing of the password.

❑ SiriusXM Satellite Radio Advisory Messages

Message	Description
Check Tuner.	Check the SiriusXM tuner connection on the back of the unit to ensure that its correctly connected.
Check Antenna.	Ensure the SiriusXM antenna cable is connected to the SiriusXM tuner correctly. Check the SiriusXM antenna wire for breaks or sharp bends. Replace the antenna if necessary.
No Signal.	The vehicle must be outside, and the antenna must have a clear view of the southern sky.
Channel * not Subscribed. Call SiriusXM to subscribe.	This channel is not included in your SiriusXM subscription plan. Call 1.866.635.2349 or visit www.siriusxm.com/activatenow .
Channel * Not Available.	This channel is not a valid SiriusXM channel. The channel number has been entered incorrectly, or the channel was removed from the SiriusXM channel lineup.
Ch Locked. Lock Code?	The selected channel has been locked by the parental controls. A prompt to enter the unlock code will appear. → P.15
Subscription updated. Press OK to continue.	An update to your SiriusXM subscription has been received by the SiriusXM tuner. Press any button to continue.

Viewing DVDs (NX604 only)

Playing DVDs

⚠ WARNING

- If the driver wants to view video on a DVD, he or she should always stop at a safe place before doing so.

Notice

- For safety's sake, view video on a DVD only when the vehicle has stopped. While you are driving, you can enjoy only audio.

1 Load the DVD, or

MENU ► **DVD/CD**

The DVD loaded in the unit is played. Menu keys are displayed by touching the screen.



The screen size and play status are displayed.

If five seconds passes with no operations, the keys displayed on screen are hidden.

To manually hide the keys, touch **Back**.

□ Stopping play

1 Touch the screen while playing



DVD video is hidden and playing stops. (resume stop)

If is touched during a resume stop, play is resumed from the place where it was stopped.

If is touched during a resume stop, play is completely stopped. (complete stop) When play is next started, the disc is played from the beginning.

□ Pausing

Notice

- In the case of DVD video, key operations such as pause or start sometimes are not possible in some menus. If this happens, touch **Top Menu** or **Menu** use the operation keys in the DVD menu.

1 Touch the screen while playing



Play pauses while the DVD image is displayed. If is touched during a pause, play is resumed from the place where it was stopped.

□ Playing the previous or next chapter

1



Touching returns you to the start of the chapter, and each additional touch of moves you to previous chapters.

□ Rewinding/fast forwarding

1

While playing, (rewind) or (fast forward) (long press)

If you release your finger from or , normal play resumes.

□ Slow play

1

Touch the screen while playing (long press)

If you release your finger from , normal play resumes.

MEMO:

- During slow play, "Slow play" is displayed in the Audio status display area.

□ Repeat play

This function is for repeatedly playing the chapter currently being played.

1

MENU ► **DVD/CD**

2

Touch the screen ► touch Trick Play key.

Trick Play key



3



Touch to resume normal play.

4






Touch the Trick Play key.

The screen returns to the previous screen.


❑ Playing from menus

DVD video discs are recorded with a DVD menu (disc menu) unique to that disc. The disc menu can be used to quickly play video you want to watch, such as the main title or bonus content.

Displayed menus and operation methods differ according to each disc.

- 1 **MENU** ► **DVD/CD**
- 2 Touch the screen.
- 3 **Top Menu** or **Menu**
MEMO:
 - When “The operation is not available.” is displayed, this means that the menu is not set to the DVD video disc itself.
- 4 Direct touch the menu item to select it.
Move:
 This moves the operation key to the left and right of the screen.
- 5 To use an operation key to select a menu item .
- 6 Select the menu by , , ,  ► **OK**
 The selected menu item is played.

❑ Entering a title or chapter number to play a title or chapter


- 1 **MENU** ► **DVD/CD**
- 2 Touch the screen.
- 3 
- 4 **Select** at [10Key Search]
- 5 **Title** or **Chapter**
- 6 Enter the number.
- 7 **OK**
 The entered title or chapter is played.

Setting DVDs


❑ Switching the audio language/subtitle language/angle

— Notice —

- This function is enabled only when subtitles, multiple audio, and angles are recorded to DVDs.
- The available languages differ according to the disc.

- 1 **MENU** ► **DVD/CD**
- 2 Touch the screen.
- 3 
- 4 **Select** at [Audio/Subtitle/Angle]
- 5 **Angle**, **Audio Language**, **Subtitle Language**
 Each touch of this switches the settings of each item. Subtitles can be hidden by setting “OFF”.
MEMO:
 - “Others” is displayed when a language other than that can be set at “Setting priority language” is recorded. → P.19
- 6 **Back**


❑ Adjusting image quality

- 1 **MENU** ► **DVD/CD**
- 2 Touch the screen.
- 3 
- 4 **Setup** at [Display Adjustment]
- 5 **-** or **+** of item to adjust
 Adjust the image quality while viewing the video image on screen.
- 6 **Back**
 This sets the newly adjusted image setting.

MEMO:


- Image quality adjustments can be set for both the day and night screens.

❑ Switching the screen size

- 1 **MENU** ► **DVD/CD**
- 2 Touch the screen.
- 3 
- 4 [Display Mode] settings key (default: Full)


5 Select the screen size.

Normal:

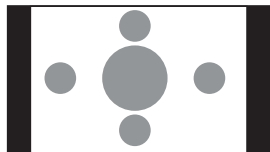


Video is displayed in the center of the screen with its aspect ratio held intact. When the size of the video and screen differ, excess parts of the screen are displayed in black.

Full:

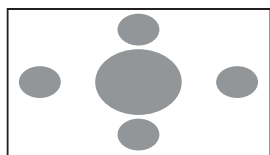

The video is displayed to fit the entire screen. When the size of the video and screen differ, the aspect ratio of the video is displayed altered.

Cinema:

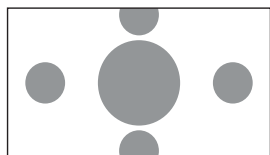

This is used when displaying cinema scope size or vista size video. When the size of the video and screen differ, the horizontal size of the video is displayed to match the horizontal and vertical size of the screen. Unused parts at the top and bottom are displayed in black.

6 **Close**

7 **Back**

Setting the monitor size

Notice

- The recorded monitor size differs according to each disc. Even if the monitor size is set to "Pan Scan" or "Letter Box", video is automatically played at either of these settings depending on the disc.

1 **MENU** ► **DVD/CD**


2 Touch the screen.



4 **[Sizing Monitor] settings key (default: WIDE)**


5 Select the monitor size.

WIDE:

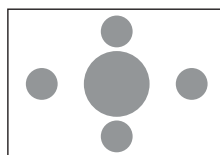


Video is displayed to fit in the entire screen. When the video and screen aspect ratios are different, video is reshaped and displayed. No parts of the video are clipped.

Pan Scan:

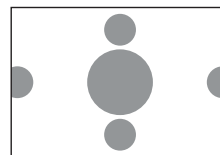

The video is displayed with its height aligned in the vertical direction of the screen. When the video and screen aspect ratios are different, video is displayed with its left and right sides clipped.

Letter Box:

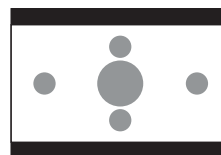

The video is displayed with its width aligned in the horizontal direction of the screen. When the video and screen aspect ratios are different, black bands are displayed at the top and bottom of the screen.

6 **Close**

7 **Back**

Setting priority language

You can set the menu language, audio language, and subtitle language that are given priority when something is playing.

Notice

- The available languages differ according to the disc.
This setting is for the language to be given priority while playing DVDs. Video is not necessarily played with the selected language.

1 **MENU** ► **DVD/CD**

2 Touch the screen.



4 **[Default Menu Language], [Default Audio Language], and [Default Subtitle Language] settings keys (default: English)**

Touch any key to open the list of languages and you can select the language to give priority to while the video is playing.

You can select English, French or Spanish as the language. At Default Subtitle Language, you can select "OFF" to hide subtitles.

5 Select the language.

6 **Close**

7 **Back**

❑ **Setting the parental level**

What are parental levels?


The parental level setting is for applying restrictions to children viewing DVDs. Some DVD videos have parental level settings. There are eight levels 1 through 8, with stricter viewing restrictions being applied as the number becomes smaller. Discs set with viewing restrictions sometimes cannot be played depending on the parental level setting made on the unit. Example: When the viewing restriction of the DVD is parental level 3 The DVD can be played only when the parental level set on the unit is level 3 to 8. If an attempt is made to play a DVD when the parental level set on the unit is level 1 to 2, then a warning message "Please change the parental level." will be displayed. The default parental level is "OFF" which means that no viewing restrictions are applied to any DVD videos.

— **Notice** —


- A password is required to set the parental level. Viewing restrictions sometimes do not function successfully if the country code is not set since parental level differs according to country. → P.53
- The parental level is written on the DVD package, for example. Viewing restrictions are not applied to discs whose package does not indicate any parental level even if parental level is set.
- This setting is not required if viewing restrictions are not to be applied.

Setting and changing passwords

Setting or changing the password is required for setting viewing restrictions.


- 1 **MENU** ► **DVD/CD**
- 2 Touch the screen.
- 3 
- 4 **Change** at [Parental Control Password]
- 5 Enter the password ► **OK**
"...." is displayed for the entered password. (Default: 0000)
- 6 Enter the new password ► **OK**
- 7 Enter the same password again ► **OK**
The new password is set.

Setting the parental level

- 1 **MENU** ► **DVD/CD**
- 2 Touch the screen.
- 3 
- 4 [Parental Level] settings key (default: OFF)
- 5 Enter the password ► **OK**
- 6 Select the parental level ► **Set**
The parental level is set.
Viewing restrictions on all parental levels for DVD video are canceled by touching **OFF**.

❑ **Setting the country code**

The country code is the code for identifying countries. The parental level differs according to country. To use the parental level correctly on the unit, the country code of the DVD must be set. → P.53

- 1 **MENU** ► **DVD/CD**
- 2 Touch the screen.
- 3 
- 4 [Country Code] settings key (default: 8583 (United States))
- 5 Enter the country recorded on the DVD or the country code of the region.
- 6 **OK**

Listening to music on CDs or discs (MP3/WMA) (NX604 only)

On the unit, you can enjoy discs containing MP3/WMA format music data in addition to regular music CDs.

Playing discs

— **Notice** —

- While you are driving, available items are limited.

When the following discs are played, the artist name, track title and other information is displayed.


- Discs containing CD-TEXT
 - Discs containing ID3 tags and WMA tags
- When discs other than the above are played, only a number such as "Track01" is displayed.

MEMO:

- When a non-stop CD (CD comprising tracks joined together) is played, a silent period of a few seconds occurs between tracks.

□ Playing CDs

- 1 Load the CD, or **MENU** ► **DVD/CD**
The CD loaded in the unit is played.
To pause or resume play, touch **▶/||**.

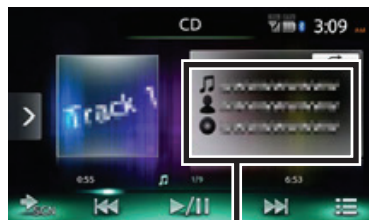

The track name, artist name and album name currently being played are displayed.

□ Playing MP3/WMA discs

- 1 Load the MP3/WMA disc, or **MENU** ► **DVD/CD**
The disc loaded in the unit is played.
To pause or resume play, touch **▶/||**.
DivX contents are played if any are on the disc. → P.22



The track name, artist name, album name, and folder name currently being played are displayed.

□ Rewinding/fast forwarding

- 1 While playing, **◀◀** (rewind) or **▶▶** (fast forward) (long press)
If you release your finger from **◀◀**, **▶▶**, normal play resumes.

□ Playing the previous/next track

- 1 While playing, **◀** or **▶**
Touching **◀** returns you to the start of the track, and each additional touch of **◀** moves you to the previous track.

□ Playing the previous/next folder (only when playing MP3/WMA)

- 1 While playing, **◀** or **▶**
Each touch of **◀**, **▶** moves you to the previous or next folder, and the first track in the folder is played.

□ Playing from the folder list/track list

- 1 **MENU** ► **DVD/CD**
- 2 **◀**

3 (MP3/WMA discs) Select the folder currently being played.

The track list is displayed.
When a folder other than the one currently being played is selected, the folder list remains displayed and play begins from the first track of the selected folder. To display the track list, select the same folder again.


(CD discs)

The track list is displayed.

- 4 Select the track.
Play begins from the selected track.

□ Repeat/shuffle play

- 1 **MENU** ► **DVD/CD**
- 2 Touch the Trick Play key ► select the desired item.

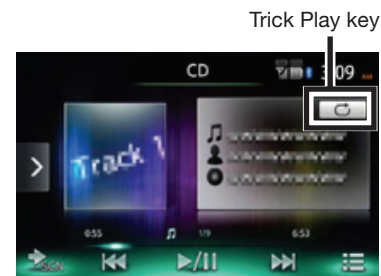

* The above screen is for playing music CDs.

- ◀**:
Only the track currently being played is repeated.
- ◀**:
All tracks in the folder currently being played are repeated. (MP3/WMA only)
- ◀**:
All tracks in the disc are repeated.
- ◀**:
All tracks in the disc are played at random.
- ◀**:
All tracks in the folder currently being played are played at random. (MP3/WMA only)

- 3 Touch the Trick Play key.
The screen returns to the previous screen.

□ Scan play

Ten seconds of the first part of each track is played.

- 1 **MENU** ► **DVD/CD**
- 2 Touch **SCN** (scan key).
Touching the scan key again cancels scan play, and the mode returns to the repeat all tracks mode.

Viewing DivX content (NX604 only)

Viewing DivX content

A feature of DivX is that long videos can be compressed to small files with high image quality kept intact.

The copyright of DivX content is protected, so check the status of the device that is playing and the viewing count limit. Also, to view DivX VOD (Video-On-Demand) content, the device that is playing must be registered as a DivX certified device.

Register DivX certified devices by the following procedure: For details, browse the Rovi Corporation website.

1. **Acquire a DivX account on your personal computer, for example.**
2. **Check the registration code on the unit.** → P.44
3. **Register the registration code of the unit to the DivX account on your personal computer.**
4. **Write the activation file to disc.**

MEMO:

- Content exceeding the viewing count limit cannot be played. In this case, move to the next track by **OK**.

Notice

- DivX Certified® to play DivX® video, including premium content.

Playing DivX content

! WARNING

- **If the driver wants to view video on a DVD/CD, he or she should always stop at a safe place before doing so.**

Notice

- *For safety's sake, view video on a DVD/CD only when the vehicle has stopped. While you are driving, you can enjoy only audio.*


1 Load the DivX disc, or

MENU ► **DVD/CD**

The DVD/CD loaded in the unit is played.

The registration code must be set when viewing is not possible as it is because of DivX certification limits. Menu keys are displayed by touching the screen.

If the disc contains MP3 or WMA audio files, switch the mode to play them. → P.20

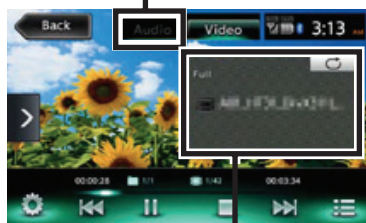

The file name, screen size and status of play for the current song are displayed.

If five seconds passes with no operations, the keys displayed on screen are hidden.

To manually hide the keys, touch **Back**.

You can perform the following operations on DivX discs. Methods of operation are the same as those for DVD/CDs.

- Stopping/pausing play → P.17
- Playing the previous/next track → P.17
- Rewinding/fast forwarding → P.17
- Playing from the folder list/track list → P.21
- Repeat play → P.17
- Entering a title number to play a title → P.18
- Switching the subtitle display/audio → P.18
 - * In the DivX mode, the subtitle and audio languages are not displayed.
- Adjusting image quality → P.18
- Switching the screen size → P.18

Listening to microSD card/ USB memory files

Music saved on your microSD cards or USB memory can be played on the unit.

Playing microSD card/USB memory

Audio files in MP3/WMA format that have been edited on a personal computer can be played using a microSD card or USB memory.

Attention

- Do not leave USB memory inside the vehicle. The inside of the vehicle gets hot under the blazing sun, for example, and might cause them to malfunction.
- Do not get onto or place objects on USB memory while they are connected. Doing so might cause them to malfunction.

Notice

- USB memory cannot be used when an iPod is connected.

□ Playing microSD card or USB memory


- 1 **Connect the microSD card or USB memory.**

2

MENU ► **SD** or
MENU ► **USB / iPod**

The files on the microSD card or USB memory are played.

To pause or resume play, touch **▶/||**.

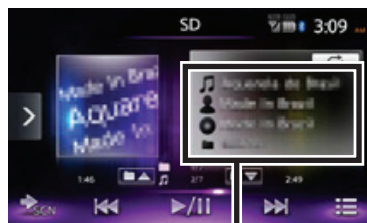

The song title, artist name, album name, and folder name currently being played are displayed.

* The above screen is for playing a microSD card.

MEMO:

- Files on the microSD card or USB memory are played in file name order. To change the play order, prefix the file names with a number.

□ Rewinding/fast forwarding

- While playing, **◀◀** (rewind) or **▶▶** (fast forward) (long press)

If you release your finger from **◀◀**, **▶▶**, normal play resumes.

□ Playing the previous/next track

- While playing, **◀** or **▶**

Touching **◀** returns you to the start of the track, and each additional touch of **◀** moves you to the previous track.

□ Playing from the folder list/track list

- MENU** ► **SD** or
MENU ► **USB / iPod**



- Select the folder currently being played.

The track list is displayed. When a folder other than the one currently being played is selected, the folder list remains displayed and play begins from the first track of the selected folder. To display the track list, select the same folder again.

- Select the track.

Play begins from the selected track.

□ Playing the previous/next folder

- While playing, **◀**, **▶**, **◀◀**, **▶▶**

Each touch of **◀**, **▶**, **◀◀**, **▶▶** moves you to the previous or next folder, and the first track in the folder is played.

□ Repeat/shuffle play

- MENU** ► **SD** or
MENU ► **USB / iPod**
- Touch the Trick Play key ► select the desired item.

Trick Play key



All tracks are repeated.



All tracks in the folder currently being played are repeated.



Only the track currently being played is repeated.



Folders are selected at random from all folders, and tracks selected at random from that folder are played.



All tracks in the folder currently being played are played at random.

- Touch the Trick Play key.

The screen returns to the previous screen.

□ Scan play

Ten seconds of the first part of each track is played.

- MENU** ► **SD** or
MENU ► **USB / iPod**

- Touch **▶SCN** (scan key).

Touching the scan key again cancels scan play, and the mode returns to the repeat all tracks mode.

Listening to iPod/viewing iPod video

Compatible iPod models

iPod/iPhone can be connected by the special connector cable (CCA-750) separately sold or Lightning-USB cable supplied with iPod/iPhone.

Some functions are restricted depending on the iPod model and software version. For information about compatible models, refer to the following web site:

www.clarion.com

— Attention —

- Be sure to remove the iPod after the vehicle's engine key is turned to the "OFF" position. The power of iPod supply might run down if it is not turned off while still connected to the unit.

— Notice —

- The series of iPad® is not supported.
- Not all iPod operations are guaranteed.
- When connecting an iPod to the unit, do not use iPod headphones or other accessories.
- The iPod might not operate correctly when the iPod model's track repeat function is set.
- The iPod might not operate correctly when the iPod model's shuffle function is set. In this case, cancel the shuffle function before using the iPod.
- When there are lots of tunes to play, the titles or list sometimes cannot be displayed depending on the iPod model.
- Audio sometimes is not output in the iPod mode when Bluetooth Audio is playing or hands free calls are being made while the iPod touch® or iPhone is still connected via Bluetooth. Perform operations from the iPod touch or iPhone main unit, and switch the settings (audio output) from Bluetooth (CAR-BT) to the Dock connector. Also, remove the iPod from the unit and reconnect it. For details, refer to the User's Manual for the connected device.
- Audio is sometimes not output from the USB-connected iPod touch or iPhone if the audio device is connected via Bluetooth. In this case, switch the Bluetooth connection mode to other than [Music Only]/[Handsfree + Music], and reconnect iPod touch or iPhone. → P.31
- If the Podcast data is not downloaded correctly, Podcast might not be played.

MEMO:

- When iPod operation is stopped, operations sometimes become possible by selecting a tune or video from the category list.
- If an error message is displayed, remove the iPod from the unit and reconnect it.
- If the iPod becomes inoperable, reset the iPod main unit and reconnect it.

Reset methods (examples)

- iPod:

Simultaneously hold down the "Center" and "Menu" buttons until the Apple logo is displayed.

- iPod touch:

Simultaneously hold down the "Sleep/Cancel sleep" and "home" buttons until the Apple logo is displayed.

For details on how to reset the iPod, check in the User's Manual for the iPod.

- * If operation is not remedied by resetting and reconnecting the iPod, reset the iPod, check operation of the iPod in an unconnected state and then try connecting it again.

Playing iPod models

Audio data and video images in connected iPod models can be enjoyed on the unit.

— Attention —

- While you are driving, do not operate the iPod main unit.
- Do not leave an iPod inside the vehicle. The inside of the vehicle gets hot under the blazing sun, for example, and might cause them to malfunction.
- Do not get onto or place objects on iPod models while they are connected. Doing so might cause them to malfunction.
- Place iPod models at a safe place before starting to use them.

— Notice —

- You cannot operate from the iPod once it is connected to the unit.
- While you are driving, available items are limited.

MEMO:

- If the iPod becomes inoperable, reset it. For details on how to reset the iPod, check in the User's Manual for the iPod.
- When an iPod that is playing an audio file is connected to the unit, play continues from the tune that is being played. When a video-compatible iPod is connected to the unit while video is being played, the point in the video may differ depending on the iPod. To watch video, select the video file again.

❑ Listening to iPod models


Preparations


(For the device with 30-pin connector)

- Connect the CCA-750 (sold separately) to the USB connector.

(For the device with Lightning™ connector)

- Use the Lightning-USB cable supplied with iPod/iPhone.

- 1 **MENU** ► **USB / iPod**
Tracks in the iPod are played.
To pause or resume play, touch .

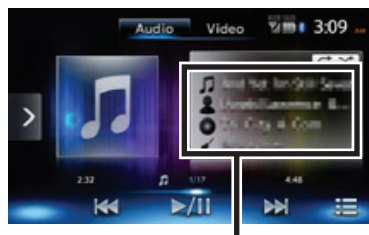

The song title, artist name, album name, and genre name currently being played are displayed.

❑ Watching iPod video

! WARNING

- If the driver wants to view iPod video, he or she should always stop at a safe place before doing so.

Preparations

(For the device with 30-pin connector)

- Connect the CCA-750 (sold separately) to the USB connector.


- Connect the video jack of CCA-750 (sold separately) to the VTR cable.


(For the device with Lightning connector)

- Use the Apple Lightning-Digital AV adaptor (sold separately) and the HDMI cable (sold separately).

— Notice —

- For the device with Lightning connector, the video in the iPod cannot be played from **USB / iPod** on the main menu screen. Please use the Smart Access linking-compatible application "Media4car".
- For safety's sake, view iPod video only when the vehicle has stopped. While you are driving, you can enjoy only audio.
- iPod touch with software version older than 2.0 does not support playing video.
- Video images sometimes are not displayed while playing iPod videos depending on the version of the OS. In this case, this symptom can be remedied by setting the music application to the foreground on the iPod.

- 1 **MENU** ► **USB / iPod**
iPod video is played.
Menu keys are displayed by touching the screen.
To pause or resume play, touch .

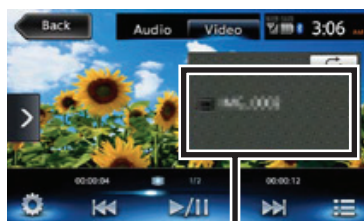





The track name currently being played is displayed.

If five seconds passes with no operations, the keys displayed on screen are hidden. To manually hide the keys, touch **Back**.





MEMO:

- When audio is played, video images in iPod video are switched to manually.

❑ Rewinding/fast forwarding

- 1 While playing,  (rewind) or  (fast forward) (long press)
If you release your finger from , , normal play resumes.

❑ Playing the previous/next track/chapter

- 1 While playing,  or 
The previous or next chapter is played from the beginning when playing the video that have chapters.
Touching  returns you to the start of the track, and each additional touch of  moves you to the previous track.

❑ Repeat/shuffle play


— Notice —

- Repeat play is sometimes not possible depending on the iPod model.
- If the iPod is switched to the video mode during shuffle play, shuffle play is automatically canceled.


 
 
- 1 **MENU** ► **USB / iPod**
- 2 **Audio** or **Video**

- 3 Touch the Trick Play key ► select the desired item.

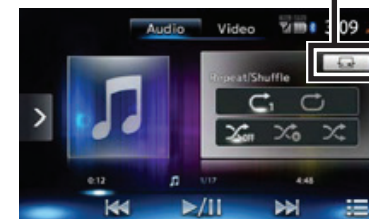

Trick Play key



(Shuffle play (audio only))

- : Cancels shuffle play.
- : Plays the entire album at random. Tracks in the album are played in order.
- : All tracks in the album currently being played are played at random.

(Repeat play)

- : Only the track currently being played is repeated.
- : All tracks in the entire album are repeated.

Play begins with the selected operation.

- 4 Touch the Trick Play key.
The screen returns to the previous screen.

❑ **Playing under specified conditions**

You can search for tracks that match specific conditions and play these.

— **Notice** —

- When the playlist is arranged in a multi-layer hierarchy, unclear items might be displayed depending on the depth of the hierarchy.

1 **MENU** ► **USB / iPod**

2 **Audio** or **Video**



4 **Select the desired item.**


MEMO:

- Selectable items (examples)
(Audio)
Tracks/Playlists/Artists/Albums/
Others (Genres/Composers/
Audiobooks/Podcasts)
(Video)
Video Playlist/Others (TV programs/
Rentals, etc.)

Similar operations are repeated until the track list is displayed.

5 **Select the track.**

The selected track starts playing.

Touching  returns the screen to the screen in step 3.

Setting iPod (video only)

❑ **Adjusting the image quality of iPod video**

Preparations

- Before adjusting the display, select night or day with **Day/Night Mode** on the Settings menu. → P.44

1 **MENU** ► **USB / iPod**

2 **Video**



4 **Setup** at **[Display Adjustment]**

5 **-** or **+** of item to adjust

Adjust the image quality while viewing the video image on screen.

6 **Back**

This sets the newly adjusted image setting. Image quality adjustments can be set for both the day and night screens.

Listening to Bluetooth audio

To listen to Bluetooth audio

Register audio devices compatible with Bluetooth to the unit so that music can be played.

Preparations

- When using Bluetooth Audio for the first time, the audio device must be registered (paired) with the unit. → P.31

— **Attention** —

- Do not leave portable devices inside the vehicle. The inside of the vehicle gets hot under the blazing sun, for example, and might cause them to malfunction.

— **Notice** —


- Use audio devices that are compatible with the Bluetooth protocol. Note, however, that with some types of Bluetooth Audio device the unit sometimes cannot be used or available functions are sometimes limited. When a function is not supported, its button or key cannot be pressed. Or, a message to the effect that operation is not possible will be displayed. Note, however, that a message to the effect that operation is not possible sometimes is not displayed depending on the audio device.
- The unit sometimes cannot be connected or skipping sometimes happens depending on distance and where the Bluetooth Audio is installed. We recommend situating audio devices where the reception is as good as possible.
- Pairing cannot be executed while you are driving.
- There will be no audio output while telephone related functions or online functions are being executed using a Bluetooth Audio compatible cellphone.
- Skipping sometimes occurs while an iPhone is playing as Bluetooth Audio and the Bluetooth screen is displayed on the iPhone. If this happens, audio is played normally by closing the Bluetooth screen display.
- With Bluetooth Audio, an automatic connection from the unit is not performed. Operate the audio device you want to connect to establish the connection to the unit.

MEMO:


- For details on Bluetooth Audio devices, refer to the respective User's Manual.
- Up to five Bluetooth Audio devices including hands free devices can be paired. When five devices are already paired, one device must be deleted from the pairing information and a new device must be registered.
- Some Bluetooth Audio compatible cellphones automatically connect audio profiles from the cellphone while at the same time connecting hands free profiles.
- If there is no audio output even when the audio device is connected, disconnect the profile from the device and reconnect it.

Playing Bluetooth audio





Notice

- With some types of Bluetooth Audio devices, operation such as playing, pausing, rewinding, and fast forwarding are sometimes not possible from the unit. If this happens, operate from the Bluetooth Audio device. For details, refer to the User's Manual for the Bluetooth Audio device.
- With some Bluetooth Audio devices, play does not start automatically sometimes. If this happens, either touch , or operate the Bluetooth Audio device to start playing.





□ Playing Bluetooth Audio

- MENU ► BT Audio**
Bluetooth Audio is played.
To pause or resume play, touch .

□ Rewinding/fast forwarding


- While playing,  (rewind) or  (fast forward) (long press)**
If you release your finger from , , normal play resumes.


 
□ Playing the previous/next track

- While playing,  or **
Touching  returns you to the start of the track, and each additional touch of  moves you to the previous track.

□ Playing from the track list

Notice

- For this function, only Bluetooth Audio that is compatible with AVRCP Ver.1.4. can be used. With some types of Bluetooth Audio devices, this function cannot be used.
- When the Bluetooth Audio player that is playing the audio is not started up, list operations sometimes are not possible. Start up the player and try the operation again.
- With some types of Bluetooth Audio devices,  sometimes cannot be touched.


 

- MENU ► BT Audio**
- 
- 
- Select the track.**
Play begins from the selected track.

□ Playing under specified conditions

You can search tracks to be played from folders or categories and play them.

Notice


- For this function, only Bluetooth Audio that is compatible with AVRCP Ver.1.4. can be used. With some types of Bluetooth Audio device, this function cannot be used.
- When the Bluetooth Audio player that is playing the audio is not started up, list operations sometimes are not possible. Start up the player and try the operation again.







- MENU ► BT Audio**
- 
- 
- Select the desired item.**
Available items differ according to the type of Bluetooth Audio device. Similar operations are repeated until the track list is displayed.
- Select the track.**
Play begins from the selected track. Touching  returns the screen to the screen in step 2.

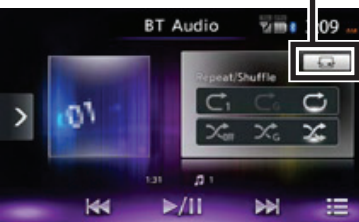□ Repeat/shuffle play

Notice

- For this function, only Bluetooth Audio that is compatible with AVRCP Ver.1.3. or later can be used. With some types of Bluetooth Audio device, shuffle play sometimes is not possible.

- MENU ► BT Audio**
- Touch the Trick Play key ►
Select the desired item.**


- :
Only the track currently being played is repeated.
- :
All tracks in the group currently being played are repeated.
- :
All tracks in the Bluetooth Audio device are repeated.
- :
All song shuffle or group shuffle is canceled.
- :
All tracks in the group currently being played are played at random.
- :
All tracks in the Bluetooth Audio device are played at random.
- 3 Touch the Trick Play key.**
The screen returns to the previous screen.

Viewing connected external devices (AUX)

Audio and video from external devices connected to the AUX terminal can be played on the unit by switching the audio mode to AUX1 or AUX2.

⚠ WARNING

- For your safety, the driver should not watch the video or operate the controls while driving. Please note that watching and operating the video while driving are prohibited by law in some countries.

Preparations

- The following cables are required for connecting external devices to the unit.
(When using AUX1)
To listen to audio
 - Commercially available 3.5 mm stereo mini plug cable
 To watch video
 - Specialized front VTR input cable (CCA-772), sold separately
 - * Any cable other than the one noted above may not operate normally.
 (When using AUX2)
 - VTR cable

Attention


- Do not leave connected external devices inside the vehicle. The inside of the vehicle gets hot under the blazing sun, for example, and might cause them to malfunction.

Notice


- For your safety, this system has a safety function which turns off the picture when the car is moving, so only the audio can be heard. The picture can only be watched when the car is stopped and the parking brake is applied.

Connecting external devices

<Connection example> When using AUX1

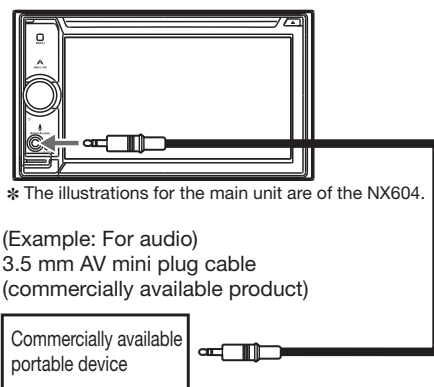

<Connection example> When using AUX2

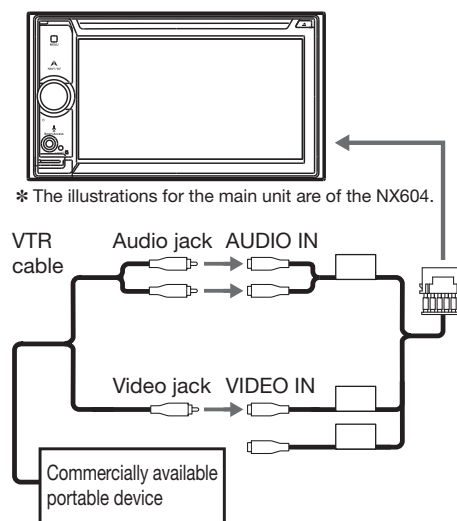

MEMO:

- Also refer to the User's Manual for the connected external device.
- External input connector jack
 - A 3.5 mm dia. stereo mini plug can be connected. Thoroughly read the User's Manual for the audio cable (without resistor) and the device to be connected.
 - Use the battery, etc. provided with the device as the power supply for that device. Using an external device while it is being charged by the accessory socket on the vehicle sometimes causes noise.
- The screen momentarily turns black when switching between the audio and video modes. However, this is not a malfunction.

Listening to audio from external devices

- MENU** ► **AUX1** or **AUX2**
- Touch the screen** ► **Audio**
- Operate the external device.**
Audio is played.

Watching video from external devices

- 1 **MENU** ► **AUX1** or **AUX2**
- 2 **Video**
- 3 **Operate the external device.**
Video and audio are played.


MEMO:

- While an iPhone is connected with Smartphone Linking, the smartphone application screen is displayed though it cannot be operated by touch operations. When using Smartphone linking, see "Using Smart Access." → P.35

Setting external device listening

Compensating for volume differences

Compensate for volume difference that occurs depending on the type of connected external device.


- 1 **MENU**
- 2 **AUX1** or **AUX2**
- 3 Touch the screen ► 
- 4 **[Audio Level] settings key**
(default: Mid)
- 5 Select the audio level.
- 6 **Close**
- 7 **Back**

The level is adjusted to the adjusted volume.

Adjusting image quality

Preparations


- Before adjusting the display, select night or day with **Day/Night Mode** on the Settings menu. → P.44

- 1 **MENU**
- 2 **AUX1** or **AUX2**
- 3 Touch the screen ► 
- 4 **Setup** at **[Display Adjustment]**
- 5 **–** or **+** of item to adjust
Adjust the image quality while viewing the video image on screen.
- 6 **Back**
This sets the newly adjusted image setting. Image quality adjustments can be set for both the day and night screens.

Switching the screen size


Notice

- When the screen size is switched, the image sometimes appears different from the original video image.

- 1 **MENU**
- 2 **AUX1** or **AUX2**
- 3 Touch the screen ► 
- 4 **[Display Mode] settings key**
(default: Full)


5 Select the screen display size.

Normal:

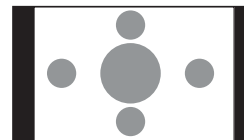

Video is displayed in the center of the screen with its aspect ratio held intact. When the size of the video and screen differ, excess parts of the screen are displayed in black.

Full:

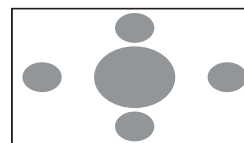

The video is displayed to fit the entire screen. When the size of the video and screen differ, the aspect ratio of the video is displayed altered.

Cinema:



This is used when displaying cinema scope size or vista size video on a regular TV. When the size of the video and screen differ, the horizontal size of the video is displayed to match the horizontal and vertical size of the screen. Unused parts at the top and bottom are displayed in black.

6 Close

7 Back

The screen is displayed at the selected size.

Listening to Pandora internet radio

Pandora® is free personalized radio that offers effortless and endless music enjoyment and discovery.

If you have any issues with the Pandora application on your mobile phone, please direct them to pandora-support@pandora.com.

How to listen to Pandora internet radio

Listen to Pandora internet radio by following the procedure below.

(For iPhone)

1. Install Pandora application to the iPhone.
2. Set "iPhone" for "Device Type" on the Settings menu. → P.44
3. Press the rotary volume knob (NX604) or **[POWER]** (FX503) twice to turn off the screen and then display it again.
4. Start Pandora on the iPhone.
5. Connect iPhone to the unit via Bluetooth or via USB.
6. Start Pandora on the unit.

(For Android smartphones)

1. Install Pandora application to the smartphone.
2. Set "Android" for "Device Type" on the Settings menu. → P.44
3. Press the rotary volume knob (NX604) or **[POWER]** (FX503) twice to turn off the screen and then display it again.
4. Start Pandora on the smartphone.
5. Connect the smartphone to the unit via Bluetooth. → P.31
6. Start Pandora on the unit.

Playing stations

Notice

- You must create a station through the Pandora website or mobile application prior to connecting your smartphone to the head unit.

1 **[MENU]** ► Pandora Radio


MEMO:

- If Pandora does not start, press the rotary volume knob (NX604) or **[POWER]** (FX503) twice and then try to operate again.



3 Select the station you want to listen to.

The station is sorted in date order or alphabetical order.

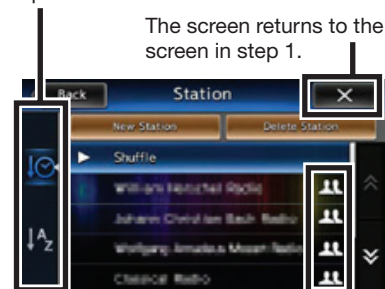

The screen returns to the screen in step 1.

This is shared with two or more users. Displayed in the case of a station.

If a station is selected on the smartphone, it is played at step 1. Multiple tracks in the station can be played at random by touching **Shuffle** at the top of the station list.

Pausing play

- 1 Touch **[PAUSE]** while music is playing. If **[PAUSE]** is touched during a pause, play is resumed.

Skipping the track being played

You can skip the track that is currently being played.

Notice

- Pandora may limit the number of skips allowed on the service.
- Skipped stations are not played for about the next four hours on all stations.

- 1 Touch **[NEXT]** while music is playing. The next track is played.

Rating the track currently being played

You can rate the track that is currently being played.

- 1 While playing, **[THUMB UP]** or **[THUMB DOWN]**



Gives a track a high score. Tracks with a similar melody are more likely to be played.



Gives a track a low rating. Tracks with a similar melody are less likely to be played. Also, tracks with a low rating are skipped and are less likely to be played from that station.

[THUMB UP] and **[THUMB DOWN]** are displayed for tracks that have been rated. Tracks can be rated any number of times.

Bookmarking

Tracks or artists that are currently being played can be registered to Pandora bookmarks.

Notice

- The bookmark list cannot be displayed on the unit. Display it on the smartphone.

- 1 While playing, **[BOOKMARK]**

- 2 Select the item.

Track:

This registers the track currently being played to the track bookmark list.

Artist:

This registers the artist of the track currently being played to the artist bookmark list.

Making stations

You can create a station based on the currently playing artist or track.

Notice

- If a station with the same name is already registered, the station playing is switched, though the new station is not registered.

1 **[MENU]** ► Pandora Radio



3 New Station

4 Selecting a station.

From Track:



 



The station is made using the name of the track currently being played. The station will play tracks associated with the track currently being played.

From Artist:

The station is made using the name of the artist of the track currently being played.

The station will play tracks associated with the artist of the track currently being played.

Deleting stations

- 1   Pandora Radio
- 2 
- 3 
- 4 Select the station you want to delete  

Registering Bluetooth-compatible devices

Bluetooth-compatible devices such as cellphones can be registered so that incoming and outgoing telephone calls and audio can be played from the unit. If you use a Bluetooth-compatible cellphone, you can use hands free functions using Bluetooth without connecting a cable. For more information about connectible cellphones, visit Clarion's web site. www.clarion.com

Preparations

- To use Bluetooth, the Bluetooth functions of the unit must be turned on. → P.43
When using a Bluetooth-compatible device, the device must be registered (paired) with the unit. → P.31

Notice

- While you are driving, selectable items are limited.

What is "Bluetooth"?

Bluetooth is a short-range wireless communications technology for portable information devices advocated by the Bluetooth SIG trade association. Communications between Bluetooth-compatible devices is performed using radio waves in the 2.4 GHz band. Cellphones and audio devices that support Bluetooth can be connected for use on the unit.

To use each of the Bluetooth functions, you will need a cellphone that supports the following profiles:

Hands free calling

HFP (Hands-Free Profile)

Phonebook forwarding

OPP (Object Push Profile)

Phonebook forwarding and telephone call log, etc. synchronization

PBAP (Phone Book Access Profile)

Audio

A2DP (Advanced Audio Distribution Profile), AVRCP (Audio/Video Remote Control Profile)

Even if devices support Bluetooth profiles, phenomena sometimes occur where devices cannot connect to each other or display and operation are different because of their characteristics or specifications.








Registering Bluetooth-compatible devices (pairing)

When using a Bluetooth-compatible device for the first time, the device must be registered (paired) with the unit.

Notice

- Pairing cannot be executed while you are driving.
- Also, pairing sometimes cannot be executed if the Bluetooth function is not enabled on the Bluetooth-compatible device, too. For details, refer to the User's Manual for the Bluetooth-compatible device.

- During hands free operations (making outgoing calls, taking incoming calls, telephone calls), connection (telephone calls, communications) with other Bluetooth-compatible devices and pairing are not possible. Also, during hands free operation, there is no audio output.

- 1     
- 2  at [BT Devices Connection]
- 3  for the device you want to add
- 4 Select the Bluetooth connection mode.
MEMO:
 - Functions that you can use vary depending on the Bluetooth connection method. For details, refer to P.56.**Handsfree + Smartphone Linking:**
Select this when using the cellphone as a hands free phone and for Smartphone linking.
Handsfree + Music:
Select this when using the cellphone as a hands free phone and for Bluetooth Audio.
Handsfree Only:
Select this when using the cellphone only as a hands free phone.
Music Only:
Select this when using the cellphone only for Bluetooth Audio.
Smartphone Linking Only:
Select this when using the cellphone for Smartphone linking.

5 Select "CAR-BT" (default) from the Bluetooth-compatible device, and enter the PIN "1234" (default).

The Bluetooth-compatible device searches for the unit to complete pairing.

MEMO:

- The [Connect with Bluetooth] setting on the Settings screen of the portable device changes to on. Confirm that this setting is on to use Bluetooth functions.

When **MENU** ► **Phone** is next touched, the screen changes to the telephone number entry screen.

MEMO:

- Entry of the PIN is not required on some Bluetooth-compatible devices. Also, on some models, the confirmation screen is displayed whether or not the PIN entered on the unit is the same as the PIN on the device. When registering a device, follow the on-screen instructions.
- After pairing is complete, the connection may need to be confirmed on the Bluetooth-compatible device.
- For details on Bluetooth operation on the Bluetooth-compatible device, refer to the User's Manual for the device.
- The Bluetooth-compatible device's reception sensitivity and remaining battery power as displayed on the unit may not match the actual values of the device.
- Up to five Bluetooth-compatible devices can be paired. To pair a sixth device, an already registered Bluetooth-compatible device must be deleted. → P.32


- For details on how to register Bluetooth-compatible devices to cellphones, refer to the User's Manual for the cellphone.
- The name of the device and the PIN can be changed.
- Connections sometimes are not made automatically if the Bluetooth-compatible device is not set as "Waiting for connection" or the device is not in a standby state. For details, refer to the User's Manual for the device.
- Reconnection is automatically retried if the connection is broken, such as if the Bluetooth-compatible device is too far away.
- Problems on some Bluetooth-compatible devices may cause communication errors or prevent operations from being performed or displayed properly. If this happens, switch the Bluetooth functions off then back on again. (Default: Off)
- When switching the Bluetooth functions on the Bluetooth-compatible device off then back on again, do the same for the Bluetooth functions on the unit.
- When Bluetooth functions are turned off, Bluetooth functions on the unit cannot be operated. Also, connection to and operations of the unit from Bluetooth-compatible devices are no longer possible.

Switching the connected Bluetooth-compatible device

When two or more Bluetooth-compatible devices are registered to the unit, the device to be connected can be switched.

— Notice —

- Though up to five Bluetooth-compatible devices can be paired, only one can be connected to at any one time.




- 1 **MENU** ►  ► 
- 2 **Set** at [BT Devices Connection]
- 3 Confirm that [Connect with Bluetooth] is turned "ON".
- 4 **Select** for the device to be switched.
- 5 Select the Bluetooth connection mode.

MEMO:

- Switching the Bluetooth-compatible device that is currently in use also switches the device information, such as incoming/outgoing call logs, to the selected device.
- When a Bluetooth-compatible device is restarted, it may not connect automatically, depending on the type of device. Use this procedure to connect the selected device if it is not done automatically.

Deleting registered Bluetooth-compatible devices

You can delete the information of paired Bluetooth-compatible devices.

- 1 **MENU** ►  ► 
- 2 **Set** at [BT Devices Connection]
- 3  for the device you want to delete.
- 4 **OK**

MEMO:

- When the registration information of a cellphone is deleted, the incoming/outgoing calls log and phonebook information of the corresponding cellphone also are deleted.
- If the unit is turned off while deleting information registered for a Bluetooth-compatible device, the information sometimes cannot be deleted. If this happens, turn the unit on and try deleting the information again.

Using cellphones

— Attention —

- Do not leave cellphones inside the vehicle. The inside of the vehicle gets hot under the blazing sun, for example, and might cause them to malfunction.

Screen during a telephone call

The following screen is displayed during a telephone call:

Screen during a telephone call



This displays the option screen.



This mutes the phone outgoing volume.




This switches to telephone calls on the cellphone unit.
Private call operation is sometimes not switched to depending on the cellphone you are using.



This ends the telephone call.




When the number entry screen is displayed, enter the numbers for the password, etc. during the telephone call. Touching  returns the screen to the previous screen.

Pressing **NAVI AV** during a telephone call switches the screen as follows. With this screen displayed as it is, operations such as searching for a destination can be performed. (NX604 only)

Map screen during a telephone call

The call is disconnected and the current position is displayed.

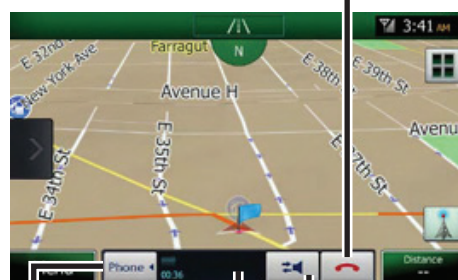

The call time, name of other party or telephone number is displayed.

This switches to telephone calls on the cellphone unit.

This toggles the telephone control bar between display and hide.

MEMO:

- With some cellphone models, incoming calls are automatically rejected when there is an incoming call from a third party during a telephone call. The incoming calls log is not saved.
- When the vehicle moves outside the cellphone service area during a telephone call (i.e. to an area where radio waves cannot be received), the line will be disconnected.
- During hands free telephone calls, the audio source cannot be switched or selected.
- It may not be possible to make or receive calls unless the cellphone is in standby.

Entering a number to make a call

— Attention —

- While you are driving, you cannot enter telephone numbers to make a call. Always stop at a safe location before making a telephone call.

— Notice —

- Always input the area code when calling a land-line phone.
- With some cellphones, you may not be able to redial immediately after hanging up a call you dialed. Wait a while before dialing the number again.

1 **MENU** ► **Phone**

2 Enter the telephone number.



The telephone number is dialed and the other party is called.



The call is stopped if this is touched while you are calling the other party.

4 To end a telephone call 

This disconnects the call and returns you to the screen before you made the call.

 
The telephone number you called, name (when registered to the phonebook) and dial date/time are saved as the outgoing calls log. Only the latest call log is shown for the same phone numbers.

Making calls from the outgoing/incoming calls log

— Notice —

- You cannot make calls from the incoming calls log when the incoming call was from a withheld number.

1 **MENU** ► **Phone**



4 Select the other party you want to dial.

5 **Call**

The registered telephone number is dialed and the call is made.

MEMO:

- The latest ten calls recorded on the unit are displayed in the incoming/outgoing calls log.
- In the case of telephone numbers registered to the phonebook, the registered names are displayed.

Deleting the incoming/outgoing calls log

1 **MENU** ► **Phone**



4 **Delete All**

5 OK

The entire outgoing call log or incoming call log is deleted.

Registering a phonebook

You can register the phonebook on a cellphone in advance to the unit, and make calls from there.

To register the phonebook on a cellphone, use the phonebook download function on the cellphone. With some cellphones, phonebooks cannot be downloaded. For details, refer to the User's Manual for the cellphone.

MEMO:

- After a phonebook is downloaded, the cellphone connection is sometimes disconnected. If this happens, select the cellphone you want to connect to again from the telephone selection screen.

1 **MENU** ► **Phone**

2 

3 **Download Phonebook**

MEMO:

- If phonebook data has already been registered, **Download memory** is displayed.

4 **Select the download method.**

Download Phonebook:

This downloads the phonebook data from a Bluetooth-compatible cellphone and overwrites and saves the phonebook data on the unit.

Note that the previous downloaded data is overwritten and can no longer be used.

Download 1 Entry:

This downloads the phonebook data from a Bluetooth-compatible cellphone and adds and saves this data to the phonebook data on the unit. Note that the previous downloaded data is not overwritten and can still be used.

Cancel:

This cancels the download and returns you to the previous screen.

5 Download the phonebook from a cellphone.

The phonebook of the currently selected cellphone is downloaded to the unit.

MEMO:

- Up to 1,000 phonebook entries can be registered per cellphone.
- Up to five telephone numbers can be displayed for each name in the phonebook.
- When downloading from a cellphone, even the same telephone numbers are always added and registered, and are not overwritten. Delete telephone numbers, as required.
- The display order of the downloaded phonebook differs from the order displayed in the cellphone. Entries are sorted alphabetically by last name.

Making calls from the phonebook

1 **MENU** ► **Phone**

2 

3 **Select the name.**

4 **Select the telephone number.**

5 **Call**

The registered telephone number is dialed and the call is made.

MEMO:

- For details on how to register phonebooks, see "Registering a phonebook." → P.34

Deleting phonebook data

1 **MENU** ► **Phone**

2 

3 **Delete All**

4 **OK**

All of the phonebook data is deleted.

Receiving telephone calls

When a cellphone connected to the unit receives an incoming call, the incoming call screen is displayed.

CAUTION

- When you receive a call while you are driving, be sure to check the safety around you before taking the call.

1 When you have an incoming call



The screen switches to the telephone call screen.



Touching this during an incoming call, rejects the call.

2 To end a telephone call



This disconnects the call and returns you to the previous screen. The telephone number of the incoming call and name (when registered to the phonebook) are saved as the incoming calls log.

Setting the call volume

1 **MENU** ► **Phone** ► 

2 **Set the phone ringer volume, phone incoming volume and phone outgoing volume.**

The volume can be set to level 1 to 16. (Default: Level 4)

MEMO:

- The volume can be adjusted by the rotary volume knob (NX604) or **VOL+**, **VOL-** (FX503) during an incoming call and a call.
- When the volume is adjusted while you are making a telephone call, calls can be made at the original volume when the next telephone call is received or made even though other audio sources are switched to and the volume is changed.

Using Smart Access

Smart Access is a cloud information network service provided by Clarion so that all automobile users can enjoy comfortable, safe and convenient driving.

By “linking” vehicles to Smart Access by smartphone, etc., Smart Access provides customers in vehicles with various conveniences such as entertainment, driving related information and Internet information.

What is Smartphone linking?

You can connect the unit to your smartphone and operate the various applications that run on your smartphone from the unit.

For example, you can output audio that is played from the speakers connected to the unit or display images displayed in applications on the unit. This is called “Smartphone linking.”

The following lists the smartphones that can be linked to the unit:

- Covered models: iPhone 4, iPhone 4S, Android smartphones
- * For the device with Lightning connector, it can be linked to the unit using the Apple Lightning-Digital AV adaptor (sold separately) and the HDMI cable (sold separately).

(as of March 2014)

<Android devices only>

- Compatible Bluetooth profile:
SPP (serial port profile)
HID (human interface device profile)
- HDMI output resolution:
480p (720X480/640X480)
576p (720X576)

MEMO:

- *With some Android devices, the HDMI output setting on the smartphone must be enabled.*

Also, with this function, only applications compatible with Smartphone linking can be used. This User's Manual refers to these as “linking-compatible applications.”

— Attention —

- *Use of Smartphone linking function is charged to smartphone communications fees. Charges are borne by the person contracted to the smartphone being used. Charges billed from the cellphone carrier may be expensive depending on the method of use. Before use, check the price plans and methods of use with the cellphone carrier you are contracted to. We recommend using the optimum price plan, such as a flat-rate data plan based on the frequency of use.*

— Notice —

- *While you are driving, some applications cannot be operated so as to prevent obstruction to driving.*
- *Information content that is distributed in real time belongs to third parties having the rights concerned. The content of services might be changed or suspended for reasons of third parties having the rights concerned.*

□ Linking-compatible applications

To use Smartphone linking, linking-compatible applications and application management software “Smart Access” must be installed on the software.

First, search for “Smart Access” from the App StoreSM or Google PlayTM and install this.

Next, install the linking-compatible applications. Start up Smart Access on the smartphone and install the linking-compatible applications from recommended lists.

Linking-compatible applications are scheduled to be added as they become available.

For details on how to use applications, refer to the Help for each application that is started up on the smartphone.

□ Procedure up to Smartphone linking

The Smartphone linking procedure is as follows.

— Notice —

- *During Smartphone linking, operations on the iPhone are not possible.*

(For iPhone)

1. Set “iPhone” for “Device Type” on the Settings menu. → P.44
2. Start Smart Access on the iPhone.
3. (Only for the device with Lightning connector)
Set “Usage Setting” in “BT Devices Connection” on the Settings menu, and then connect iPhone via Bluetooth. → P.31

4. Connect the iPhone to the unit

For the device with 30-pin connector, connect iPhone with the CCA-750 video jack (sold separately) still connected to the VTR cable.

For the device with Lightning connector, the Apple Lightning-Digital AV adaptor (sold separately) and the HDMI cable (sold separately) are necessary.



MEMO:

- *For the device with Lightning connector, the music and video in the iPhone cannot be played from **USB / iPod** on the main menu screen. Please use the Smart Access linking-compatible application “Media4car”.*

5. Start the application on the unit.

(For Android smartphones)

1. Set "Android" for "Device Type" on the Settings menu. → P.44
2. Start Smart Access on the smartphone.
3. Set "Usage Setting" in "BT Devices Connection" on the Settings menu, and then connect your smartphone via Bluetooth. → P.31
4. Connect the unit to the smartphone.
The following two connection methods are also available for some smartphones.

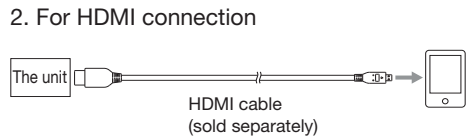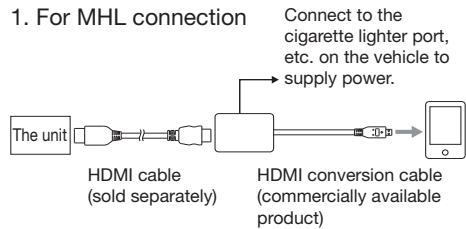

— **Attention** —

- Use only an HDMI conversion cable that supports EDID transfer.

5. Start the application on the unit.

Starting up applications

— Notice —

- The unit sometimes does not support smartphone multi-touch or flicking functions.
- Applications cannot be added or deleted from the unit. Execute addition or deletion of applications on the smartphone.
- During Smartphone linking, do not set the smartphone to a sleep state. Doing so might prevent the smartphone from functioning properly.

MEMO:

- When Smart Access is used for the first time, the Terms of Use confirmation screen is displayed. Check the terms of use, and touch **Check**.
- "!" will be displayed when there is a new version of Smart Access available. To update Smart Access, remove the smartphone from the unit, and execute the update by operating the application on the smartphone.

- 1 **[MENU] ▶ Smart Access**
Start up Smart Access. The list of linking-related applications installed on the smartphone is displayed. When an application is started up on the smartphone, the screen is switched to the application screen.
- 2 **Select the application you want to start up.**
The application starts up. The application can be operated from screens on the unit as if you are operating the smartphone.
Touch **[MENU] ▶ Smart Access** to return to the application list screen.

Adjusting the screen size (Android smartphones only)

During Smartphone linking, the left and right, or top and bottom of the screen sometimes displays black because of different resolutions on the unit and the smartphone. The screen size can be corrected by the following procedure.

— Notice —

- If you cannot touch **[+]**, update Smart Access on the smartphone.

- 1 **During Smartphone linking [Smart Access].**
The side menu is displayed.
- 2 **[+]**
The screen returns to the application list screen.
[+]
The screen returns to the previous screen when the screen is not displayed the application list screen.
[<]
This hides the side menu.

3 Adjust the screen size.

- [+]**:
This reduces the height of screen size.
- [+]**:
This increases the height of screen size.
- [+]**:
This reduces the width of screen size.
- [+]**:
This increases the width of screen size.

Reset to Factory Setting:

This resets the screen size after correction to their factory settings.

Back:


This cancels the settings and displays the application list screen.

- 4 **OK**
- 5 **Check**

After adjusting the screen size, go on to correct the touch position on screen.

Correcting the touch position on screen (Android smartphones only)

During Smartphone linking, the positions of keys displayed on the unit is sometimes deviate from the actual touch position because of different resolutions on the unit and the smartphone. This deviation can be automatically corrected by the following procedure.

- During Smartphone linking [Smart Access].**
The side menu is displayed.
- 
- Yes**
No:
This cancels correction of the touch position.
Reset to Factory Setting:
This resets the touch positions after correction to their factory settings.
- Touch the + mark at the top left of the screen.**
- Touch the + mark at the bottom right of the screen.**
This completes correction of the touch position.

Ending Smartphone linking

- [MENU]**
- Disconnect CCA-750 or HDMI cable.**

Using Intelligent VOICE (NX604 only)

Intelligent VOICE is a voice recognition service that lets you search for destinations by just saying what's on your mind, based on Google™ Voice recognition technology and Google's vast local search information. You can verbally input a destination you want to search for by using Smartphone linking.

The application links to the Google server via the smartphone and searches for the destination.

For details refer to the following website:
<http://www.clation.com>

WARNING

- **For your safety, the driver must not operate the smartphone while driving.**

Attention

- Please note that the communication conditions may cause a delay in verbal input.
- There may be some delays when the service is used for the first time, regardless of the communication conditions when downloading the required data.
- Please update Smart Access to the latest version.

Preparations

- Install and start up Smart Access on the smartphone.
- For iPhone, connect iPhone to the unit via Bluetooth or USB.
For Android smartphones, connect the smartphone to the unit via Bluetooth.


- Smart Access**
- Talk to the interior microphone on the unit.**
Destination History:
This displays the search history.
Cancel:
This cancels the voice recognition.
Try again:
Select this to try to talk again.
MEMO:
 - Examples of verbal input:
 - "Steak house"
 - "Japanese restaurant"

The search results list screen is displayed.

The words you talked or the related items are displayed.

The search history is displayed.

This displays the details of the place, the expiration date of Intelligent VOICE etc. and sets as a destination or a waypoint.



This scrolls through the list.

This switches the units of mi/km and deletes the search history.

This switches the search area to the around of destination or current location.
- Select a destination you want.**

Using a remote control (sold separately)

Cautions during remote control operations

Pay attention to the following points when using the remote control.

- The remote control sometimes cannot be operated when direct sunlight is striking the remote control sensor on the unit. In instances like this, block off the direct sunlight to operate the remote control.
- Do not leave the remote control in places that get hot, such as the dashboard in direct sunlight. Doing so might result in the main unit becoming deformed, the batteries leaking or other malfunctions.
- When the emission distance of the remote control gets shorter or its operable range gets narrower, replace the batteries inside the remote control.
- When the remote control is not going to be used for at least a month, remove the batteries from inside the remote control to prevent battery leakage. If the battery has leaked, wipe off the liquid thoroughly and replace the battery.

Battery related precautions


- Use only the specified battery. Do not use other batteries. Doing so might cause the battery to burst or leak, or cause fire or injury, and contaminate the surrounding area.
- When inserting the battery into the remote control, pay attention to polarity (⊕ and ⊖ pole) and insert it as instructed. Failure to follow instructions might cause the battery to burst or leak, or cause injury, and contaminate the surrounding area.
- Do not heat or disassemble the battery, or put it in fire or water. Doing so might cause the battery to burst or leak, or cause fire or injury.
- Do not carry the battery around or store it together with metal ballpoint pens, necklaces, coins, or other metal objects. Doing so might cause the battery to burst or leak, or cause fire or injury.
- Dispose of used batteries according to predetermined methods and at predetermined locations.
- Do not leave the battery provided with the remote control within the reach of small children or infants. They might swallow them by mistake. If you think that a small child or infant has swallowed a battery, immediately consult a physician.

Replacing the battery


Notice

- When using the remote control for the first time, insert the battery provided with the remote control.

1 Open the battery compartment cover and remove the battery.

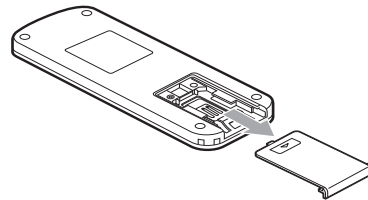




2 Insert the new lithium cell (CR2032) with the ⊕ mark face up, and close the battery compartment cover.

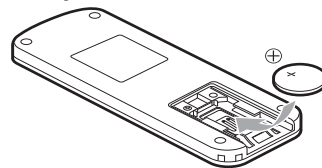




How to use the remote control

1 Operate the remote control with it pointed at the remote control sensor on the unit.

  NX604

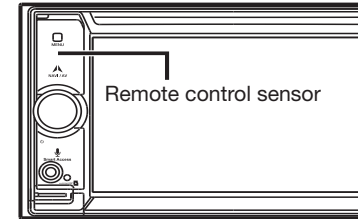


FX503

  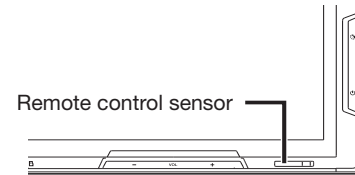

Operate the remote control with its emitter pointed at the remote control sensor within a range 30 degrees above, below, left and right of the sensor.

Names and functions of remote control parts

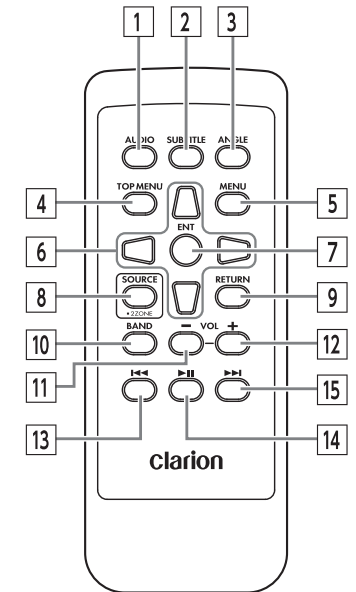

Notice

- On the FX503, available buttons are as follows:
SOURCE, **BAND**, **VOL-**, **VOL+**, **⏮**, **⏭**
- During telephone calls and when **AUX** is selected, these cannot be operated.

1 **AUDIO** button

This switches the audio language of DVD video and DivX.

2 **SUB TITLE** button

This switches the subtitle language of DVD video and DivX.

3 **ANGLE** button

This switches the multi angle setting of DVD video.

4 [TOP MENU] button

This displays the top menu screen of DVD video.

5 [MENU] button

This displays the top menu screen of DVD video.

6 [direction] button

This selects items in the DVD video menu screen and top menu screen.

7 [ENTER] button

This determines items selected in the DVD video menu screen and top menu screen.

8 [SOURCE] button

This switches the source of the audio mode.
When the unit is turned off, this turns the power on.
Keeping this button hold down starts up the voice recognition application. (NX604 only)

9 [RETURN] button

This returns you to the immediately previous screen in the DVD video menu screen and top menu screen.

- * The ZZONE function cannot be used with the unit.

10 [BAND] button

This switches the tuner FM and AM bands.

11 [VOL-] button

This lowers the volume.

12 [VOL+] button

This raises the volume.

13 [◀▶] button

With Radio/SiriusXM Satellite Radio:
Preset channel increment
Long press time:
Channel seek increment
When other audio sources are selected*¹:
Track/chapter increment, track/chapter rewind

14 [▶||] button

This pauses play depending on the source.

If this button is pressed during a pause, play is resumed from the place where it was stopped.

Long press time:

This resume stops DVD video and DivX.
If this button is long pressed during a resume stop, play is completely stopped.

15 [▶▶] button

With Radio/SiriusXM Satellite Radio:

Preset channel decrement

Long press time:

Channel seek decrement

When other audio sources are selected*^{1, *2}:
Track/chapter decrement, track/chapter fast forward

- * 1 With DVDs, keys other than on the disc menu cannot be operated on the remote control. Touch the unit to operate them.
- * 2 With DVDs, slow play during a pause is possible by pressing [▶▶].

Using the rear camera

When the rear color camera (sold separately) is connected to the unit, the rear of the vehicle can be viewed on the monitor. To connect it, you need the camera input cable (CCA-644). Consult your dealer before buying the rear color camera (sold separately).

! WARNING

- **Never reverse the vehicle while viewing only the monitor screen. Be sure to check the safety of the area around the vehicle directly with your eyes and drive at a slow speed.**
- **Before adjusting the image quality and adjusting, for example, the guide display, be sure to stop the vehicle at a safe place and then proceed with these operations.**

— Notice —

- *The range projected by the rear camera is limited. Also, the guides displayed on the rear camera screen sometimes differ from the actual vehicle width and actual distance between cars. (Guides are straight lines.)*
- *Use the image in the rear camera as an aid for checking for obstructions, etc. The quality of the projected image might get worse when water droplets, etc. adhere to the camera.*
- *Be sure to adjust the guides to match the car you are driving when the guides are displayed.*

Image in the rear camera

- Actual distances and the impression from the image in the rear camera is different since it uses a wide-angle lens.
- The image in the rear camera is a mirror image. A “mirror image” is an image obtained by inverting the left and right of an image like in a rear mirror or side mirror on a vehicle.
- The image in the rear camera cannot be seen or is difficult to view at night or in dark locations.
- The camera is in a drip-proof sealed structure to prevent condensation on the lens.
- Never loosen the screws on the camera body or disassemble the camera. This will impair the drip-proof performance and cause malfunction, etc.
- Clear images cannot be obtained when the lens front cover is dirty. When water droplets, snow, mud, etc. is adhering to the cover, wipe the cover clean with a soft cloth, for example, moistened with water. Wiping the lens cover firmly with a dry cloth, for example, with dirt, etc. still on the cover will sometimes scratch it.

Displaying the image in the rear camera

— Notice —

- *The guides can be displayed and adjusted only when the gear lever is at [R] (reverse).*

- 1 Turn the engine key to the “ON” position.

2 Set the gear lever to **R** (reverse).

The display switches to the image in the rear camera.
Display priority is given to the image in the rear camera even when audio-related items are displayed.
Only volume adjustment by the rotary volume knob (NX604) **VOL+**, **VOL-** (FX503) can be operated during camera display.

Adjusting the image quality of the monitor (rear camera)

Preparations

- Before adjusting the display, select night or day with **Day/Night Mode** on the Settings menu. → P.44

1 Touch the screen while the rear camera image is displayed.

2 Display Adjustment

If five seconds elapses without you touching the screen, **Display Adjustment** will be hidden.

3 **+** or **-** of item to adjust

Adjust the image quality while viewing the video image on screen.

4 Back

This sets the newly adjusted image setting.
Image quality adjustments can be set for both the day and night screens.

Displaying guidelines


1 Touch the screen while the rear camera image is displayed.

2 Guideline

If five seconds elapses without you touching the screen, **Guideline** will be hidden.

3 Check

The guidelines are displayed.

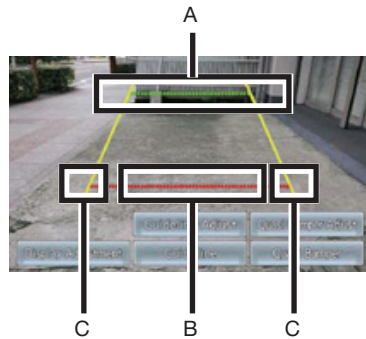

- A: Position about 6.6 ft (2 m) from the rear end of the vehicle
B: Position about 20 in (50 cm) from the rear end of the vehicle
C: Approximately vehicle width + 8 in (20 cm)




Adjusting the guidelines

When adjusting guidelines, marks must be drawn on the ground. Prepare tools for drawing lines on the ground, such as duct tape. Also, be sure to do the adjustments to match the car you drive.

! WARNING

- Before adjusting the guidelines, stop at a safe location.
- Before getting out of the vehicle and marking the ground, be sure to turn the engine key to the "OFF" position.
- Remember that guidelines are solely for reference. During actual driving, be sure to check the safety of the area around you yourself.


1 Mark straight marks on the ground at vehicle width + about 8 in (20 cm) positions.

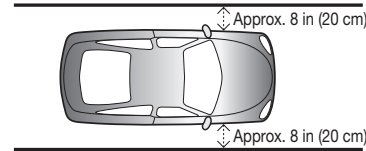


MEMO:

- Mark on both sides of the vehicle using packaging or similar tape.
- Make the marks slightly longer than the length of the vehicle.

2 Drive the vehicle forward by about 8.2 ft (2.5 m), and mark straight lines at the rear of the vehicle.

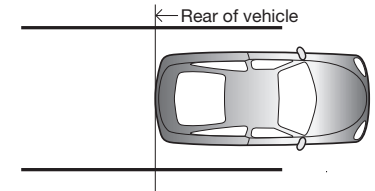

3 Mark four locations on the left and right 20 in (50 cm) and 6.6 ft (2 m) away from the marks you made in step 2.

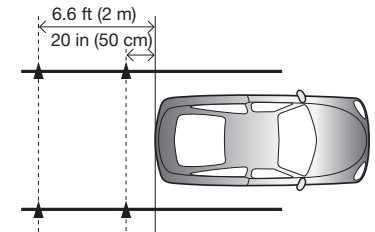

MEMO:

- We recommend making an X mark using packaging or similar tape that is easily visible from the driver's seat.

4 Display the guidelines. → P.40

5 Guideline Adjust

6 Select the four guideline points you want to adjust.

7



Align the marks you made in step 3.

MEMO:

- *Continuously holding down* *allows you to move all the guide points together.*

8

Repeat steps 6 and 7 to align all guide points with the marks you made in step 3.

9

Back

This saves the settings and displays the regular image in the rear camera.

Displaying the quasi bumper line

The rear bumper is sometimes not displayed in the rear camera image depending on where the rear camera is installed. In cases like this, you can display a quasi bumper line so that you can park your vehicle while checking the position of the rear bumper in a quasi manner.

1

Touch the screen while the rear camera image is displayed.

2

Quasi Bumper

If five seconds elapses without you touching the screen, **Quasi Bumper** will be hidden.

3

Check

The quasi bumper line is displayed.

Adjusting the quasi bumper line

When adjusting the quasi bumper line, marks must be drawn on the ground. Prepare tools for drawing lines on the ground, such as duct tape.

WARNING

- Before adjusting the quasi bumper line, first stop at a safe location.
- Before getting out of the vehicle and marking the ground, be sure to turn the engine key to the “OFF” position.
- Remember that the quasi bumper line is solely for reference. During actual driving, be sure to check the safety of the area around you yourself.

1

Mark straight marks on the ground at the vehicle rear + 8 in (20 cm) position.

2

Display the quasi bumper line.

3

Quasi Bumper Adjust

4



Adjust the upper and lower positions of the quasi bumper lines to match the mark made in step 1.

5

Back

This saves the settings and displays the regular image in the rear camera.



Using the rear seat monitor (NX604 only)

Passengers can also enjoy video in the rear seats if you install an additional rear seat monitor (sold separately).

Preparations

- To connect a rear seat monitor to the unit, the rear seat monitor and rear seat monitor installation attachment are required.

Attention

- *Install the rear seat monitor at a location where the driver cannot see video images while he or she is driving.*

Video images displayable on the rear seat monitor

The following video images can be displayed on the rear seat monitor. Note, however, that the control bar and other aids are not displayed on the rear seat monitor. Video images are displayed regardless of whether or not you are driving or the car has stopped.

- DVD/DivX
- AUX
- iPod video

Nothing will be displayed on the rear seat monitor if a source other than DVD, DivX, AUX, and iPod video is selected.

The image currently being played is displayed on the rear seat monitor even while the navigation screen is displayed on the unit's screen.

Various settings

You can set various operations, sound quality and video image quality relating to the unit.

Notice

- *While you are driving, selectable items are limited.*

Making general settings for the unit

1

**System Language:**

This switches the language of text that is displayed in screens and messages. (Default: English)
When the language is switched, the unit is automatically restarted and the language is switched to the newly selected language. Navigation screens are dependent on the language setting of the navigation. (NX604 only) → “Owner’s manual - Navigation”

Main Menu Icons:

This switches the icon display of the main menu screen. (Default: Simple)
When **Active** is selected, the icons in the main menu become animated. When **Simple** is selected, the icons become still images.

Shortcut Menu:

This assigns frequently used functions to shortcut keys. → P.42

Illumination Color:

This sets the illumination color of the operation panel. (NX604 only)
→ P.42

Button Beeps:

This selects whether or not to sound a beep when a button or a touch key is operated. (Default: ON)

Time:

This manually adjusts the time in 1-minute units. (FX503 only)

Clock Format (24h):

This switches the clock display format between the 24-hour display and 12-hour display. (Default: OFF)

Antitheft Indicator:

When the engine key is turned off, the illumination on the unit blinks to indicate that the antitheft function is activated. (Default: OFF)

Antitheft Activation:

Security functions are activated if the main unit is stolen, once it is removed a password must be input to start it. (Default: OFF)

Antitheft PW.:

This is for changing the antitheft activation password. → P.42

System Software:

This is for displaying the software version and product information on the unit and for updating the program.



Check connectivity:

Check the connectivity of various devices with the unit.
When the connectivity is confirmed, **OK** is displayed on the list screen.

Reset to Factory Setting:

This returns the data and settings on the unit to their factory defaults.
→ P.56

Setting the Shortcut Menu



- 1 **MENU** ►  ► 
- 2 **Set** at [Shortcut Menu]
- 3 **Drag the icon you want to register to the shortcut keys to the shortcut key registration area.**
With your finger touching the icon, do not release your finger and slide the icon across the screen to where you want to register it and then take your finger away from the screen. This operation is called dragging.





Shortcut registration area

The icon you dragged is registered to the shortcut keys. (max.5 icons)

Setting the illumination display color on the control panel (NX604 only)

- 1 **MENU** ►  ► 
- 2 [Illumination Color] settings key
- 3 **Select the color.**
Color1 - Color9:
Select from the prepared colors.
Scan:
Switch the illumination display color on the operation panel in order Color1 to 9.



❑ **This sets the desired illumination color**

- 1 **MENU** ►  ► 
- 2 [Illumination Color] settings key
- 3 **User 1** , **User 2** , or **User 3**
- 4 **Adjust**
- 5 **Set the illumination display color.**
Set the color on the color palette or by adjusting the numerical values.
The colors you have set can be checked in the Sample area.
Reset to Factory Setting:
This resets the settings to their factory defaults.

From the next operation onwards, the same settings can be accessed at step 3.

Setting the password for antitheft activation**— Attention —**

- When the unit is transferred or resold, be sure to cancel the password.
- If you enter the wrong password three times, entry of the password is disabled for a fixed period of time. Make a note of the password and keep it in a safe place so you do not forget it.

- 1 **MENU** ►  ► 
- 2 **ON** at [Antitheft Activation]
- 3 **Read the precautions** ► **Check**
- 4 **Enter the 4-digit password**
► **OK**
- 5 **Enter the password again** ► **OK**
A message is displayed and the password is saved.

To change the password, touch **Set** at [Antitheft PW.] and enter the password, and then enter the new one.
To cancel the Antitheft Activation setting, touch **OFF** at [Antitheft Activation] and enter the password.

Adjusting Bluetooth settings



2 Set the Bluetooth connection using the keys.

BT Devices Connection:

This toggles the Bluetooth function on/off, and registers, switches and deletes Bluetooth-compatible devices. → P.31

In-Car-Device setting:

Renames the device already set to the unit and changes the PIN. → P.43

❑ Renaming devices and changing the PIN

Notice

- Device addresses cannot be changed.



2 Set at [In-Car-Device setting]

3 Name or PIN

4 Enter the new name (default: CAR-BT) or PIN (default: 1234).

5 Set

Setting sound quality

Make sound quality related settings.



2 Set sound quality using the keys.

Balance/Fader:

This adjusts the volume balance of the speakers at the front, back, left, and right. (Default: 0) → P.43

Loudness:

This enhances treble and bass to suit the volume. (Default: OFF)

Graphic Equalizer:

This is for selecting the desired sound quality from the preset sound quality effects memory. (Default: Flat) → P.43
Create and save a sound quality effects memory. → P.43

Sound Restorer:

Interpolating the treble region of compressed audio brings the sound quality closer to the original sound before it was compressed. (Default: OFF)

Volume Smoother:

This detects differences in volume level based on the source being played and differences in level in each scene in a film, and automatically adjusts the volume level. (Default: OFF) → P.44

Virtual Bass:

Adding a bass component in the bass region enhances bass to enable a richer bass sound. (Default: OFF)

Vocal Image Control:

Adjusting vocal volume balance moves the vocal image to the front, back, left, and right. (Default: 0) → P.43

Sub Woofer Control:

This adjusts the output level of a connected sub woofer speaker. (Default: 0)

High Pass Filter:

This sets the cutoff frequency of the high pass filter for the front and rear speakers. (Default: Through)

Low Pass Filter:

This sets the cutoff frequency of the low pass filter for the sub woofer. (Default: 120Hz)

❑ Adjusting speaker volume balance and vocal volume balance

Balance/Fader adjusts the overall volume balance. Vocal Image Control adjusts vocal which is oriented in the center of the stereo sound source and the volume balance of components such as main musical instruments. Use these settings to adjust the left/right balance and depth of vocals to suit the speaker configuration and number of passengers.



2 Set at [Balance/Fader] or [Vocal Image Control]

3 Touch and set , , , and .

Reset to Factory Setting:

This returns the currently set adjustment settings (volume balance or Vocal Image Control) to their factory settings.

❑ Selecting and setting sound quality effects memory

You can select and set your preferred sound quality



2 Set at [Graphic Equalizer]

3 Select the sound quality.

Bass.B:

Enhances bass.

High.B:

Enhances treble.

Acoustic:

Enhances the mid level (human voice).

Impact:

Enhances the low and high regions.

Smooth:

Creates a soft, gentle feel.

Flat:

Turns the sound source and equalizer off.

❑ Setting preferred sound quality effects



2 Set at [Graphic Equalizer]

3 User 1 , User 2 , or User 3

4 Adjust

5 Set the sound quality effect.



This adjusts the band setting for each of the base, mid and treble regions.

Reset to Factory Setting:

This resets the settings of each band to "0".
From the next operation onwards, the same settings can be accessed at step 3.

❑ Adjusting the Volume Smoother

Volume Smoother functions to automatically adjust differences in volume level of all kinds of music sources and scenes and compensate volume. When Volume Smoother is on, the volume level in audibility of audio signals is monitored and adjusted at all times, and differences in volume level are suppressed to a fixed range to enhance listening pleasure. Differences in audio level occur in the following kinds of instances:

- Difference in audio level between listening to CDs and the radio
- Difference in audio level between quiet scenes and scenes with loud noises such as explosion scenes when watching films on DVD, etc.

When Volume Smoother is on, each source can be listened to even in the above cases at an easy-to-listen volume level without having to operate the volume level. The "volume compensation" effect can be altered by adjusting the Volume Smoother level. The volume compensation effect is increased in the order "Low"→"Mid"→"High".

- 1
- 2 [Volume Smoother] settings key
- 3 **OFF** , **Low** , **Mid** , or **High**
- 4 **Close**
The Volume Smoother level is adjusted.

MEMO:

- When listening to sources such as DVDs having a large difference in volume level, we recommend setting the Volume Smoother level to "Mid" or "High".
- The Volume Smoother can be set to each of video sources and other sources. When a source is switched, the Volume Smoother is switched to the value set for the new source.

Setting screens

- 1
- 2 Set image quality using respective keys.
Day/Night Mode:
Switch to the day screen or night screen.
The screen can be made easier to view by manually switching to the day screen, for example, when the headlights are lit during the day and the screen is difficult to view. When **Auto** is selected, the screen automatically switches to the night screen when the parking light is lit.
MEMO:
 - When the engine key is turned to the "OFF" position then back to the "ON" position, **Auto** is set.**Brightness:**
Adjust the image quality by or .
Image quality adjustments can be set for both the day and night screens.
During Smartphone linking, the image quality of the smartphone application screen can be adjusted.

Other settings

- 1
- 2 Set the functions using respective keys.
DivX® VOD:
Displays the code required for setting DivX VOD content to a playable state (Register state) or unplayable state (Deregister state). (NX604 only) This also changes the state (Register state/Deregister state) of the device being played.
Device Type:
Sets the smartphone to be connected when Smartphone linking is performed. (Default: iPhone)
Browser cache:
Deletes the Browser cache. (NX604 only)
Use this function when errors occur on Intelligent VOICE or Intelligent VOICE does not work correctly even though the smartphone is connected to the unit correctly.

Troubleshooting

The following kinds of symptoms sometimes are not malfunctions. First check the following points before you ask for repair of the unit.

Navigation related (NX604 only)

Symptom	Remedy
GPS reception is not displayed.	Connect the antenna cable if it is not connected.
	Reception can be enabled by removing obstructions, etc.
	Positioning is sometimes not possible when the placement of the satellite is poor.
	Display appears by driving the vehicle.
Own vehicle is out of position. (Other electrical components are attached)	Move attached electrical components sufficiently away from the unit and the GPS antenna wire.

Audio related

	Symptom	Remedy
Radio	There is lots of noise.	Tune to the correct frequency. → P.12
	Stations cannot be tuned to automatically.	Manually select the station. → P.12

CD/DVD/MP3/WMA (NX604 only)	No sound is output after a disc is inserted or the disc is immediately ejected.	Load the disc with its label surface face up. CDs recorded as CD-R/RW or copy-protected CDs sometimes cannot be used. Check the CD in use again. Finalize the disc so that it can be used. MIX MODE CDs cannot be played, eject them. 8 cm discs cannot be played, eject them.
	Cannot remove the disc even by pressing the eject button.	Consult your retailer.
	Skipping Sound contains noise.	The disc might be dirty. Wipe the disc with a dry cloth. Replace with an unscratched disc.
	No sound is output after the power is turned on.	There might be water drops on the lens inside. Leave with the power on for about one hour to let it dry.
	Cannot insert the disc.	Check to see if other discs are not loaded. → P.10
	Jumping/skipping of MP3/WMA.	Change the encoder software and try recording again.
	MP3/WMA sound is poor.	Try recording at a higher sampling frequency or bitrate. → P.50
	MP3/WMA skipping.	Play on a personal computer to see if skipping occurs.

● Audio related		
CD/DVD/MP3/WMA (NX604 only)	Some files or folders cannot be played.	When making files, delete data sections other than music data. Playing is not possible when tunes are recorded to a folder having eight or more layers, or the number of folders exceeds the maximum of 255 (including roots) and the number of files exceeds 512 (maximum of 255 files in one folder). Also, files cannot be played if the first character in the folder name or file name is a dot (.).
	Incorrect display.	Change the write setting to ISO9660-LV1 or LV2 and try writing again.
	MP3/WMA recorded to CD Extra cannot be played.	Play a CD to which an MP3/WMA file is written to the 1st session of the CD Extra.
	The "Disc read error." screen is displayed.	Load the disc with its label surface face up.
iPod	List is not displayed.	The list sometimes is not displayed since the number of items displayed in the list is limited. This is not a malfunction.
	iPod operations are not possible.	Cancel the USB connection, set the iPod to play, and reconnect it.
		Cancel the USB connection, reset the iPod, and reconnect it.
	iPod audio is not output.	Perform operations from the iPod, and switch the settings (audio output) from Bluetooth (CAR-BT) to the Dock connector. Also, remove the iPod from the unit and reconnect it.

microSD card/USB memory	Cannot play from microSD card.	Check to see if the microSD card can be used on the unit. → P.50
	Cannot insert the microSD card.	Insert the microSD card into the loading slot with its label surface face up (NX604). Insert the microSD card into the loading slot with its label surface face down (FX503).
	Cannot play from USB memory.	Remove the USB memory and insert it again. Check to see if the USB memory can be used on the unit. → P.50
	Skipping.	Play on a personal computer to see if skipping occurs.
	Poor sound.	Try recording at a higher sampling frequency or bitrate. Check audio files that can be played on the unit. → P.50
	Some files or folders cannot be played.	Playing is not possible when tunes are recorded to a folder having eight or more layers, or the number of folders exceeds the maximum of 512 (including roots) and the number of files exceeds 8000 (maximum of 255 files in one folder). Use the personal computer to reconfigure so that the number of folders and files are within their respective limits. Also, files cannot be played if the first character in the folder name or file name is a dot (.).
	Wrong number of MP3/WMA files.	Delete files other than MP3/WMA.
	Audio play continues but the play time stops.	When a file exceeding 1 GB is played, the display of the play time sometimes stops. This is not a malfunction.

Bluetooth audio	Cannot connect.	Correctly connect the Bluetooth-compatible device. → P.31
		Turn the audio device on.
		The unit sometimes cannot be connected or skipping sometimes happens depending on distance and where the Bluetooth Audio is installed. Situate the audio device so the reception is as good as possible.
	Audio is not played.	Use audio devices that are compatible with AVRCP.
		Cancel the connection and reconnect.
		Start up the player for the connected audio device.
	The track name, artist name and album name are not displayed.	Use audio devices that are compatible with AVRCP Ver.1.3. Restart the player on the Bluetooth Audio device side.
	Sound is no longer output from the connected audio device.	Specify the Bluetooth audio device again from the portable device's setting screen.

Smartphone linking

Symptom	Remedy
An error message is displayed and Smartphone linking is not possible.	Cancel the sleep state on the smartphone.
	Install the linking-compatible application and application management software "Smart Access" on the smartphone beforehand.
	Start up the linking-compatible application on the smartphone beforehand.
	Reconnect the smartphone in a place with good reception.
	Disconnect the connector cable and reconnect it.
	Check the OS setting on the unit.
	In the case of Android smartphones, enable the HDMI output setting on the smartphone. Next, check what resolutions of HDMI output are possible on the unit. Also, check to see if the smartphone supports Bluetooth SPP and HID profiles.
Applications cannot be updated even by touching "!" on the Smartphone linking screen on the unit.	For reasons of safety, the application cannot be updated during Smartphone linking. Disconnect the connector cable and update the application on the smartphone.
The Smartphone linking screen is not displayed, the screen is black, or an error message appears.	Check to see if the connector cable is connected properly. In the case of Android smartphones, check to see if the HDMI output resolution of your smartphone can be displayed on the unit.
The error screen is displayed in the Smartphone linking screen after an outgoing call is made.	In some versions of the smartphone OS, Smartphone linking is sometimes canceled after an outgoing call is made. Start up Smart Access from the Home screen by operating on the smartphone.

● Smartphone linking

The error screen is displayed while the application is in use.	Use the smartphone in a place with good reception.
The Smartphone linking that could previously be used can no longer be used.	Check to see if the smartphone is turned on. Also, cancel the sleep state on the smartphone.
The smartphone appears not to be operating.	Disconnect the connector cable and reconnect it. Or, turn the smartphone off then back on again.
Audio cannot be heard even if the unit's volume is increased.	The volume may be set to zero on the smartphone. Increase the volume on the smartphone.

Rear camera

Symptom	Remedy
Camera image is not displayed.	Check to see if the gear select lever is in the R position.
	The screen may be difficult to view in bright or dark locations, however this is not a malfunction.
Camera image is poor.	Lightly wipe the front lens cover, for example, with a soft cloth moistened with water.
The guidelines of the rear camera are not displayed.	Touch the screen with the vehicle in a stopped state, and touch Guideline Display .

Others

Symptom	Remedy
The screen is difficult to view just after the power is turned on.	This is due to the properties of the LCD panel, and is not a malfunction. Please wait.
The screen is not displayed.	When the screen is hidden, it can be redisplayed by pressing the rotary volume knob (NX604) or the POWER (FX503). → P.11
	The fuse might be blown. Consult with your dealer.
The screen flickers.	Use electrical components (cellphones, wireless radios, minus ion generators, etc.) that generate electrical noise as far away from the unit as possible. Refrain from using these components when the unit might be adversely influenced even when they are used far away.
The screen becomes dark (or is partially dark) or disappears while the unit is in use.	Stop the vehicle at a safe location, turn the engine key to the "OFF" position and then to the "ACC" or "ON" position. If this does not rectify the problem, a probable cause might be an LCD backlight malfunction or erroneous operation of the unit. Consult with your dealer.
Buttons sometimes do not react immediately after the unit is started up.	Wait a while before retrying the operation.
Some menus cannot be operated while driving.	Stop the vehicle in a safe place and apply the side brake before doing any operations.

Discs that can be used on the unit (NX604 only)

— Attention —

- Do not use the following discs since there is the possibility that they might get scratched or can no longer be removed.
 - 8 cm CD
 - Non-standard shaped discs
 - Dual discs
 - Discs with labels on them
- Do not stick labels on disc surfaces or write on them with a pencil or pen, for example.
- When handling discs, take care not to leave fingerprints or scratches on the surfaces.
- Do not use discs if there is any glue or paper left on them from adhesive labels. If discs like these are inserted into the unit in this state, they may jam or cause a malfunction.
- Do not store discs in the following places:
 - Places subject to the direct sunlight
 - Humid or dusty places
 - Places subject to direct heat from heating apparatus

CDs that can be played

- Music CDs
- CD-TEXT discs
- CD-Extra discs
 - * Excluding music CDs
- Super Audio CD
 - * Only the CD layer of hybrid discs
- Discs recorded in the correct format on a personal computer*¹
- CD-R and CD-RW discs for music recorded on an music CD recorder*²
- Copy-protected CDs*³
- DivX discs
 - * 1 These sometimes cannot be played depending on the application software settings or environment. For details, contact your dealer of the application software.
 - * 2 These sometimes cannot be played normally. Or, CD-RW discs may take longer than regular CDs or CD-Rs to start playing after the disc has been inserted.
 - * 3 These sometimes cannot be played.

CDs that cannot be played

- MIX MODE CD
- Discs other than CD-DA (e.g. over burned CDs)
- DTS CD
- Video CD
- CD-R and CD-RW discs that have not been finalized

DVDs that can be played

- Discs with  mark
- Discs whose region number is “1” or “ALL”
- DivX discs

Commercially available DVD videos can be played on the unit.

□ Note on region numbers of DVD video discs

The DVD video system assigns a region number to DVD players and DVD discs by sales area.

The DVD video region number playable in this system is marked on the disc jacket as shown below.



□ DVD Video Features

This unit provides the following functions in addition to the high image quality and sound quality of DVD video.

MEMO:

- The functions described in this section differ depending on the DVD video disc. Refer to the instructions provided with the DVD video.
- Some disc functions may operate differently from described in this manual.

Multi-sound function

DVD video can store up to 8 languages for one film; select the language of your preference.

- The languages stored on the disc are indicated by the icon shown below.



Multi-angle function

A DVD video that is filmed from multiple angles allows you to select the angle of choice.

- The number of recorded angles is indicated by the icon shown below.



Subpicture (subtitles) function

A DVD video can record subtitles for up to 32 languages and you can select the language of the subtitles you wish to see.

- The number of recorded subtitle languages is indicated by the icon shown below.



Multi-story function

When a DVD video contains more than one story for a film, you can select the story you wish to enjoy. The operation procedures vary with the disc; observe the instructions for selecting a story provided during playback.

DVD menu

DVD Menus can be called up during DVD video playback to perform menu setting.

DVDs that cannot be played

- Discs whose region number is other than "1" or "ALL"
- Discs recorded in packet write mode
- Discs recorded in hi-vision at home
- DVD-RAM
- * DVD-R, DVD-RW, DVD+R or DVD+RW recorded and finalized in the video mode sometimes cannot be played due to device specifications or environment settings, disc characteristics, or scratches and dirt on the disc.

microSD cards/USB memory that can be used on the unit

Use the commercially available microSD cards/USB memory listed below on the unit.

- Recording media
microSD card*/USB memory
 - * High Capacity is supported up to Class10, and eXtended Capacity is not supported.
- Recording format
FAT16, FAT32 compatibility
- Files with the .MP3 or .WMA extension (Do not append files other than MP3 or WMA with the ".MP3" or ".WMA" extension since this may cause noise or malfunction.)
- Files with of 2 GB or less
Note, however, that when a file exceeding 1 GB is played, the display of the play time sometimes stops.
- When purchasing microSD cards, select a commercially available product that is compliant with standards.
- Recording media incompatible with microSD cards are not supported.

microSD card handling precautions

- Insert and remove the microSD card after turning off the unit, because the microSD card might get damage.
- Do not fold or bend or drop microSD cards.
- Do not wipe microSD cards with paint thinner, benzene or other organic solvents.
- During reading or writing, do not remove microSD cards from the unit or turn the engine key to the "OFF" position. Doing so might result in damage or loss of recorded data.
- When using microSD cards on the unit, also read the warning and cautionary instructions provided by the manufacturer of the personal computer and peripheral devices.
- Do not leave microSD cards at places where they are likely to get hot, such as on the dashboard or at places subject to direct sunlight. Doing so might cause them to become deformed or malfunction.
- Do not touch the terminal surface of microSD cards with your hands or metal objects.
- Do not optimize microSD cards.
- We recommend backing up important data stored on microSD cards.

Audio files that can be played on the unit

CD-ROM, CD-R, CD-RW, DVD-R, DVD-RW, DVD+R, DVD+RW (from here on, NX604 only), microSD cards, and USB memory recorded with MP3 or WMA files can be played on the unit.

MP3 stands for MPEG Audio Layer 3, and is a standard format relating to audio compression technology.

MP3 files hold music data compressed to about 1/10 of its original size.

WMA stands for Windows Media Audio, and is an audio compression format original to Microsoft Corporation.

MP3 and WMA discs (NX604 only) and files that can be played are as follows:

- Recording media*1:
CD-ROM, CD-R, CD-RW, DVD-R, DVD-RW, DVD+R, DVD+RW
- Recording format:
CD: ISO9660 level 1/level 2, Joliet, Romeo
DVD: UDF (Ver1.02/1.5/2.0), UDF-bridge
- Packet writing is not supported.
- Files with the .MP3 or .WMA extension (Do not append files other than MP3 or WMA with the ".MP3" or ".WMA" extension since this may cause noise or malfunction.)

- * 1 Up to 40 sessions on discs recorded with multi-session support can be played. (Multi-session is not supported on DVD-R/RW and DVD+R/RW.)

MEMO:

- Display of the play time sometimes deviates when MP3 and WMA VBR files are played, or fast-forwarded or rewind.

MP3 files

- ID3-Tag: Display of Ver1.x, 2.x album (displayed as Disc Title), track (displayed as Track Title) and artist (displayed as Track Artist) are supported.
- Emphasis: Supported only when playing 44.1 kHz files
- Playable sampling frequencies
MPEG1: 44.1 kHz/48 kHz/32 kHz
MPEG2: 22.05 kHz/24 kHz/16 kHz
MPEG2.5: 11.025 kHz/12 kHz/8 kHz
* In terms of audio quality, 44.1 kHz or higher is recommended.
- Playable bitrates
MPEG1: 32 kbps to 320 kbps/VBR
MPEG2: 8 kbps to 160 kbps/VBR
MPEG2.5: 8 kbps to 160 kbps/VBR
* In terms of audio quality, 128 kbps or higher is recommended.
- Jumping sometimes occurs with files recorded at the following sampling frequencies and bitrates:
Sampling frequency: 16 kHz or less
Bitrate: 8 kbps or less
- MP3i (MP3 interactive) and mp3 PRO format are not supported.
- Skipping sometimes occurs depending on the data content of the MP3 file.
- Files with a short recording time sometimes cannot be played.
- When discs (NX604 only)/microSD cards/USB memory contain large data other than music data, tunes sometimes cannot be played.
- Display of the play time sometimes deviates when low bitrate files are played, or fast-forwarded or rewind.
- When TAG information is changed in TAG editing software other than Windows Media Player or iTunes®, TAGs are sometimes not displayed properly.

WMA files

- Characters in album names sometimes are corrupted depending on the software on the PC where the names were made.
- WMA9 Professional, WMA9 Voice and WMA9 lossless format are not supported.
- When discs (NX604 only)/microSD cards/USB memory contain large data other than music data, tunes sometimes cannot be played.
- Display of the play time sometimes deviates depending on the data content of the WMA file. Also, skipping or jumping sometimes occurs partially or noise sometimes occurs depending on the bitrate.
- The sampling frequency and bitrates that can be played differ according to the recording version. Refer to the table below.

Bitrate (kbps)	Discs	microSD cards/USB memory
	Sampling frequency (kHz)	
320	44.1	-
256	44.1	-
192	48/44.1	44.1
160	48/44.1	44.1
128	48/44.1	44.1
96	48/44.1	44.1
80	44.1	44.1
64	48/44.1	44.1/32
48	44.1/32	44.1/32
44	-	32

Bitrate (kbps)	Discs	microSD cards/USB memory
	Sampling frequency (kHz)	
40	32	32
36	-	32
32	44.1/32/22.05	48/44.1/32/22.05
22	22.05	32/22.05
20	44.1/32/22.05/16	44.1/32/22.05/16
16	22.05/16	22.05/16
12	16/8	16/8
10	16/11.025	16/11.025
8	11.025/8	11.025*/8*
6	8	8*
5	8	8*
VBR	44.1	48/44.1

* Jumping sometimes occurs.

Folder structure of discs


The maximum number of folders, files and tracks on discs are as follows:

Folders: 255 (including root)

Files: 512

Tracks: 255 per folder

The following is an illustration of a disc recorded with MP3 and WMA files (example, layers 1 to 4 of the folder hierarchy).

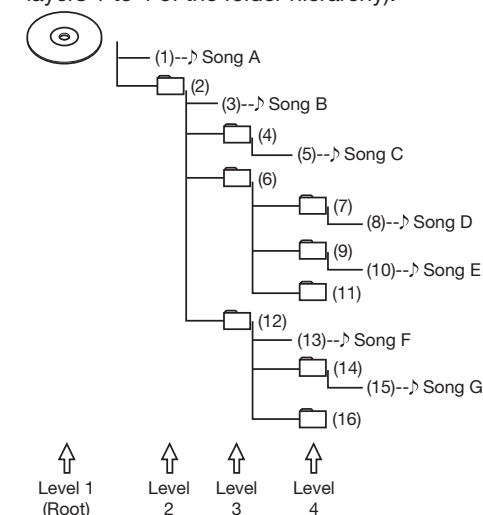

Folders without tunes are skipped to determine the play order.

The play order in the case of the above figure becomes (1)→(3)→(5)→(8)→(10)→(13)→(15).

— Notice

- In the case of discs, playing files down to eight layers (including the root directory) is supported, though it may take time until play starts when the disc has lots of folders.

Folder structure of microSD card/USB memory

Music data can be recognized in eight layers of the folder hierarchy (excluding the root) on both microSD cards and USB memory. Only MP3 and WMA music data in these layers is recognized. There is no designation as to which layer data must be placed.

Limit the total number of characters in folder names and file names to 250 characters for both 2-byte and 1-byte characters.

MEMO:

- Folders not containing MP3 and WMA files are not recognized.
- In the case of microSD cards and USB memory, play of files down to eight layers (including the root directory) is supported, though it may take time until play starts when the card or memory has lots of folders.
- When a folder contains 255 or more tracks, the tracks that are recognized change according to the order in which data is written to the personal computer.
- When a folder contains files other than MP3 and WMA, the number of tracks that are recognized may be reduced.
- The maximum number of folders, files and tracks that can be recognized are as follows:
 Folders: 512
 Files: 8,000
 Tracks: 255 per folder
- When there are files on the 1st layer, they are placed in the "MASTER FOLDER" in the folder list screen.

Notes for playing back MP3 and WMA on the unit

- When folders, files and tracks are recorded beyond their maximum numbers, folders, files and tracks over the respective maximum number are not recognized. Also, the display order of folders and files on the unit differs from the display on a personal computer.
- Files cannot be played if the first character in the folder name or file name is a dot (.) or if the folder or file name is too long.
- When displaying MP3 or WMA file names, part of the extension (./m/.mp/.W/.WM) may be left behind following the file name depending on the length of the file name. If this happens, adjust the length of file names you create. (The length of file names on which part of the extension is left behind depends on the file system you are using.)
- Music files protected by copyright on both microSD cards and USB memory cannot be played on the unit.

Video files that can be played on the unit (NX604 only)

CD-ROM, CD-R, CD-RW, DVD-R, DVD-RW, DVD+R, and DVD+RW recorded with DivX content can be played on the unit. DivX discs and files that can be played are as follows:

- Recording media:
CD-ROM, CD-R, CD-RW, DVD-R, DVD-RW, DVD+R, DVD+RW
- Recording format:
UDF (Ver1.02/1.5/2.0), UDF-Bridge, ISO9660 Level1, ISO9660 Level2, Joliet, Romeo
- Packet writing is not supported.
- Files with the .DivX or .AVI extension (Do not append files other than DivX with the ".DivX" or ".AVI" extension since this may cause noise or malfunction.)
- Profile: DivX Home Theater Profile
- Container format: AVI
- Version: Ver.1.0 supported (Ver.2.0 or later not supported)

Video codec	DivX Ver.3, Ver.4, Ver.5, Ver.6
Bit rate kbps	4854 or less
Resolution	Play at 30 fps: 32 x 32 to 720 x 480 Play at 25 fps: 32 x 32 to 720 x 576

Audio codec	MP3(MPEG1/2 AudioLayer-3)	MPEG-BC(MPEG1/2 AudioLayer-2)
Bit rate (kbps)	16~320	32~384*
Sampling rate (kHz)	16,22.05,24,32,44.1,48	16,22.05,24,32,44.1,48
Audio Coding mode	1/0,2/0,Dual,Mono,MP3,Surround	1/0,2/0,Dual Mono

Audio codec	MPEG2.5	AC3
Bit rate (kbps)	6~160	32~640
Sampling rate (kHz)	8,11.025,12	32,44.1,48
Audio Coding mode	1/0,2/0,Dual,Mono	1/0,2/0,3/0,2/1,3/1,2/2,3/2,Dual Mono

Audio codec	LPCM
Bit rate (kbps)	8,11.025,12,16,22.05,24,32,44.1,48
Quantization bit rate	8,16
Audio Coding mode	1/0,2/0

* Playback may not work together with some audio coding modes.

Country code

Name of country	Country code	Entry number
Bermuda	BM	6677
Canada	CA	6765
United States	US	8583

Daily care and handling

Daily care and handling of main unit

Pay attention to the following points when performing daily care on the main unit.

- When performing daily care on the main unit, wipe lightly with a soft, dry cloth. If dirt is stubborn, wipe lightly with a soft cloth moistened with a small amount of neutral detergent diluted with water, and then finish by wiping with a dry cloth. If liquid gets into the cracks of the device, this may cause a malfunction.
- * When performing daily care on the main unit, never use benzene or paint thinner, car cleaner, polish spray, or similar fluids. Doing so might cause fire. Also, leaving rubber or plastic products in contact with the cabinet for long periods of time may cause stains.
- Occasionally wipe off any dust that adheres to the LCD display with a soft, dry cloth.

Warranty and customer support

Warranty

This product is provided with a Warranty. Be sure to check the information and keep the form in a safe place.

Warranty period

Check the warranty period written on the Warranty.

Repair after end of warranty period

If performance can be maintained by repairing this product, we shall repair it for a charge in accordance with the customer's wishes.

Specifications

Navigation (GPS) unit (NX604 only)

Reception frequency: 1575.42 MHz
C/A code
Sensitivity: -130 dBm or less
Number of channels: Parallel 13

LCD monitor

Screen size: 6.2"
Display method: Transmission type
TN liquid crystal panel
Drive method: TFT (thin-film transistor)
Active matrix
Drive method
Number of pixels: 1,152,000
[800 (H) x 480 (V) x 3 (RGB)]

CD player (NX604 only)

Frequency characteristics: 20 Hz to 20 kHz
Signal-to-noise ratio: 80 dB
Total distortion factor: 0.05% (1 kHz)

DVD player (NX604 only)

Frequency characteristics: 20 Hz to 20 kHz
Signal-to-noise ratio: 80 dB
Total distortion factor: 0.05% (1 kHz)

FM tuner

Reception frequency: 87.9 MHz to 107.9 MHz
Practical sensitivity: 20 dBμV

AM tuner

Reception frequency: 530 kHz to 1,710 kHz
Practical sensitivity: 40 dBμV

Audio unit

Rated output: 18 W x 4
(10%, 4 Ω)
Max. momentary output: 47 W x 4
Compatible impedance: 4 Ω

Bluetooth unit

Reception frequency: 2402 MHz to 2480 MHz
(1 MHz increments)
Reception sensitivity: -70 dBm or less
Standard: Version 2.1+EDR

Common sections

Rated voltage: 14.4 V
(permissible voltage range 10.8 to 15.6 V)
Grounding method: Minus ground
Current consumption: Approx. 4 A (at 1 W)


Power Output: 18 Watts RMSx4 Channels
at 4 Ohms and $\leq 1\%$ THD+N
Signal to Noise Ratio: 76 dBA
(reference: 1 Watt into 4 Ohms)



Trademarks

- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited. Use of this product by the customer is restricted to play program materials to which the Rovi copyright protection process has been applied. (NX604 only)
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. (NX604 only)



-  is the trademark of DVD Format/Logo Licensing Corporation. (NX604 only)
- "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPhone, iPod, iPod classic, iPod nano, iPod touch, and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries. Lightning is a trademark of Apple Inc.

Made for



iPod




iPhone

- DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license. DivX Certified® to play DivX® video, including premium content. Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274
ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.
ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration. (NX604 only)



- HD Radio™ Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp. (NX604 only)



- microSDHC Logo is a trademark of SD-3C, LLC. 
- Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.



- Pandora®, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. used with permission. Pandora is currently only available in the United States, Australia and New Zealand. If you have any issues with the Pandora application on your mobile phone, please direct them to pandora-support@pandora.com.



- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Clarion Co., Ltd, is under license.



- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



- Android is the trademark of Google Inc.
- © Clear Channel Broadcasting, Inc.

- How to get source code that is considered open source.
This unit uses open source software.
If you want to get this software's source code, you can download it from our website.
Refer to the following website about getting the source code.
<http://www.clarion.com/us/en/open-source/index.html>

About Total Traffic Network (NX604 only)

This is the original text in English.

© Clear Channel Broadcasting Inc.
See Clarion.com for service terms and conditions.

A.Total Traffic Network, a division of Clear Channel Broadcasting, Inc., holds the rights to the traffic incident data and RDS-TMC network through which it is delivered. You may not modify, copy, scan or use any other method to reproduce, duplicate, republish, transmit or distribute in any way any portion of traffic incident data. You agree to indemnify, defend and hold harmless Inrix, Inc. and Clear Channel Broadcasting, Inc. (and its affiliates) against any and all claims, damages, costs or other expenses that arise directly or indirectly out of (a) your unauthorized use of the traffic incident data or the RDS-TMC network, (b) your violation of this directive and/or (c) any unauthorized or unlawful activities by you in connection herewith.

B.Total Traffic Network traffic data is informational only. User assumes all risk of use. Total Traffic makes no representations about content, traffic and road conditions, route usability, or speed.

C.THE LICENSED MATERIAL IS PROVIDED TO LICENSEE "AS IS" AND "WHERE IS". TOTAL TRAFFIC NETWORK, INCLUDING, BUT NOT LIMITED TO, ANY AND ALL THIRD PARTY PROVIDERS OF ANY OF THE LICENSED MATERIAL, EXPRESSLY DISCLAIMS, TO THE FULLEST EXTENT PERMITTED BY LAW, ALL WARRANTIES OR REPRESENTATIONS WITH RESPECT TO THE LICENSED MATERIAL (INCLUDING WITHOUT LIMITATION, THAT THE LICENSED MATERIAL WILL BE ERROR-FREE, WILL OPERATE WITHOUT INTERRUPTION OR THAT THE TRAFFIC DATA WILL BE ACCURATE), EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING FROM A COURSE OF DEALING OR USAGE OF TRADE.

D.TOTAL TRAFFIC NETOWRK WILL NOT BE LIABLE TO YOU FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, EXEMPLARY, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST REVENUES, ANTICIPATED REVENUES, OR PROFITS RELATING TO THE SAME) ARISING FROM ANY CLAIM RELATING DIRECTLY OR INDIRECTLY TO USE OF THE TRAFFIC DATA, WHETHER A CLAIM FOR SUCH DAMAGES IS BASED ON WARRANTY, CONTRACT, TORT (INCLUDING, WITHOUT LIMITATION, NEGLIGENCE OR STRICT LIABILITY).

Disposal, transfer and resale of this product

The following describes the cautions when reselling or transferring the unit to a third party or disposing of it.

Deletion of data from the unit

When reselling or transferring the unit to a third party or disposing of it, please pay attention to the following points and please delete all data at your own responsibility.

To protect your privacy...

Initialize (delete) all data including individual information saved to memory by following the procedure below.




To protect copyright...

Initialize (delete) the data saved in memory by following the procedure below. There is the risk that copyrighted data might infringe on copyright laws if the unit is transferred (for a charge or free of charge) or resold with data still left on it without the consent of the copyright holder.

* Clarion bears no responsibility for damages to the customer due to leakage of leftover data, the customer is responsible for managing data appropriately as described above.

Deleting data (initializing)

Delete (initialize) all data saved on the unit.

- 1   
- 2 **Restore** at **[Reset to Factory Setting]**
The confirmation screen is displayed.
- 3 **OK**
This clears all data saved on the unit.

MEMO:

- Data after updates is saved, initialization is not done to programs that are updated.

Bluetooth connection method and function compatibility table

The functions that can be used depend on how the Bluetooth-compatible device is connected for registration (pairing). For more details, see the table below.

For iPhone

Usage settings screen → P.31	hands free functions	Bluetooth audio
Handsfree + Smartphone Linking*	○	×
Handsfree + Music	○	○
Handsfree Only	○	×
Music Only	×	○
Smartphone Linking Only*	×	×

* The “Device Type” setting must be set to “iPhone”. → P.44

● About Bluetooth connection mode when using Smart Access

- For the device with 30-pin connector
Bluetooth setting is not necessary.
- For the device with Lightning connector
Select the Bluetooth connection mode from “Handsfree + Smartphone Linking” or “Smartphone Linking Only”.

— Notice

- If the above connection mode is selected, Bluetooth audio function cannot be used.

For Android smartphones

Usage settings screen → P.31	hands free functions	Bluetooth audio
Handsfree + Smartphone Linking*	○	×
Handsfree + Music	○	○
Handsfree Only	○	×
Music Only	×	○
Smartphone Linking Only*	×	×

* The “Device Type” setting must be set to “Android”. → P.44

● About Bluetooth connection mode when using Smart Access

Select the Bluetooth connection mode from “Handsfree + Smartphone Linking” or “Smartphone Linking Only”.

— Notice

- If the above connection mode is selected, Bluetooth audio function cannot be used.

INSTALLATION AND WIRE CONNECTION MANUAL

1. SAFETY PRECAUTIONS

□ Symbol Identification

This manual uses symbols and icons to indicate safety precautions and concerns during the installation procedure. Be sure to carefully read and understand each precaution prior to beginning the installation.

⚠ WARNING

- This symbol is intended to alert the user to the presence of important operating instructions. Failure to heed the instructions may result in severe injury or death.


⚠ CAUTION

- This symbol is intended to alert the user to the presence of important operating instructions. Failure to heed the instructions can result in injury or material damage.

□ Before Use

⚠ WARNING

- Confirm the battery voltage of the vehicle to be installed. This unit is designed only for vehicles with DC 12V power supply.
- Disconnect the negative terminal of the battery before connecting wires, otherwise an electric shock, injury by short circuit may occur.

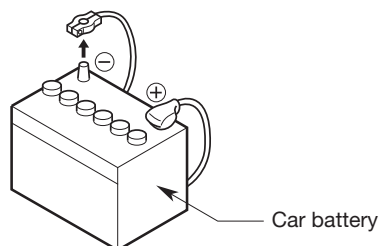

□ Installation Precautions

⚠ WARNING

- When installing the unit to a vehicle with an airbag system, never install it in a place where it may affect the operation of the airbag.
- Do not install this unit in the following locations:
 - A location interfering with the driver's visual range or operation.
 - A location where the gear shift or brake pedal are hindered.
 - A location where passengers are at risk.
 - An unstable location, or where the system may fall.

⚠ CAUTION

- Do not install the system in the locations described below. This may cause a fire, accident or electrical shock:
 - A location exposed to rain or dust.
 - An unstable location, or where the system may fall.
- Do not install this unit in a place exposed to direct sunlight, heat or a place where the vent holes or heat radiation holes are covered.
- When you install the antenna, mount it in a place where the elements of the antenna do not protrude beyond the edge of the front, back, left and right of the vehicle.
 - If it comes in contact with pedestrians, it may cause an accident.

□ Installation Notes

⚠ WARNING

- Please note the position of pipes, tanks and electrical wirings before installing the unit into the vehicle; failure in avoiding these may cause a fire or malfunction.

⚠ CAUTION

- Use only the supplied parts.
 - If unspecified parts are used, they may cause damage.
- Any holes made in the body of the vehicle should be sealed with a silicon adhesive.
 - If exhaust fumes or water penetrates into the vehicle, this may cause an accident.
- Fasten the bolts securely when installing the unit. If the bolts are loose an accident or malfunction could occur.

□ Connection Notes

⚠ WARNING

- Loom all cables according to the instruction manual, so as not to hinder operation.
- Wire the connecting cords/cables away from high temperature areas.
 - If the coatings of the cables melt, it could cause an accident/fire by a short circuit.
 - Take care when wiring in the engine compartment.
- When wiring the connecting cables in a vehicle with an airbag system, never feed the cables through a place where it may affect the operation of the airbag.
 - An airbag not operating correctly in an emergency may cause increased injury.

CAUTION

- Verify wires with a digital multi-meter prior to making any connections. Many new vehicles use multiplexed and/or low voltage circuits that can be damaged if a test light or logic probe is used.
- Connect cables appropriately. If a wrong connection is made, this may cause a fire or accident.
- When passing cables through the body of the vehicle, use non-conductive grommets. If the coatings of the cables are worn out by rubbing, this may cause an accident, fire or a short circuit.
- After wiring cables, fix them with insulation tape.
- Be sure to switch off the vehicle when connecting or disconnecting cables to/from the unit, otherwise an electric shock, injury or accident may occur.

2. PACKAGE CONTENTS

- ① Main unit
- ② Quick Start Guide & Installation Manual
- ③ CD-ROM
 - Owner's manual
 - Owner's manual - Navigation (NX604 only)
- ④ Power supply cable
- ⑤ RCA pin cable (6ch)
- ⑥ RCA pin cable (Rear AUX-IN/Rear Video Out)
- ⑦ Bag for accessories
 - Flat head screw (M5 × 8 mm)8
 - Hexagonal bolt (M5 × 8 mm)8
 - Rubber cap (for RCA pin cable)10
 - Cable holder (NX604 only)3
 - Double-sided tape for fastening GPS antenna (NX604 only)1
 - Cable tie1
- ⑧ Finisher
- ⑨ Warranty card
- ⑩ GPS antenna (NX604 only)
- ⑪ USB Cable

Notice

- The provided disc (CD-ROM manual) cannot be played back on this unit.

3. GENERAL CAUTIONS

- Do not open the case. There are no user-serviceable parts inside. If you drop anything into the unit during installation, consult your dealer or an authorized Clarion service center.

4. CAUTIONS ON INSTALLATION

- Prepare all articles necessary for installing the main unit before starting.
- Install the unit within 35° of the horizontal plane. (Figure 1)

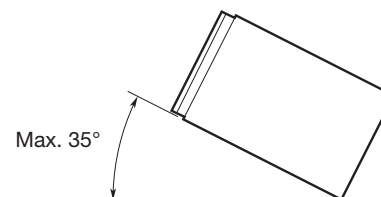


Figure 1

- If you have to do any modification on the car body, such as drilling holes, consult your car dealer beforehand.
- Use the included screws for installation. Using other screws can cause damage. (Figure 2)

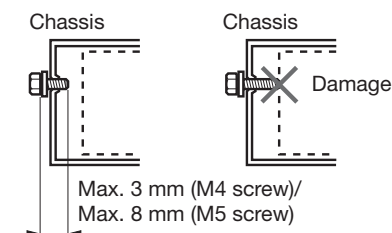


Figure 2

5. INSTALLING THE MAIN UNIT


This unit is designed for fixed installation in the dashboard.

- When installing the main unit in NISSAN vehicles, use the parts attached to the unit and follow the instructions in Figure 3.


When installing the main unit in TOYOTA vehicles, use the parts attached to the vehicle and follow the instructions in Figure 4.

- Wire as shown in Section 9→ P.61.
- Reassemble and secure the unit in the dashboard and set the face panel and center panel.

Mounting Screw Holes (Side View of the Main Unit)

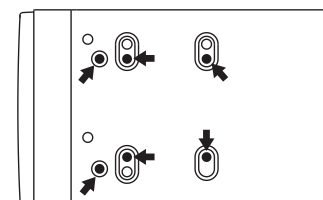

For NISSAN vehicle

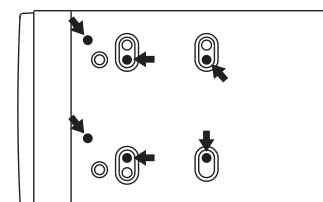

For TOYOTA vehicle

❑ Installing the Main Unit in a NISSAN Vehicle

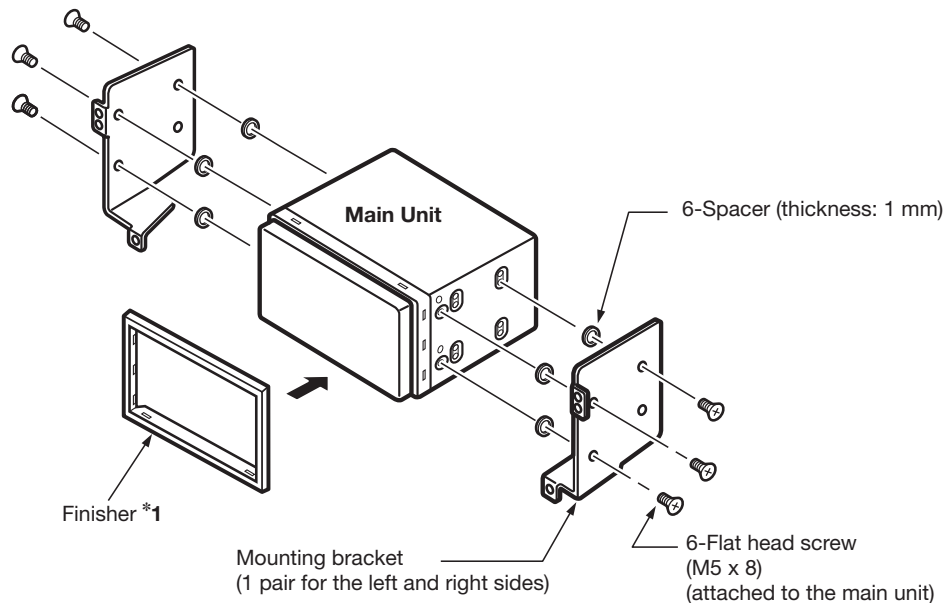


Figure 3

*1 Position the face panel with its wide edge at the bottom. Fit the edge into the groove of the main unit.

❑ Installing the Main Unit in a TOYOTA Vehicle

Install by using parts attached to the vehicle. (Screws marked ★ are attached to the vehicle.)


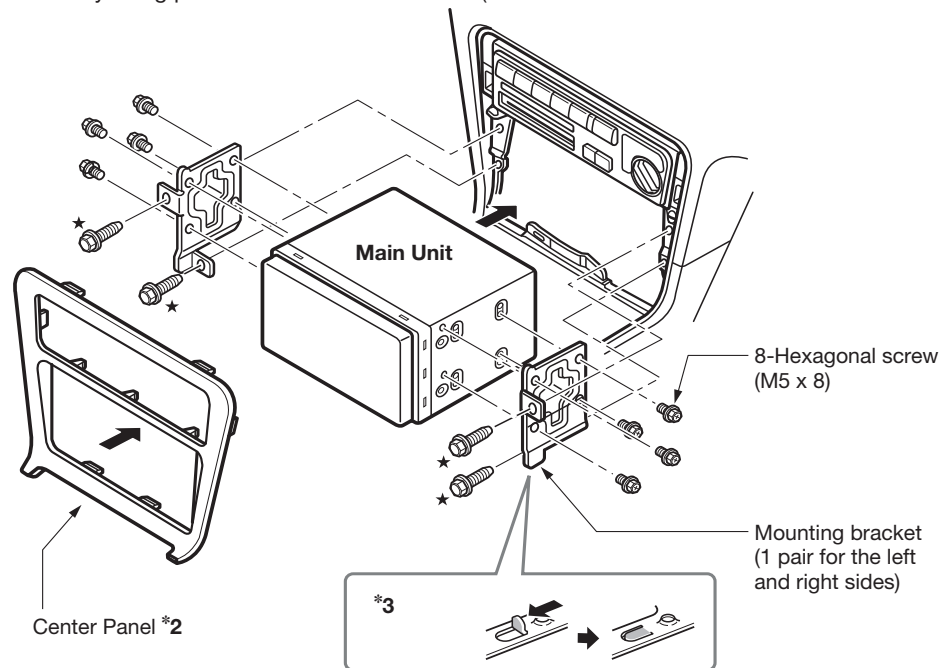


Figure 4


*2 Some panel openings are too small for the unit depending on the vehicle type and model. In such a case, trim the upper and lower sides of the panel frame by about 0.5 to 1.5 mm so the unit can be inserted smoothly.

*3 If a hook on the installation bracket interferes with the unit, bend and flatten it with a nipper or similar tool.


Typical Mounting Brackets

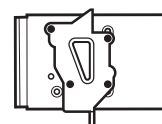

Example 1

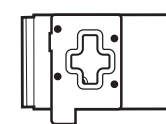

Example 2

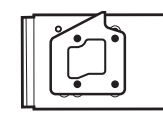

Example 3

Affix the screws to the ● marks.

❑ **Vehicles other than NISSAN and TOYOTA**

In some cases the center panel may require modification. (Trimming, filing, etc.)

6. REMOVING THE MAIN UNIT

When the main unit is to be removed, disassemble it in the reverse of the order in "INSTALLING THE MAIN UNIT". → P.58

7. CAUTIONS ON WIRING

- Be sure to turn the power off before wiring.
Be particularly careful where you route the wires.
- Keep them well away from the engine, and exhaust pipe, etc. Heat may damage the wires.
- If the fuse should blow, check to see if the wiring is correct.
If a fuse is blown, replace it with a new one of the same specification as the original.
- To replace the fuse, remove the old fuse of the power supply cable and insert the new one. (Figure 5)

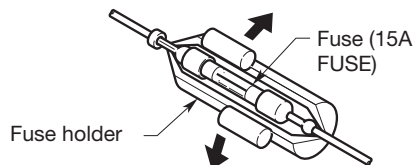


Figure 5

- There are various types of fuse holder. Do not let the battery side touch other metal parts.

⚠ CAUTION

- After connecting the HDMI and USB cables to the unit, use a cable tie to tie them down. (Figure 6)


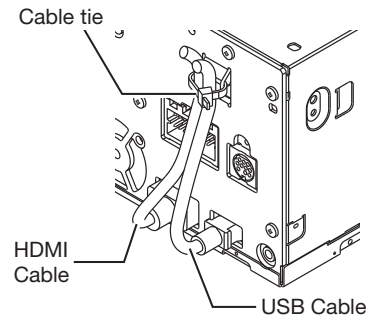


Figure 6


8. INSTALLING THE GPS ANTENNA (NX604 ONLY)

⚠ WARNING

- Do not install the GPS antenna in a place where it may interfere with the operation of the airbag or hinder the driver's visual range.
- Do not use the navigation system with the GPS antenna cable cut off. The power line in the cable may be short-circuited.
- The supplied GPS antenna is for installation inside the vehicle. Do not install it outside the vehicle.
- Install the GPS antenna more than 19.7in (50 cm) away from the main unit, other audio devices such as CD player, and a radar detector. If it is installed near these devices, GPS reception may be impaired.
- To improve the GPS signal reception, install the GPS antenna horizontally on a flat plane.
- Do not wax or paint the cover of the GPS antenna. This may reduce the performance of the GPS antenna.
- Install the GPS antenna at least 3.9in (10 cm) away from the windshield.
- Wipe off the dirt of the mounting surface before installing the GPS antenna.
- Stick the double-sided tape to the bottom face of the GPS antenna.

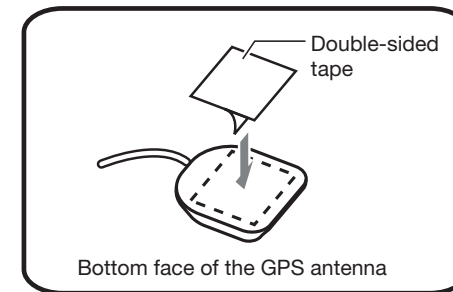



- Mount the GPS antenna.
Stick it surely on a flat plane of the passenger-side dashboard where GPS signal interruption is minimized.
- Wire the GPS antenna cable.
Fasten the cable using the Cable holders.

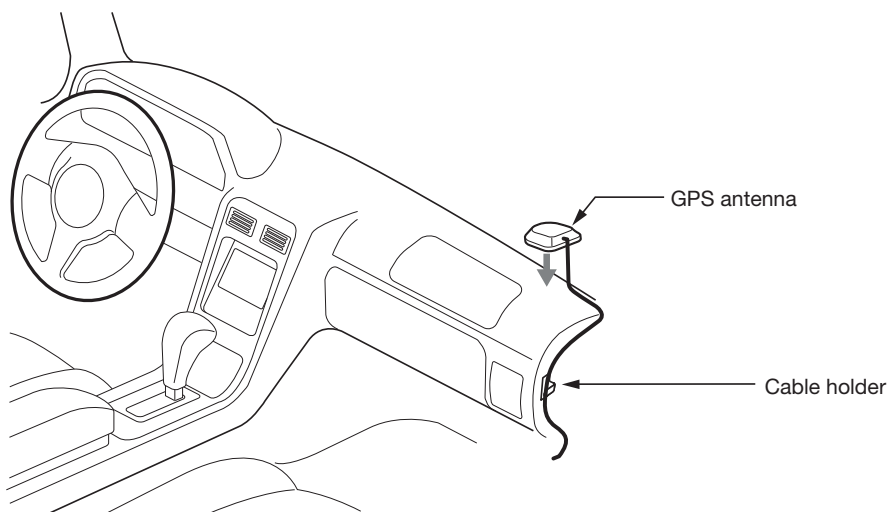

(Shows an example in case of the left-hand traffic.)

9. WIRE CONNECTION

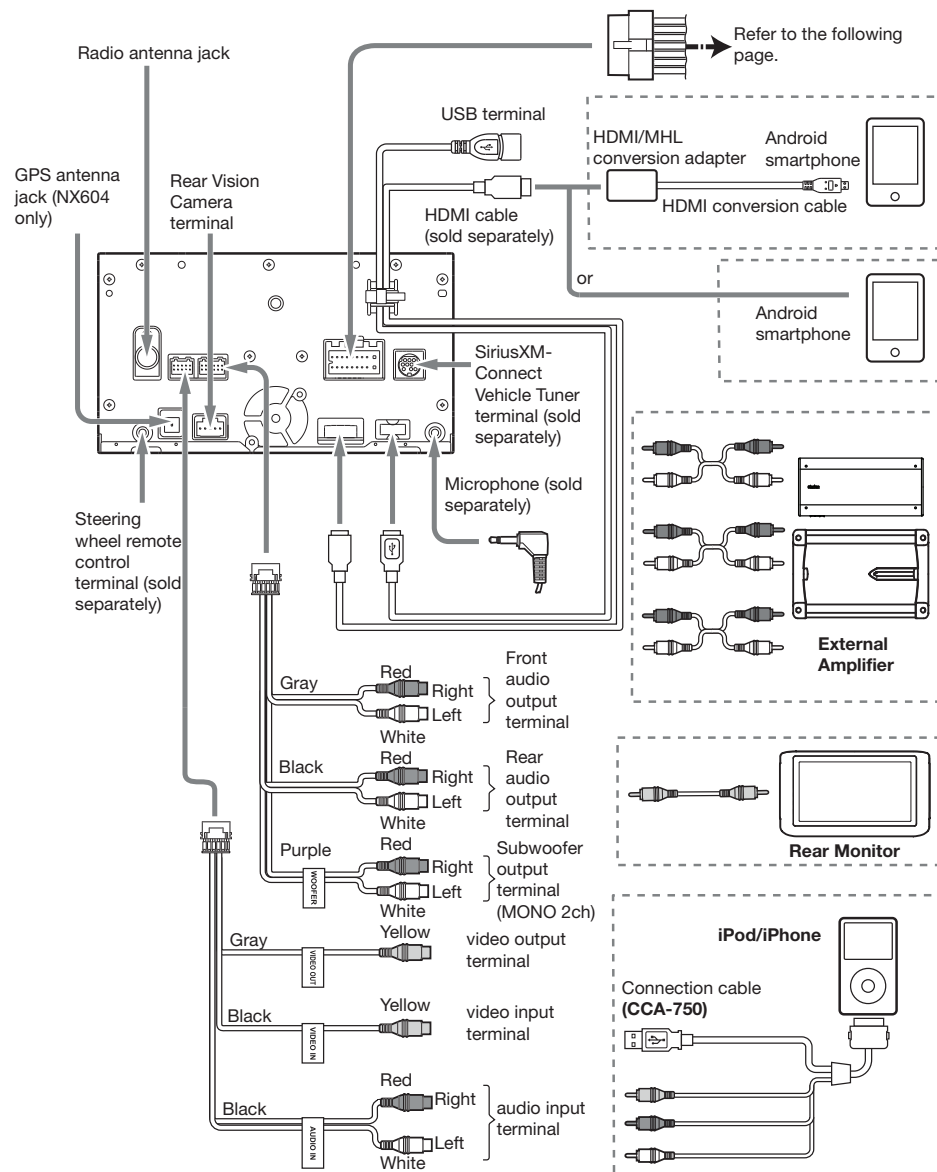

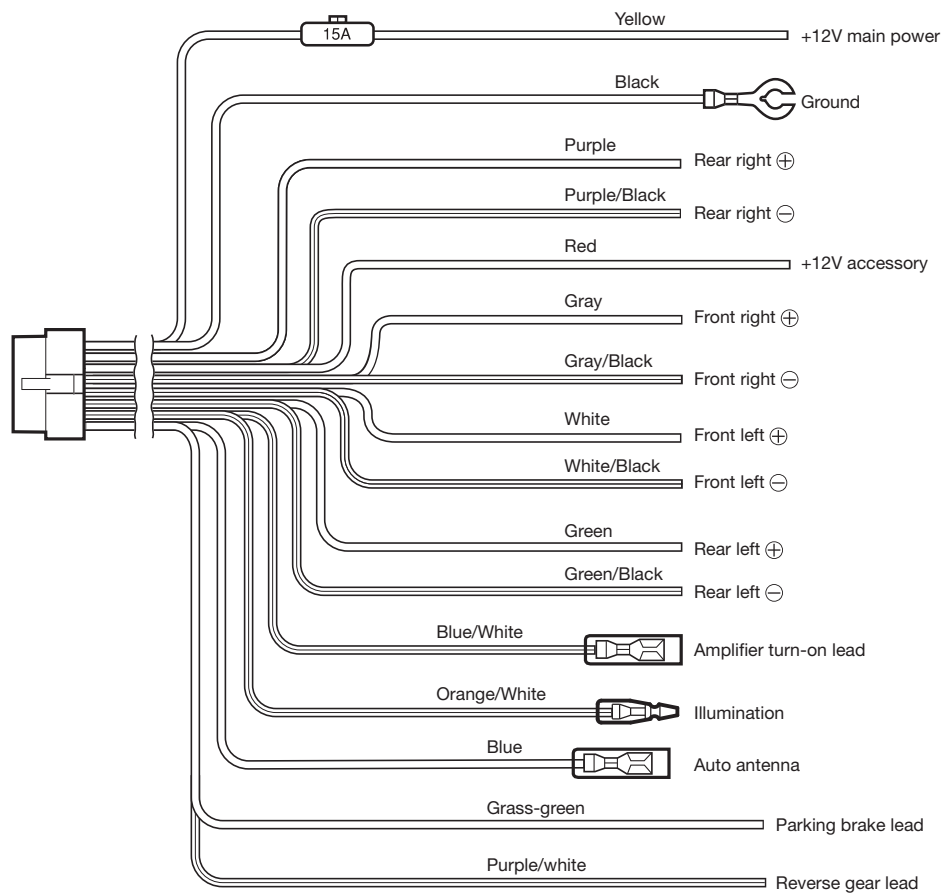


See next page for how to connect the parking brake lead.

Connecting the parking brake lead

Connect the lead to parking brake lamp ground in the meter panel.

- Connecting the parking brake lead to lamp ground allows you to watch video images when the parking brake is engaged.
- When the parking brake lead is not connected, the monitor will not display video images.
- If “Audio Only” appears on the screen just after turning on the ACC power of the car, release the parking brake while confirming safety, and then engage the parking brake again.

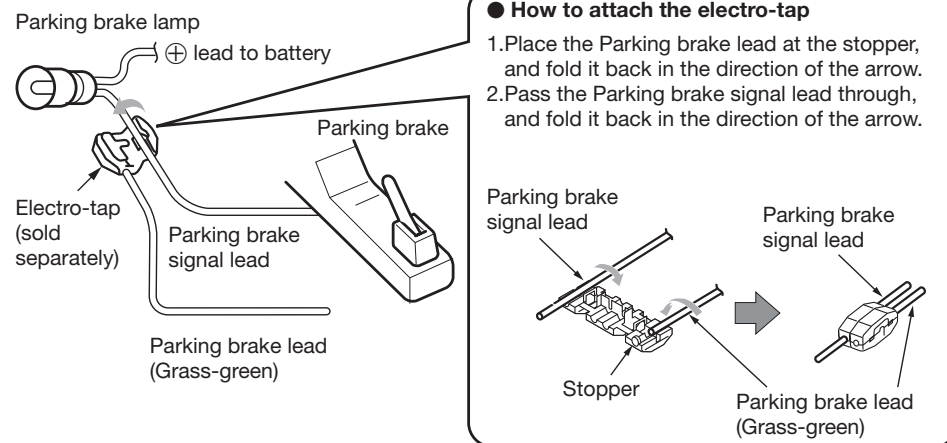

Connecting the Accessories

Connection to the Rear Vision Camera for vehicle

The Rear Vision Camera for vehicle can be connected to optional Rear Vision Camera input cable (CCA-644) with RCA pin cable. For detailed information, refer to the instruction sheet or manual for the Rear Vision Camera.

- Be sure to connect the reverse gear lead to the vehicle's relevant terminal.
- Connect the Rear Vision Camera to the RCA pin cable; if not, the screen turns black while the gearshift lever is in the reverse gear position.

SiriusXM-Connect Vehicle Tuner

Connect this tuner to SiriusXM-Connect Vehicle Tuner terminal.

For more information on how to install the SiriusXM Connect Vehicle tuner, consult the installation guide included with the tuner.

Index

A

Adjusting volume	
Audio-visual	11
Phone	34
AM/FM selection	12
Angle (DVD Video)	18
Antitheft Activation	42
Antitheft Indicator	42
Audio Language (DVD Video)	18
Audio Level (AUX)	29
Automatic tuning	
Radio	12
Auto store	
Radio	13
AUX	28
AV control bar display key	11

B

Balance/Fader	43
Bluetooth	31
Bluetooth Audio	26
Bluetooth ON/OFF	31
Brightness	44
Browser cache	44
BT Devices Connection	43
Button Beeps	42

C

CD	20, 49
Channel Lock	15
Channel Lock Password	16
Check connectivity	42
Clock Format (24h)	42
Country Code	20, 53

D

Day/Night Mode	44
Default Audio Language	19
Default Menu Language	19
Default Subtitle Language	19
Deleting incoming call/outgoing call logs	33

Deleting phonebook	34
Deleting registered cellphones	32
Device Type	44
DISP	8
Display Adjustment	
AUX	29
DVD Video	18
iPod Video	26
Rear Vision Camera	40
Display Mode	
AUX	29
DVD Video	18
DivX	22
DivX VOD	44
DVD Video	17, 49

E

EJECT button	7
--------------	---

G

Graphic Equalizer	43
Guideline	40

H

Handset Phonebook	34
High Pass Filter	43

I

Illumination Color	42
In-Car-Device setting	43
Inserting and removing microSD cards	10
Inserting/removing discs	10
Intelligent VOICE	37
iPod Audio	24
iPod Video	24
iTunes Tagging	14

L

Loudness	43
Low Pass Filter	43

M

Main Menu Icons	41
-----------------	----

Making calls

Handset Phonebook	34
Incoming/outgoing calls log	33
Telephone number	33

Manually registering stations

Radio	13
-------	----

Manual tuning

Radio	12
-------	----

MENU	7, 8, 9
------	---------

microSD card	22, 50
--------------	--------

MP3	20, 50
-----	--------

N

NAVI AV	7
---------	---

O

Operation panel	7
-----------------	---

P

Pairing	31
---------	----

Pandora Radio	30
---------------	----

Parental Control Password	20
---------------------------	----

Parental Level	20
----------------	----

Play from list

Bluetooth Audio	27
-----------------	----

CD	21
----	----

microSD card	23
--------------	----

MP3	21
-----	----

USB memory	23
------------	----

WMA	21
-----	----

Play from menus

DVD Video	18
-----------	----

Playing under specified conditions

Bluetooth Audio	27
-----------------	----

iPod Audio	26
------------	----

iPod Video	26
------------	----

POWER	8
-------	---

Preset channel

Radio	12
-------	----

SiriusXM Radio	15
----------------	----

Q

Quasi Bumper	41
--------------	----

R

Radio	11
-------	----

Rear Monitor	41
--------------	----

Rear Vision Camera	39
--------------------	----

Receiving calls	34
-----------------	----

Reception band	12
----------------	----

Remote control	37
----------------	----

Repeat play

Bluetooth Audio	27
-----------------	----

CD	21
----	----

DVD Video	17
-----------	----

iPod Audio	25
------------	----

iPod Video	25
------------	----

microSD card	23
--------------	----

MP3	21
-----	----

USB memory	23
------------	----

WMA	21
-----	----

Reset to Factory Setting	56
--------------------------	----

Rotary volume knob	7
--------------------	---

S

Scan play

CD	21
----	----

microSD card	23
--------------	----

MP3	21
-----	----

USB memory	23
------------	----

WMA	21
-----	----

Shortcut Menu	9, 42
---------------	-------

Shuffle play

Bluetooth Audio	27
-----------------	----

CD	21
----	----

iPod Audio	25
------------	----

microSD card	23
--------------	----

MP3	21
-----	----

USB memory	23
------------	----

WMA	21
-----	----

SiriusXM Radio ID	14
-------------------	----

SiriusXM Satellite Radio	14
--------------------------	----

Sizing Monitor

DVD Video	19
-----------	----

Smart Access	7, 8, 35
--------------	----------

Smartphone linking	35
--------------------	----

Sound Restorer	43
----------------	----

Station (Pandora Radio)	30
Subtitle Language (DVD Video)	18
Sub Woofer Control	43
Switching cellphone connections	32
Switching display screen	11
System Language	41

T

Time	42
Title/Chapter	18
Tuning	
SiriusXM Radio.....	15
Tuning from list	
Radio	12
Turning off the screen	11
Turning power ON/OFF	9

U

USB memory.....	22, 50
-----------------	--------

V

Virtual Bass	43
Vocal Image Control	43
Volume	7, 8
Volume Smoother.....	44

W

WMA	20, 50
-----------	--------

Clarion Co., Ltd.

All Rights Reserved. Copyright © 2014: Clarion Co., Ltd.

2014/5

QY-1110U/QZ-3110U
QCA-306-100.



clarion® addendum sheet

feillet d'addenda / apéndice /
Ergänzungsblatt / Aggiunta /
addendumvel / tilläggsark /
uzupełnienie / φύλλο παραρτήματος

English

Français

Español

Deutsch


INSTALLING THE MICROPHONE / INSTALLATION DE MICROPHONE / INSTALACIÓN DEL MICRÓFONO / INSTALLIEREN DES MIKROFON

Use the external microphone when using Intelligent VOICE or Bluetooth handsfree.

Utilisez le microphone externe lors de l'utilisation Intelligent VOIC ou mains libres Bluetooth.

Utilice el micrófono externo cuando se utiliza Intelligent VOIC o manos libres Bluetooth.

Verwenden Sie das externe Mikrofon bei Intelligent VOICE oder Bluetooth-Freisprechanlage.

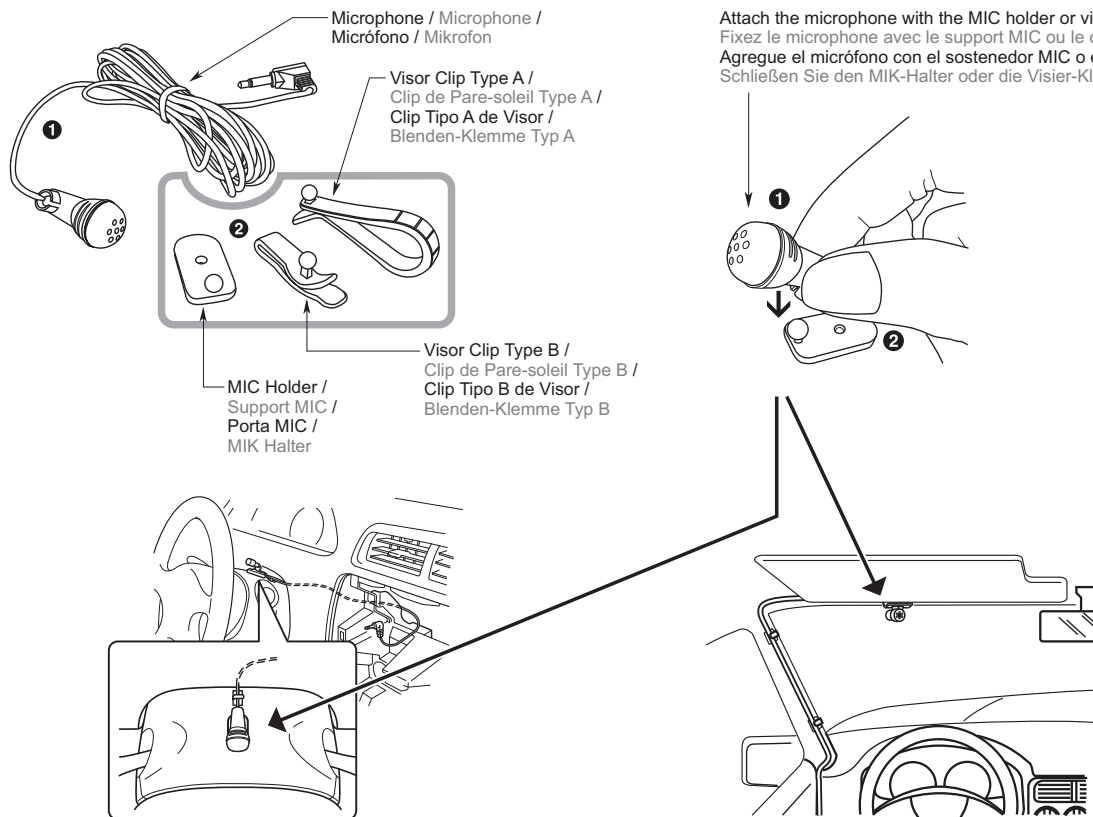

- External microphone has to be connected at the back of the main unit during installation if necessary.

Note:

- Do not leave the microphone in the places with wind passing such as air outlet of the air conditioner, etc. This may cause a malfunction. In addition, if leave it in the places subjected to direct sun, high temperature can cause distortion, discoloration which may result in a malfunction.

- Le microphone externe doit être connecté au dos de l'appareil principal au cours de l'installation, si nécessaire.

Remarque :

- Ne laissez pas le microphone dans des lieux exposés au vent tels que la sortie d'air d'un climatiseur, etc. Cela peut provoquer un dysfonctionnement. En outre, si vous le laissez dans des lieux exposés directement au soleil, une température élevée peut provoquer une distorsion ou une décoloration pouvant occasionner un dysfonctionnement.

- El micrófono externo tiene que ser conectado en la parte trasera de la unidad principal durante la instalación si fuera necesario.

Nota:

- No deje el micrófono en lugares con corrientes de aire, como la salida del aire acondicionado, etc. Podría causar un mal funcionamiento. Además, si deja el micrófono expuesto directamente a la luz del sol, las altas temperaturas pueden causar distorsión y decoloración que también pueden provocar el mal funcionamiento del aparato.

- Das externe Mikrofon muss bei der Installation gegebenenfalls auf der Rückseite des Hauptgerätes angeschlossen werden.

Hinweis:

- Lassen Sie das Mikrofon nicht an Orten, wo es einem Luftzug ausgesetzt ist, wie etwa einer Klimaanlage. Hierbei kann es zu einer Fehlfunktion kommen. Lassen Sie es außerdem nicht an Orten mit direkter Sonneneinstrahlung, denn hohe Temperaturen können zu Verformungen und Verfärbungen führen, was wiederum zu einer Fehlfunktion führen kann.



Owner's manual

NX604

Navigation

Thank you for choosing the Clarion NX604 as your navigator. Start using Clarion NX604 right away. This document is the detailed description of the navigation software. You can easily discover Clarion Mobile Map while you are using it; however, we still recommend that you read this manual to fully understand the screens and features.



Easy map updates

It is easy to keep the navigation system up to date. Simply download new map data from Clarion's portal site, store them on a microSD card and insert it into the Clarion NX604 via the front card slot. Unpleasant surprises are now avoided as navigation maps will match the real world.

Latest Map Guarantee

When you start using the product, you have 30 days to download the latest available map free of charge.

Table of contents

1 Warnings and Safety information	6
2 Getting started	7
2.1 Navigation menu.....	8
2.2 Buttons and other controls on the screen	9
2.2.1 Using keyboards.....	10
2.2.2 Beyond single screen tap.....	11
2.3 Map screen	12
2.3.1 Navigating on the map	12
2.3.2 Position markers.....	14
2.3.2.1 Vehimarker and Lock-on-Road.....	14
2.3.2.2 Selected map location (Cursor) and selected map object	14
2.3.3 Objects on the map.....	15
2.3.3.1 Streets and roads	15
2.3.3.2 Turn preview and Next street.....	15
2.3.3.3 Lane information and Signposts	16
2.3.3.4 Junction view	17
2.3.3.5 Freeway exit services.....	17
2.3.3.6 3D object types	18
2.3.3.7 Elements of the active route.....	18
2.3.3.8 Traffic events	19
2.3.4 Manipulating the map	20
2.3.5 Quick menu.....	21
2.3.6 Checking the details of the current position (Where Am I?).....	24
3 On-road navigation	26
3.1 Selecting the destination of a route	26
3.1.1 Combined Search	27
3.1.1.1 Combined Search - Navigating to a recent destination (History)	29
3.1.1.2 Combined Search - Navigating to a Favorite destination.....	30
3.1.1.3 Combined Search - Navigating to an address.....	31
3.1.1.4 Combined Search - Navigating to an intersection	32
3.1.1.5 Combined Search - Navigating to a Place of Interest.....	33
3.1.1.6 Combined Search - Navigating to a Place of Interest by its category.....	34
3.1.2 Entering an address or a part of the address.....	35
3.1.2.1 Entering an address (United States)	35
3.1.2.2 Entering an address (Canada).....	38
3.1.2.3 Entering an address starting with the street name (in the United States only)	40
3.1.2.4 Entering the midpoint of a street as the destination.....	42

3.1.2.5	Selecting an intersection as the destination	44
3.1.2.6	Selecting a city/town center as the destination	45
3.1.2.7	Entering an address with a ZIP code.....	47
3.1.2.8	Tips on entering addresses quickly	49
3.1.3	Selecting the destination from the Places of Interest	50
3.1.3.1	Quick search for a Place of Interest	50
3.1.3.2	Searching for a Place of Interest using preset categories.....	52
3.1.3.3	Searching for a Place of Interest by category.....	54
3.1.3.4	Searching for a Place of Interest by name	56
3.1.3.5	Searching for a Place of Interest by its phone number	59
3.1.3.6	Selecting nearby assistance from 'Where Am I?'	60
3.1.4	Selecting a map location as the destination.....	62
3.1.5	Selecting the destination from your Favorites.....	63
3.1.6	Selecting your Home location	64
3.1.7	Selecting a recent destination from the History	65
3.1.8	Entering the coordinate of the destination	66
3.1.9	Navigate to a location stored in a photo.....	67
3.1.10	Building a route from the list of destinations (Create Route)	68
3.2	Viewing the entire route on the map.....	69
3.3	Checking route parameters and accessing route related functions.....	70
3.4	Modifying the route	71
3.4.1	Selecting a new destination when already having a route: New Route, Waypoint or Final Destination	71
3.4.2	Setting a new starting position for the route	72
3.4.3	Editing the list of destinations (Edit Route)	73
3.4.4	Pausing the active route	74
3.4.5	Canceling the active route.....	74
3.4.6	Checking route alternatives when planning the route	75
3.4.7	Checking route alternatives for an existing route.....	76
3.4.8	Changing the vehicle used in route planning	77
3.4.9	Changing the road types used in route planning	78
3.5	Saving a location as a Favorite destination	79
3.5.1	Editing the details of a Favorite destination.....	80
3.6	Saving a map location as an alert point	81
3.7	Editing an alert point.....	82
3.8	Watching the simulation of the route.....	83
4	Off-road navigation.....	85
4.1	Selecting the destination of the route	85
4.2	Navigating in off-road mode.....	85
5	Reference Guide	86

5.1 Concepts	86
5.1.1 Smart Zoom	86
5.1.2 Daytime and night color themes	86
5.1.3 Tunnel view	86
5.1.4 Route calculation and recalculation	87
5.1.5 Green routing	88
5.1.6 Road safety cameras and other proximity alert points	89
5.1.7 Speed limit warning	90
5.1.8 Traffic information in route planning	90
5.1.10.1 Real-time traffic information (TMC).....	90
5.2 'More' menu	92
5.3 Settings menu.....	93
5.3.1 Sound and Warnings	95
5.3.2 Customize Quick menu.....	97
5.3.3 Traffic settings	97
5.3.4 Route settings.....	97
5.3.5 User profiles.....	100
5.3.6 Map settings.....	100
5.3.7 Visual guidance settings.....	101
5.3.8 Display settings.....	103
5.3.9 Regional settings.....	103
5.3.10 Trip monitor settings.....	103
5.3.11 Log collection settings	104
6 Glossary.....	105
7 Copyright note.....	107

1 Warnings and Safety information

The navigation system helps you find your way to your destination with the built-in GPS receiver. Clarion Mobile Map does not transmit your GPS position; others cannot track you.

If you accept it when first using the application, Clarion Mobile Map collects usage information and GPS logs that may be used for improving the application and the quality and coverage of maps. The data is processed anonymously; no one will be able to track any personal information. If you change your mind later, you can enable or disable the log collection in Settings (page 104).

It is important that you look at the display only when it is safe to do so. If you are the driver of the vehicle, we recommend that you operate Clarion Mobile Map before you start your journey. Plan the route before your departure and stop if you need to change the route.

You must obey the traffic signs and follow the road geometry. If you deviate from the recommended route, Clarion Mobile Map changes the instructions accordingly.

Never place Clarion NX604 where it obstructs the driver's view, where it is in the deployment zone of an airbag or where it might cause injuries in an accident.

2 Getting started

 
Clarion Mobile Map is optimized for in-car use. You can use it easily by tapping the screen buttons and the map with your fingertips.

When using the navigation software for the first time, an initial setup process starts automatically. Do as follows:

1. Select the written language of the application interface. Later you can change it in Regional settings (page 103).



2. You are now asked whether you allow the software to collect usage information and GPS logs that may be used for improving the application and the quality and coverage of maps. Tap



to allow the anonymous statistics or disable this function. Later you can turn them on or off individually in Log collection settings (page 104).



3. The Configuration wizard starts. Tap to continue.
4. Select the language and speaker used for voice guidance messages. Later you can change it in Sound and Warnings settings (page 103).



5. If needed, modify the time format and unit settings. Later you can change them in Regional settings (page 103).



6. If needed, modify the default route planning options. Later you can change them in Route settings (page 97).




7. The initial setup is now complete. The Configuration wizard can be restarted later from the Settings menu (page 93).



After the initial setup, the Navigation menu appears and you can start using Clarion Mobile Map.




2.1 Navigation menu

 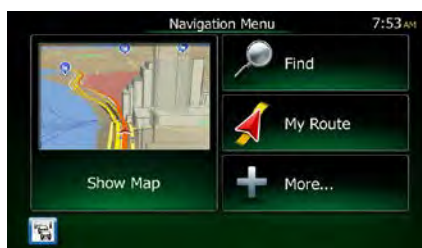You can reach all parts of Clarion Mobile Map from the Navigation menu.



You have the following options:

 
 



 
- Tap  **Find** to select your destination by entering an address or selecting a place of interest, a location on the map or one of your Favorite destinations. You can also look up your recent destinations from the Smart History or enter a coordinate.
- Tap  **My Route** to display the route parameters and the route in its full length on the map. You can also perform route-related actions such as editing or canceling your route, setting a start point for the route, picking route alternatives, avoiding parts of the route, simulating navigation or adding the destination to your Favorites.





- Tap  to simulate demo routes or to run some additional applications.
- Tap  to start navigating on the map. The button itself is a miniature live map that shows your current position, the recommended route and the surrounding map area. Tap the button to enlarge the map to the full screen.
- Tap  to open the Traffic Summary screen.

2.2 Buttons and other controls on the screen

 When you are using Clarion Mobile Map, you usually tap buttons on the touch screen.




You only need to confirm selections or changes if the application needs to restart, it needs to perform a major reconfiguration, or you are about to lose some of your data or settings. Otherwise, Clarion Mobile Map saves your selections and applies the new settings without confirmation as soon as you use the controls.

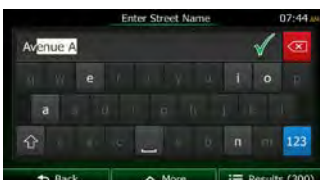




 
Type	Example	Description	How to use it
Button		Tap it to initiate a function, to open a new screen, or to set a parameter.	Tap it once.
Button with value		Some buttons display the current value of a field or setting. Tap the button to change the value. After the change, the new value is shown on the button.	Tap it once.
Icon		Shows status information.	Some icons also function as a button. Tap them once.
List		When you need to select from several options, they appear in a list.	Grab the list anywhere and slide your finger up or down. Depending on the speed of the sliding, the list will scroll fast or slow, only a bit or till the end. Alternatively, move between pages with the  and  buttons and tap the value that you want.

Radio button		When there are only a few choices, radio buttons may be used instead of lists. Only one value can be selected.	Tap one of the buttons to select a new value.
Switch		When there are only two choices, a checkmark shows whether the feature is enabled.	Tap it to turn the switch on or off.
Slider		When a feature can be set to different values in a range, Clarion Mobile Map shows an indicator on a gauge that displays and sets the value.	<ul style="list-style-type: none"> • Drag the handle to move the slider to its new position. • Tap the slider where you want the handle to appear; the thumb jumps there.
Virtual keyboard		Alphabetic and alphanumeric keyboards to enter text and numbers.	Each key is a touch screen button.

2.2.1 Using keyboards











You only need to enter letters or numbers when you cannot avoid it. You can type with your fingertips on the full-screen keyboards and you can switch between various keyboard layouts, for example English, Greek or numerical.

Task	Instruction
Switching to another keyboard layout, for example from an English keyboard to a Greek keyboard	Tap the  button and select the new keyboard layout from the list.
Correcting your entry on the keyboard	Tap  to remove the unneeded character(s). Tap and hold the button to delete several characters or the entire input string.
Entering a space, for example between a first name and a family name or in multi-word street names	Tap the  button at the bottom center of the screen.

Entering upper and lower case letters	When entering a text, the first character appears in upper case while the rest of the text is in lower case. Tap  to enter an upper case letter or tap twice to turn on Caps Lock. Tap again and lower case letters return.
Entering numbers and symbols	Tap  to switch to a keyboard offering numeric and symbol characters.
Finalizing the keyboard entry (accepting the suggested search result)	Tap  .
Finalizing the keyboard entry (opening the list of search results)	Tap  .
Finalizing the keyboard entry (saving your input)	Tap  .
Canceling the keyboard entry (returning to the previous screen)	Tap  .

 2.2.2 Beyond single screen tap

You usually need to tap the screen only once. However, some useful features can be accessed with combined touch screen tapping. Those are the following:


Action	Details
Tapping and holding the screen	<p>Tap and keep pressing the following buttons to reach extra functions:</p> <ul style="list-style-type: none"> Tap and hold  on list and menu screens: the Map screen appears. Tap and hold any of the , , , , , and  buttons on the Map screen: you can rotate, tilt or scale the map continuously. Tap and hold  on keyboard screens: you can delete several characters quickly. Tap and hold  or  in long lists: you can scroll pages continuously.

Gestures (drag&drop)	<p>You need to drag and drop the screen only in cases like:</p> <ul style="list-style-type: none"> • Moving the handle on a slider. • Scrolling the list: grab the list anywhere and slide your finger up or down. Depending on the speed of the sliding, the list will scroll fast or slow, only a bit or till the end. • Moving the map in map browsing mode: grab the map, and move it in the desired direction.
-------------------------	--


2.3 Map screen

2.3.1 Navigating on the map

The Map screen is the most frequently used screen of Clarion Mobile Map.

A small live map is displayed on the Navigation menu, as a part of the  button.



To enlarge this small map and open the Map screen, tap .

This map shows the current position (the Vehimarker, a blue arrow by default), the recommended route (an orange line), and the surrounding map area.

When there is no GPS position, the Vehimarker is transparent. It shows your last known position.

You see colored dots circling around a satellite symbol in the top left corner. The more green dots you see, the closer you are to get the valid GPS position.




When GPS position is available, the Vehimarker is displayed in full color, now showing your current position.




There are screen buttons and data fields on the screen to help you navigate. During navigation, the screen shows route information.



The  button gives quick access to frequently used functions. You can change the available functions in Settings.

By default, only one data field is displayed in the bottom right corner. Tap this field to see all route data fields. Tap any of the data fields to suppress others and display only the selected one.

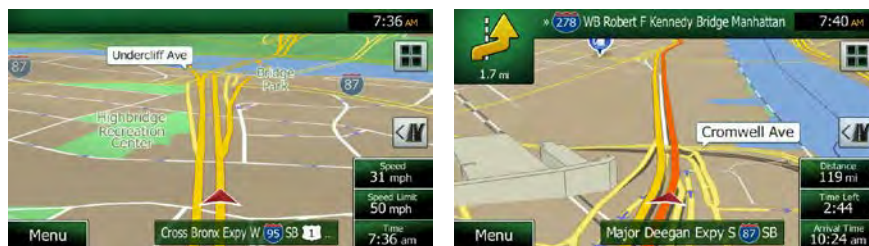

The data fields are different when you are navigating an active route and when you have no specified destination (the orange line is not displayed).

Default data fields when cruising without a destination (tap and hold any of the fields to change its value):

Field	Description
Speed 61 mph	Shows your current speed given by the GPS receiver.
Speed Limit 70 mph	Shows the speed limit of the current road if the map contains it.
Time 17:11	Shows the current time corrected with time zone offset. The accurate time comes from the GPS satellites, and the time zone information comes from the map or it can be set manually in Regional settings.

Default data fields when navigating a route (tap and hold any of the fields to change its value):

Field	Description
Distance 16.9 mi	Shows the distance you need to travel on the route before reaching your final destination.

Time Left 0:16	<p>Shows the time needed to reach the final destination of the route based on information available for the remaining segments of the route.</p> <p>If Clarion NX604 is capable of receiving live traffic information, the calculation takes into account traffic delays affecting your route if they are received. However, this calculation is rarely accurate.</p>
Arrival Time 17:22	<p>Shows the estimated arrival time at the final destination of the route based on information available for the remaining segments of the route.</p> <p>If Clarion NX604 is capable of receiving live traffic information, the calculation takes into account traffic delays affecting your route if they are received. However, this calculation is rarely accurate.</p>

2.3.2 Position markers

2.3.2.1 Vehimarker and Lock-on-Road

When your GPS position is available, Clarion Mobile Map marks your current position with the Vehimarker. By default, this marker is a blue arrow, but you can change this icon in Settings.

When on-road navigation is selected, the Vehimarker may not show your exact GPS position and heading. If roads are near, it is aligned to the nearest road to suppress GPS position errors, and the direction of the icon is aligned to the direction of the road.

If you select off-road navigation: The Vehimarker is at your exact GPS position. The direction of the icon shows your current heading.

2.3.2.2 Selected map location (Cursor) and selected map object

You can mark a map location in the following ways:

- Tap the map when navigating,
- Tap the map when you are asked to confirm the destination at the end of a search, or
- Tap the map in Find on Map (page 62)

When a map location is selected, the Cursor appears at the selected point on the map. The Cursor is

displayed with a radiating red dot () to make it visible at all zoom levels.

The location of the Cursor can be used as the destination of the route, a new alert point, you can search for Places around it, or you can save this location as one of your Favorite destinations.

You can also select some of the objects on the map. If you tap the map at the icon of a Place of Interest or an alert point, the object will be selected (you see a red circling border around the object), and you can get information about this object or use it as a route point.

2.3.3 Objects on the map

2.3.3.1 Streets and roads

Clarion Mobile Map shows the streets in a way that is similar to how the paper road maps show them. Their width and colors correspond to their importance: you can easily tell a freeway from a small street.


2.3.3.2 Turn preview and Next street

When navigating a route, the top section of the Map screen shows information about the next route event (maneuver) and the next street or the next city/town.






 
 


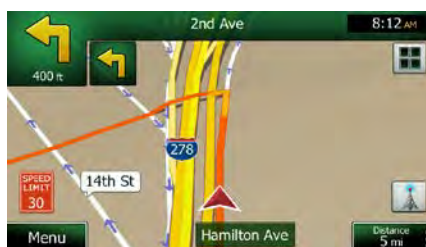


There is a field in the top left corner that displays the next maneuver. Both the type of the event (turn, traffic circle, exiting freeway, etc.) and its distance from the current position are displayed.

A smaller icon shows the type of the second next maneuver if it is near the first one. Otherwise, only the next maneuver is displayed.



Most of these icons are very intuitive. The following table lists some of the frequently shown route events. The same symbols are used in both fields:

Icon	Description
	Turn left.
	Turn right.
	Turn back.
	Bear right.
	Turn sharp left.

	Keep left.
	Continue straight in the intersection.
	Go left on the traffic circle, 3rd exit (next maneuver).
	Enter traffic circle (second next maneuver).
	Enter freeway.
	Exit freeway.
	Board ferry.
	Leave ferry.
	Approaching a waypoint.
	Approaching the destination.


2.3.3.3 Lane information and Signposts

When navigating on multilane roads, it is important to take the appropriate lane in order to follow the recommended route. If lane information is available in the map data, Clarion Mobile Map displays the lanes and their directions using small arrows at the bottom of the map. Highlighted arrows represent the lanes and direction you need to take.

Where additional information is available, signposts substitute arrows. Signposts are displayed at the top of the map. The color and style of the signposts are similar to the real ones you can see above road or by the roadside. They show the available destinations and the number of the road the lane leads to.

All signposts look similar when cruising (when there is no recommended route). When navigating a route, only the signpost that points to the lane(s) to be taken is displayed in vivid colors; all others are darker.

If you want to hide the currently displayed signposts, tap any of them and the normal Map screen returns until new signpost information is received.

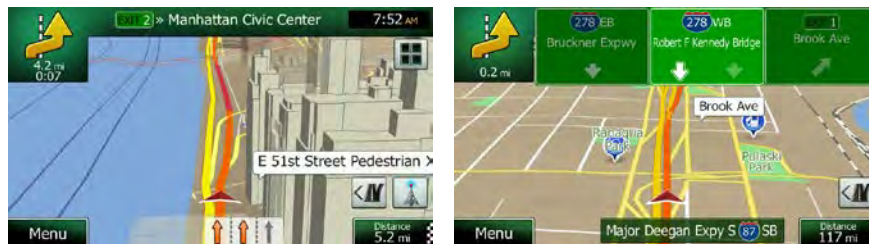

2.3.3.4 Junction view

If you are approaching a freeway exit or a complex intersection and the needed information exists, the map is replaced with a 3D view of the junction. The lanes you need to take are displayed with arrows. At the top of the screen road signs show you additional information.

If you want to hide the currently displayed junction, tap the picture and the Map screen returns.



2.3.3.5 Freeway exit services

You may need a gas station or a restaurant during your journey. This feature displays a new button on the map when you are driving on freeways.



Tap this button to open a panel with the details of the next few exits or service stations.



Tap any of them to display the exit area on the map. You can now easily add this exit as a waypoint to your route if needed.

If you want to display other types of Places for the exits, you can change the icons in Visual Guidance settings (page 101).




2.3.3.6 3D object types

Clarion Mobile Map supports the following 3D object types:

Type	Description
3D terrain	3D terrain map data shows changes in terrain, elevations or depressions in the land when you view the map in 2D, and use it to plot the route map in 3D when you navigate. Hills and mountains are shown in the background of the 3D map, and illustrated by color and shading on the 2D map.
Elevated roads	Complex intersections and vertically isolated roads (such as overpasses or bridges) are displayed in 3D.
3D landmarks	Landmarks are 3D artistic or block representations of prominent or well-known objects.
3D buildings	3D block representation of full city building data containing actual building size and position on the map.

2.3.3.7 Elements of the active route

 
Clarion Mobile Map shows the route in the following way:

Symbol	Name	Description
	Current GPS position and Start point	Your current position displayed on the map. If roads are near, it is aligned to the nearest road. Normally if GPS position is available, the route starts from the current position. If there is no valid GPS position, Clarion Mobile Map uses the last known position as the start point.
	Waypoint (intermediate destination)	An intermediate destination of the route before reaching the final destination.
	Destination (end point)	The final destination of the route.
	Route color	The route always stands out with its color on the map, both in daytime and in night color mode.
	Streets and roads that are excluded from the navigation	You can choose whether you want to use or avoid certain road types (page 97). However, when Clarion Mobile Map cannot avoid such roads, the route will include them and it will show them in a color that is different from the route color.
	Streets and roads that are affected by traffic events	Road segments may be affected by traffic events received. These streets and roads are displayed in an alternate color, and small symbols displayed along the route show the type of the traffic event.

2.3.3.8 Traffic events


Road segments affected by traffic events are displayed with an alternate color on the map, and small symbols above the road show the nature of the event:



1. Tap  to open the Traffic Summary screen.






2. Tap  to open the list of event categories.

3. Tap the traffic category you are interested in, or tap  to see the list of all events:

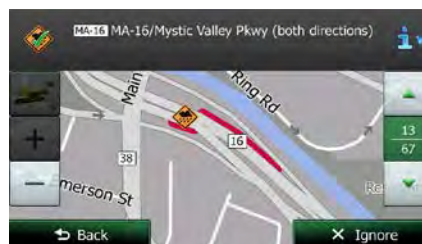


4. Now tap any of the list items to see its details, and to display the affected road segment in its full length on the map:








 


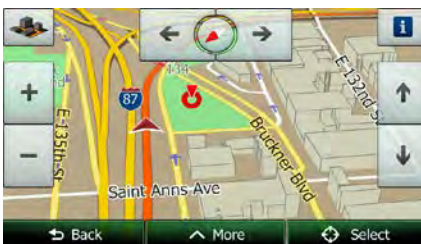




 


 **Note!**  icon will open the list of significant traffic events to let you quickly check them.

2.3.4 Manipulating the map

Tap the map anywhere to browse it during navigation. The map stops following the current position (the Vehimarker, a blue arrow by default, is not locked in a fix position on the screen any more) and control buttons appear to help you modify the map view.




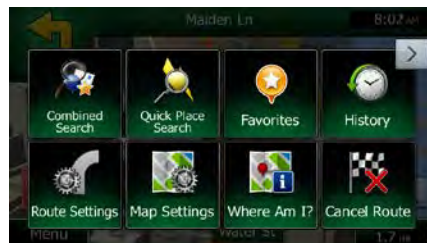
Action	Button(s)	Description
Moving the map with drag&drop	No buttons	You can move the map in any direction: tap and hold the map, and move your finger towards the direction you want to move the map.
Zooming in and out	 , 	<p>Changes how much of the map is displayed on the screen.</p> <p>Clarion Mobile Map uses high-quality vector maps that let you examine the map at various zoom levels, always with optimized content. It always displays street names and other text with the same font size, never upside-down, and you only see the streets and objects that you need.</p> <p>Map scaling has a limit in 3D map view mode. If you zoom out further, the map switches to 2D view mode.</p> <p>Tap the button once to modify the view in large steps, or tap and hold the button to modify it continuously and smoothly.</p>
Tilting up and down	 , 	<p>Changes the vertical view angle of the map in 3D mode.</p> <p>Tap the button once to modify the view in large steps, or tap and hold the button to modify it continuously and smoothly.</p>
Rotating left and right	 , 	<p>Changes the horizontal view angle of the map.</p> <p>Tap the button once to modify the view in large steps, or tap and hold the button to modify it continuously and smoothly.</p>
2D or 3D view	 , 	Tap this button to switch between the 3D perspective and 2D top-down map view modes.
Compass in 2D map view mode	 , 	The direction of the compass shows North. Tap the button to switch to North-up view, and then tap again to rotate the map in the previous direction.
Compass in 3D map view mode	 , 	The direction of the compass shows North. Tap the button to switch to North-up view, and then tap again to rotate the map in the previous direction.

Location information		Tap this button to open a new screen with information about the selected map point, the Cursor.
Return to normal navigation		Tap this button to move the map back to follow the current GPS position. Automatic map rotation is also re-enabled. The map manipulation buttons disappear and navigation continues.
Additional options		Tap this button to open a list of additional features like saving the Cursor as a Favorite destination, or searching for Places around the Cursor.
Select destination		Tap this button to select the Cursor as a new destination. The route is automatically calculated.

2.3.5 Quick menu

The Quick menu is a selection of controls and functions that are frequently needed during navigation. It



can be opened directly from the Map screen by tapping .





 

 



The menu will close after a few seconds of inactivity or if you tap .

Most of these functions are shortcuts. They are accessible from the menu system.

There are more functions available than the number of buttons in the menu. In Settings, you can choose the function of each button (page 97). The following options are available:

Button	Description	Shortcut for
	This button opens the Combined Search function that allows you to search addresses, Places, Favorite and recent destinations by name in one unified environment.	Destination (page 27)
	This function lets you search for a Place by its name. The search is carried out either along your route or around your current location if there is no route calculated.	Destination / Find Places / Quick Search (page 50)

	This button opens the list of your Favorite destinations.	Find / Favorite (page 63)
	This button opens the History list. You can select one of your previous destinations.	Find / History (page 65)
	This button opens the route editing function.	My Route / Edit Route
	This button opens the route related settings.	More / Settings / Route Settings (page 97)
	This button opens the map related settings.	More / Settings / Map Settings (page 100)
	This button opens a special screen with information about the current position and a button to search for nearby emergency or roadside assistance. For details, see the next chapter.	Tap the Current Street field on the Map screen
	This button cancels the route and stops navigation. The button is replaced with the next one if waypoints are given.	My Route / Cancel Route (page 74)
	This button skips the next waypoint from the route.	n/a
	This button opens a 2D map scaled and positioned to show the entire route.	My Route / Overview (page 69)
	This button opens the Visual Guidance settings screen.	More / Settings / Visual Guidance (page 101)
	This button opens the Traffic Summary screen.	Tap the Traffic icon in the Navigation menu or on the Map screen
	This button lets you bypass parts of the recommended route.	My Route / Avoidances

 Trip Monitor	This button opens the Trip Monitor screen where you can manage your previously saved trip logs and track logs.	More / Trip Monitor (page 92)
 Itinerary	This button opens the list of maneuvers (the itinerary).	Tap the top of the Map screen during navigation.
 Save Route	With this function you can save the active route for later use.	My Route / More / Save Route
 Load Route	With this function you can replace the active route with a previously saved route.	My Route / More / Load Route
 Find Places	With this function you can search for Places of Interest in various different ways.	Find / Find Places (page 50)
 Simulate Navigation	This button opens the Map screen and starts simulating the active route.	My Route / More / Simulate Navigation (page 83)
 GPS Info	This button opens the GPS Information screen with satellite position and signal strength information.	Tap the top of the Map screen when there is no GPS reception
 Home	This button offers your Home location as a destination.	

 
2.3.6 Checking the details of the current position (Where Am I?)

This screen contains information about the current position (or about the last known position if GPS reception is not available) and a button to search for useful Places nearby.








You can access this screen from the map in one of the following ways:

- If the current street is displayed below the Vehimarker (the current position on the map), tap it to open the Where Am I? screen.




- Open the Quick menu and tap the Where Am I? button.

Information on this screen:

 
-  : Latitude and Longitude (coordinate of the current position in WGS84 format).
- : Altitude (elevation information coming from the GPS receiver - often inaccurate).
- : House number on the left.
- : House number on the right.
- In the middle of the screen you can see whether the position is current, or the time left since it was last updated.
- Address details (when available) of the current position are displayed at the bottom.

You can also perform some actions on this screen:



Tap  to save the current position as a Favorite destination.

You can also search for assistance near your current position. Tap



to open a new screen for the Quick search:



The following services can be searched around the current position or the last known position:

- : Car repair and roadside assistance services
- : Police stations
- : Medical and emergency services
- : Gas stations

Tap any of the buttons, select a Place from the list, and navigate to it.

3 On-road navigation

When first started, Clarion Mobile Map calculates routes using the road network of the high quality vector maps provided with the product.

You can set up your route in different ways:

- If you need a route for immediate navigation, you can select the destination and start navigating to it right away (normal navigation).
- You can also plan a route independently of your current GPS position or even without GPS reception. To achieve this you need to set a new starting point in My Route / Edit Route by tapping the flag icon at the current position. This will also turn off the GPS receiver so that the route is not recalculated when a new position is received.

You can plan routes with multiple destinations. Select the first destination. Then select a second destination and add it to your route to create a multi-point route. You can add as many destinations to your route as you like.

You can also use Clarion Mobile Map for off-road navigation. For details, see page 85.

3.1 Selecting the destination of a route

Clarion Mobile Map offers you several ways of choosing your destination:

- Enter a full address or a part of an address, for example a street name without a house number or the names of two intersecting streets (page 35).
- Enter an address with ZIP code. This way you do not need to select the name of the city/town and the search for street names might be faster as well.
- Use a built-in Place of Interest as your destination (page 50).
- Select a location on the map with the Find on Map feature (page 62).
- Use a previously saved Favorite destination (page 63).
- Select a location from the History of previously used destinations (page 65).
- Enter the coordinate of the destination (page 66).
- Use the location where a photo was taken (page 67).

3.1.1 Combined Search

There are several ways to select the destination of the route. You can find buttons in the Destination menu that initiate a separate search for addresses, places, place categories, and favorite or recent destinations. The fastest way to search for any of these is to use the Combined Search. In this section you can find the full description of how this feature works. The below process shows how to carry out the search and the following subsections will help you find specific kinds of results.


1. In the Navigation menu, tap



2. Tap



3. First you see hints on the screen showing how you can use the function. These hints are only displayed the first time you use this screen.

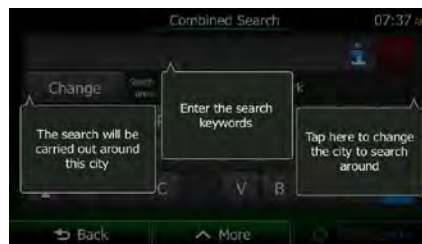


4. Tap anywhere and the hints disappear. Once you get through this screen to the search results, the hints will not appear again when you open this window later but you can see them again if you tap the information button on the right side of the input field.
5. You can see the input field at the top of the screen. Right below that you see the search area, the city/town around which the search is carried out. The default search area is the city/town where you are located. For a local search, skip the next step.
6. (optional) To search in a different area, do as follows:

1. Tap



1. Tap. A new screen opens with a new input field. A hint bubble explains how you can specify the new search center.

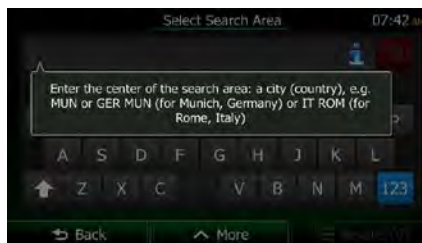

2. Tap anywhere and the hint disappears. If you successfully select a new search area, the hint will not appear again when you open this window later but you can see it again if you tap the information button on the right side of the input field.
3. Start entering the name of the new city/town using the screen keyboard. You only need to enter a few letters to get a result. If the new search area is in a different country or state, you can narrow the search results if you enter one space and then a few letters of the country or state of the search area.

4. The most likely result appears below the input field as you enter new letters. Tap to select this as your new search area. If you cannot see your preferred area after a few letters, tap



and select one from the list.

 
7. With the proper search area displayed, you can start entering the name, address or category of the



destination you are looking for. The number shown in the button shows how many results match the entered text. The background search is carried out while you enter letters so this number may keep on increasing if you wait a few seconds. Keep on entering new letters while this number is high.



8. Once the number of results is acceptable after a few seconds of searching, you can tap



to switch to the result screen.

9. The result screen also opens with hints. Tap anywhere to suppress them. Once you select a destination, they will not appear again.




10. You see all results in the list, regardless of their type. Addresses, Places, Place categories, Favorite and recent destinations are mixed within one list.





 

11. You have the following options:


- Tap the result you want to use as your destination. Scroll the list if necessary.
- To narrow the search for only one type of result (for example for Places only) you can tap the related button at the top of the screen. See the next sections for details.





12. Once the destination is selected, a full screen map appears with the selected point in the middle. If

necessary, tap the map somewhere else to modify the destination. The Cursor () appears at

the new location. Tap  to confirm the destination, or tap  to select a different destination.

 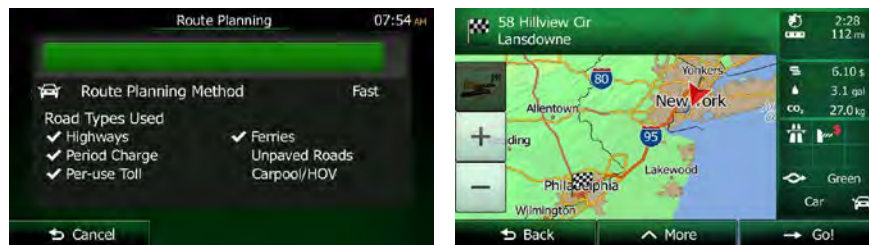
13. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.






If you know that you will use this destination frequently, before tapping  to confirm the destination, put it on the list of your Favorites first: tap  then , give a name for the new Favorite, and tap  to save the location. The map with the destination returns automatically. Now you can start your journey.

 3.1.1.1 Combined Search - Navigating to a recent destination (History)

To find one of your recent destinations in Combined Search, carry out the search as described earlier. For the input text you can use either a part of the name or a part of the address of the recent destination. When you get to the result screen, do as follows:


1. Tap  at the top of the screen.
2. The list is now filtered. What you see is the list of recent destinations with a matching name or address.
3. Scroll down the list if necessary and then select one of the destinations from the list.
4. Once the destination is selected, a full screen map appears with the selected point in the middle. If



necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.

- After a short summary of the route parameters, the map appears showing the entire route. The

route is automatically calculated. Tap  to modify route parameters, or tap

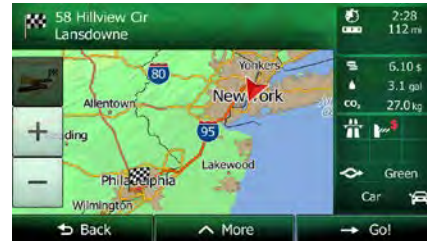
 and start your journey.




 
 **Note!** The alternative way to search for a recent destination is to tap the  button in the Quick menu or in the Destination menu. The rest of the procedure is similar to the above.

3.1.1.2 Combined Search - Navigating to a Favorite destination

To find one of your Favorite destinations in Combined Search, carry out the search as described earlier. When you get to the result screen, do as follows:

- Tap  at the top of the screen.
- The list is now filtered. What you see is the list of your Favorite destinations with a matching name.
- Scroll down the list if necessary and then select one of the destinations from the list.
- Once the destination is selected, a full screen map appears with the selected point in the middle. If


necessary, tap the map somewhere else to modify the destination. The Cursor () appears at

the new location. Tap  to confirm the destination, or tap  to select a different destination.


- After a short summary of the route parameters, the map appears showing the entire route. The

route is automatically calculated. Tap  to modify route parameters, or tap

 and start your journey.

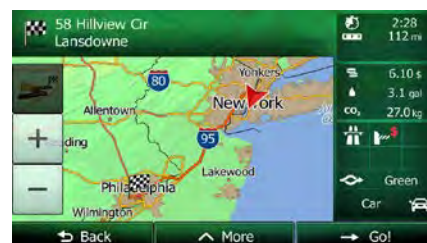





 
Note! The alternative way to search for a Favorite destination is to tap the  button in the Quick menu or in the Destination menu. The rest of the procedure is similar to the above.


 
3.1.1.3 Combined Search - Navigating to an address


To find an address in Combined Search, carry out the search as described earlier. Use the name of the street alone or combined with the house number as your input text. When you get to the result screen, do as follows:


1. Tap  at the top of the screen.
2. The list is now filtered. What you see is the list of matching addresses.
3. Scroll down the list if necessary and then select one of the addresses from the list.
4. Once the destination is selected, a full screen map appears with the selected point in the middle. If

necessary, tap the map somewhere else to modify the destination. The Cursor () appears at

the new location. Tap  to confirm the destination, or tap  to select a different destination.

5. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.

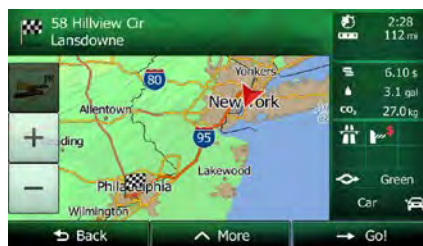






 
Note! The alternative way to search for an address is to tap the  button in the Destination menu. Unlike the Combined Search, this alternative search method is a structured one where you can define the parts of the address separately.


3.1.1.4 Combined Search - Navigating to an intersection



To find an intersection in Combined Search, carry out the search as described earlier but use the '&' sign to separate the two intersecting streets. You do not need to use spaces before and after the separator character. For example you can use any of the following input texts to find the intersection of Collins Street and Douglas Avenue (the more precise the input string the fewer false results are expected):

- Collins St & Douglas Ave
- Collins & Douglas
- Coll St & Dou Av
- Col&Doug
- C&D
- Collins St& (this one will give you all the intersections of Collins Street so that you can select the appropriate one from the result list)

When you get to the result screen, do as follows:

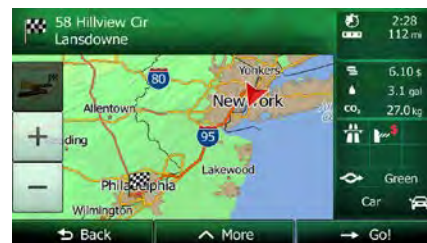
1. Tap  at the top of the screen.
2. The list is now filtered. What you see is the list of matching intersections.
3. Scroll down the list if necessary and then select one intersection from the list.
4. Once the destination is selected, a full screen map appears with the selected point in the middle. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.
5. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.



 **Note!** The alternative way to search for an address is to tap the  button in the Destination menu. Unlike the Combined Search, this alternative search method is a structured one where you can define the parts of the address separately.

3.1.1.5 Combined Search - Navigating to a Place of Interest

 
To find a Place of Interest in Combined Search, carry out the search as described earlier. Search for a part of its name. When you get to the result screen, do as follows:

1. Tap  at the top of the screen.
2. The list is now filtered. What you see is the list of matching Places ordered by their distance from your current location.
3. (optional) Should your product contain Places from different data providers, you can further narrow the list by showing Places from one provider only. Look for the provider logos at the top of the screen. Tap one of them to see Places from that provider only.



4. Scroll down the list if necessary and then select one of the Places from the list.
5. Once the destination is selected, a full screen map appears with the selected point in the middle. If


necessary, tap the map somewhere else to modify the destination. The Cursor () appears at


 
the new location. Tap  to confirm the destination, or tap  to select a different destination.

6. After a short summary of the route parameters, the map appears showing the entire route. The

route is automatically calculated. Tap  to modify route parameters, or tap

 and start your journey.

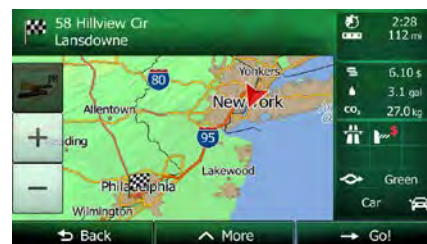


 





The alternative way to search for a Place is to tap the  button in the Quick menu or the  button in the Destination menu. These alternatives are different from the Combined Search. The first one is also a name search but if there is a route planned, it will not be carried out around your current location but along the route. The Place search in the Destination menu is a complex Place search with several options including category search or search around the destination of the current route.

 Note!

3.1.1.6 Combined Search - Navigating to a Place of Interest by its category

To find a Place of Interest in Combined Search by giving its category only, carry out the search as described earlier. Search for a part of the category name. When you get to the result screen, do as follows:


1. The list is ordered with Place categories at the beginning but if you want, you can filter the list to contain Place categories only. Tap  at the top of the screen to filter the list.
2. Scroll the list and select one of the categories. You get the list of Places in that category ordered by their distance from your current position. If the selected category contains subcategories, you will see all Places in that category mixed into one list.
3. Scroll down the list if necessary and then select one of the Places from the list.
4. Once the destination is selected, a full screen map appears with the selected point in the middle. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.
5. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.

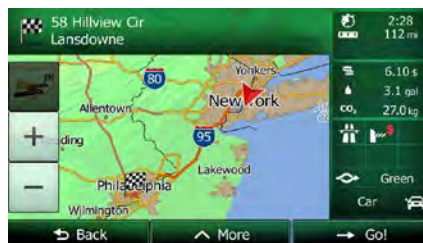



Note!

The alternative way to search for a Place category is to tap the  button in the Destination

menu and then tap . This alternative is different from the Combined Search. When you search for a Place category here, you will go through the whole Place category tree. When you select a category, the list of its subcategories opens.

3.1.2 Entering an address or a part of the address

If you know at least a part of the address, it is the quickest way to select the destination of the route.

 
 
Using the same screen, you can find an address by entering:

- the exact address, including house number
- the center of a city/town
- an intersection
- the midpoint of a street
- any of the above, starting the search with the ZIP code.

3.1.2.1 Entering an address (United States)

To enter an address as the destination, do as follows:

1. If you are on the Map screen, tap  to return to the Navigation menu.

2. In the Navigation menu, tap the following buttons: , .
3. By default, Clarion Mobile Map proposes the country and state where you are. If needed, tap



, enter the first few letters of the destination country or state on the keyboard,


and select one from the list. If you select a country without a state, you can search for a city/town in all its states.



The image shows a screenshot of the 'Find Address' screen. At the top, it says 'Find Address' and '07:41 AM'. Below this, there are several input fields: 'Country' with 'United States, New York' entered, 'City' with '<City or ZIP Code>', 'Street' with '<Street Name>', '<Intersecting Street>', and '<House Number>'. At the bottom, there are two buttons: 'Back' and 'Select City'.

4. Select a new city/town:


- a. Tap . The city/town of your current location is offered by default. For a local search, tap  to accept it, otherwise continue with entering the destination city/town name.
- b. Start entering the name of the city/town on the keyboard.
- c. Find the city/town you need:


- The most likely city/town name is always shown in the input field. To accept it, tap .
- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears

automatically, tap ). Select the city/town from the list.





5. Enter the street name:




- a. Tap .
- b. Start entering the street name on the keyboard.
- c. Find the street you need:

- The most likely street name is always shown in the input field. To accept it, tap .
- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears

 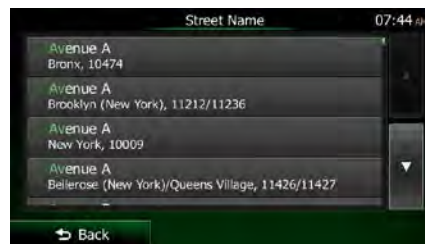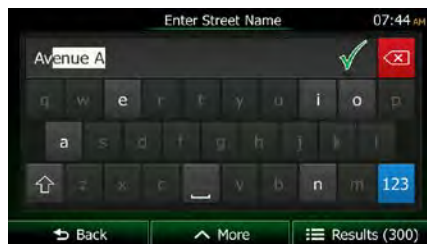automatically, tap ). Select the street from the list.






6. Enter the house number:

- a. Tap .
- b. Enter the house number on the keyboard. (To enter letters, tap .
- c. Tap  to finish entering the address. (If the entered house number cannot be found, the midpoint of the street is selected as the destination.)



7. A full screen map appears with the selected point in the middle. If necessary, tap the map

 
somewhere else to modify the destination. The Cursor () appears at the new location. Tap

 to confirm the destination, or tap  to select a different destination.

8. After a short summary of the route parameters, the map appears showing the entire route. The

route is automatically calculated. Tap  to modify route parameters, or tap


 and start your journey.

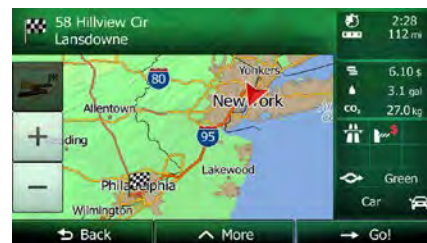

3.1.2.2 Entering an address (Canada)


To enter an address as the destination, do as follows:

 1. If you are on the Map screen, tap  to return to the Navigation menu.

2. In the Navigation menu, tap the following buttons: ,




3. By default, Clarion Mobile Map proposes the country, state and city/town where you are. If needed,

tap , enter the first few letters of the destination country or state on the keyboard, and select one from the list. If you select a country without a state, you can search for a city/town in all its states.



4. If needed, select a new city/town:

- a. Tap .
- b. Start entering the name of the city/town on the keyboard.
- c. Find the city/town you need:

- The most likely city/town name is always shown in the input field. To accept it, tap






- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears

automatically, tap ). Select the city/town from the list.



 


5. Enter the street name:


- Tap .
- Start entering the street name on the keyboard.
- Find the street you need:

- The most likely street name is always shown in the input field. To accept it, tap .
- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap  Results). Select the street from the list.




 
6. Enter the house number:

- Tap .
- Enter the house number on the keyboard. (To enter letters, tap .
- Tap  to finish entering the address. (If the entered house number cannot be found, the midpoint of the street is selected as the destination.)

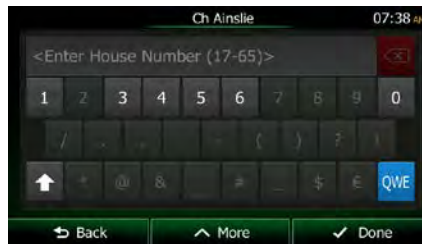

7. A full screen map appears with the selected point in the middle. If necessary, tap the map


somewhere else to modify the destination. The Cursor () appears at the new location. Tap

 to confirm the destination, or tap  to select a different destination.

- After a short summary of the route parameters, the map appears showing the entire route. The

route is automatically calculated. Tap  to modify route parameters, or tap



 and start your journey.

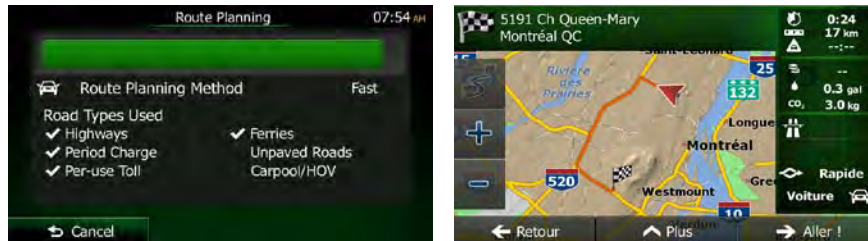

3.1.2.3 Entering an address starting with the street name (in the United States only)


You can leave the city/town name empty and start the search with the street name. This way you can search in all streets of a state. Do as follows:

 
- If you are on the Map screen, tap  to return to the Navigation menu.

- In the Navigation menu, tap the following buttons: , .
- By default, Clarion Mobile Map proposes the country and state where you are. If needed, tap the button with the name of the country, enter the first few letters of the destination country or state on the keyboard, and select a country and state from the list. If you select the country without a state, this function cannot work.




- Enter the street name:

- Tap .
- Start entering the street name on the keyboard.
- Find the street you need:

- The most likely street name is always shown in the input field. To accept it, tap .


- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears


automatically, tap ). Select the street from the list.

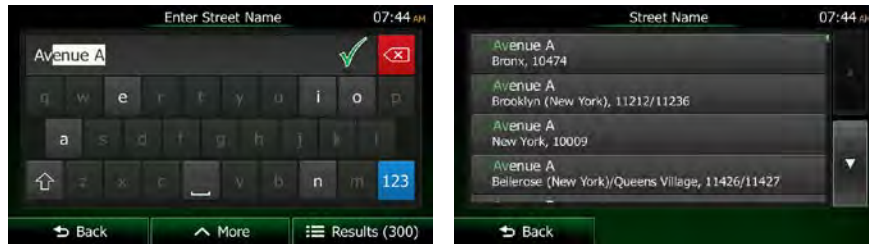


5. Enter the house number:

a. Tap .


 
b. Enter the house number on the keyboard. (To enter letters, tap .


c. Tap  to finish entering the address. (If the entered house number cannot be found, the midpoint of the street is selected as the destination.)

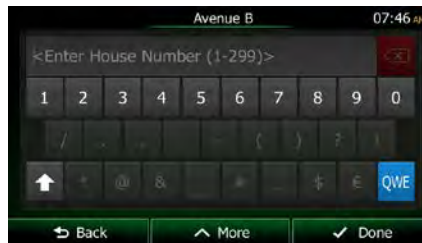


6. A full screen map appears with the selected point in the middle. If necessary, tap the map

somewhere else to modify the destination. The Cursor () appears at the new location. Tap

 to confirm the destination, or tap  to select a different destination.

- After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap

 and start your journey.

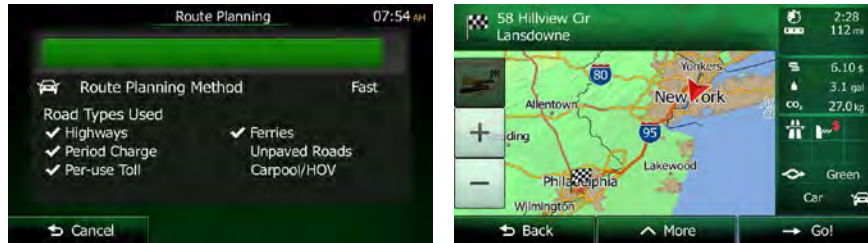


3.1.2.4 Entering the midpoint of a street as the destination


You can navigate to the midpoint of a street if the house number is not available:


- If you are on the Map screen, tap  to return to the Navigation menu.

 - In the Navigation menu, tap the following buttons:



- Select the country, state and city/town as described earlier (page 35).
- Enter the street name:

- Tap .
- Start entering the street name on the keyboard.
- Find the street you need:


 
 
- The most likely street name is always shown in the input field. To accept it, tap .
- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears



automatically, tap ). Select the street from the list.




5. Instead of entering the house number, tap . The midpoint of the street is selected as the destination.



 6. A full screen map appears with the selected point in the middle. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.

7. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.

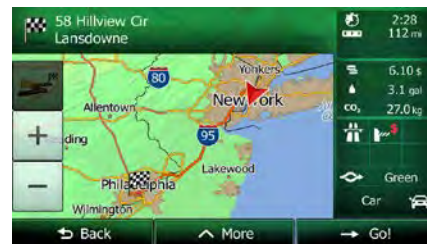

3.1.2.5 Selecting an intersection as the destination

To enter an address as the destination, do as follows:

1. If you are on the Map screen, tap  to return to the Navigation menu.


2. In the Navigation menu, tap the following buttons:



3. Select the country, state and city/town as described earlier (page 35).
4. Enter the street name:



- a. Tap
- b. Start entering the street name on the keyboard.
- c. Find the street you need:

 
- The most likely street name is always shown in the input field. To accept it, tap .
- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears

automatically, tap ). Select the street from the list.




5. Enter the intersecting street name:






1. Tap

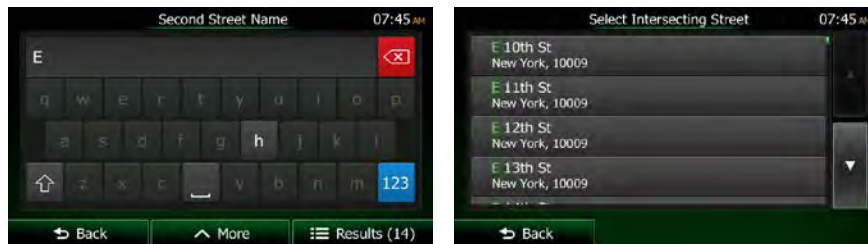


- If only a few intersecting streets exist, their list appears immediately.

 - In case of a longer street, the keyboard screen appears. Start entering the name of the intersecting street on the keyboard. As soon as the street names that match the entered string can be shown on one screen, their list appears automatically. Select from the list.



6. A full screen map appears with the selected point in the middle. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.
7. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.

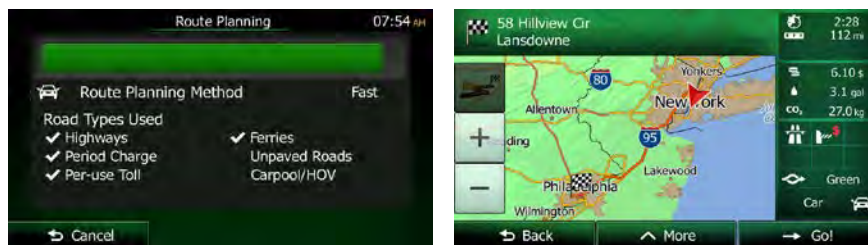


3.1.2.6 Selecting a city/town center as the destination

The city/town center is not the geometric center of the city/town but an arbitrary point the map creators have chosen. In towns and villages, it is usually the most important intersection; in larger cities, it is one of the important intersections.

1. If you are on the Map screen, tap  to return to the Navigation menu.

2. In the Navigation menu, tap the following buttons:
3. Select the country and state as described earlier (page 35).
4. Select the destination city/town:

 - a. Tap



b. Start entering the name of the city/town on the keyboard.

c. Find the city/town you need:


- The most likely city/town name is always shown in the input field. To accept it, tap





- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears

 Results

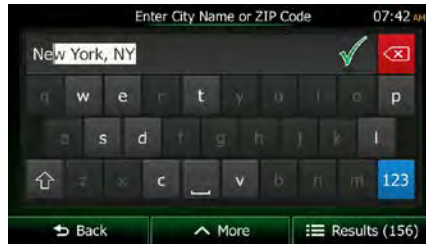automatically, tap  Results (156)). Select the city/town from the list.




 Select City


5. Instead of entering the street name, tap  Select City. This way the center of the displayed city/town becomes the destination of the route.



6. A full screen map appears with the selected point in the middle. If necessary, tap the map

somewhere else to modify the destination. The Cursor () appears at the new location. Tap

 Next


to confirm the destination, or tap  Back to select a different destination.

7. After a short summary of the route parameters, the map appears showing the entire route. The

route is automatically calculated. Tap  More to modify route parameters, or tap

 Go

and start your journey.

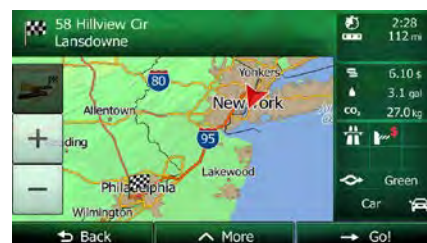


3.1.2.7 Entering an address with a ZIP code

All of the above address searching possibilities can be performed with entering the ZIP code instead of the city/town name. Find below an example with a full address:

1. If you are on the Map screen, tap  to return to the Navigation menu.

 
2. In the Navigation menu, tap the following buttons:




3. Select the country and state as described earlier (page 35).
4. Enter a new city/town using its ZIP code:

- a. Tap



- b. Tap  to open the numeric keypad.
- c. Start entering the ZIP code.
- d. Find the city/town you need:

- The most likely ZIP code is always shown in the input field. To accept it, tap .
- If the desired number does not show up, open the list of results by tapping



. Select the ZIP code from the list.




5. Enter the street name:

- a. Tap




- b. Start entering the street name on the keyboard.
- c. Find the street you need:

- The most likely street name is always shown in the input field. To accept it, tap .


- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears


automatically, tap  Results). Select the street from the list.

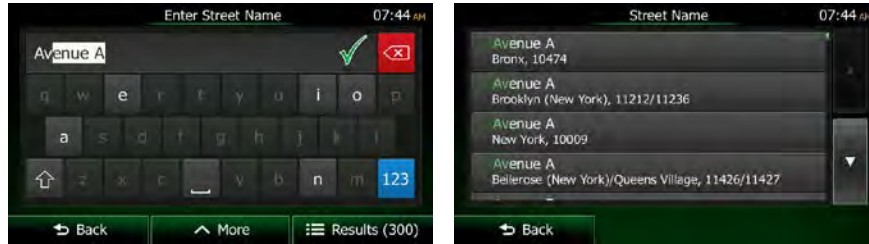


6. Enter the house number:


a. Tap .


 
b. Enter the house number on the keyboard. (To enter letters, tap .


c. Tap  Done to finish entering the address. (If the entered house number cannot be found, the midpoint of the street is selected as the destination.)

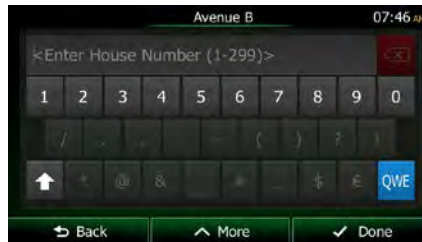

7. A full screen map appears with the selected point in the middle. If necessary, tap the map


somewhere else to modify the destination. The Cursor () appears at the new location. Tap

 Next to confirm the destination, or tap  Back to select a different destination.



8. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap



and start your journey.

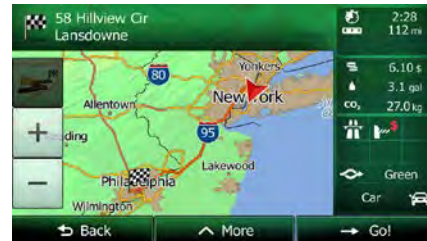

 3.1.2.8 Tips on entering addresses quickly

- When you are entering the name of a city/town or a street:
 - Only those letters are offered on the keyboard that appear in possible search results. All other characters are grayed out.
 - As you are typing, the most likely result is always displayed in the input field. If the guess is correct, tap  to select it.
 - After entering a couple of letters, tap  to list the items that contain the specified letters.
- You can speed up finding an intersection:
 - Search first for the street with a less common or less usual name; fewer letters are enough to find it.
 - If one of the streets is shorter, search for that one first. You can then find the second one faster.
- You can search for both the type and the name of a road. If the same word appears in several names, for example in the name of streets, roads and avenues, you can obtain the result faster if you enter the first letter of the street type: For example, enter 'PI A' to obtain Pine Avenue and skip all Pine Streets and Pickwick Roads.
- You can also search in ZIP codes. As ZIP codes consist of only a few characters, this is usually faster than entering the name of the city/town.

3.1.3 Selecting the destination from the Places of Interest

You can select your destination from the Places of Interest included with Clarion Mobile Map.

Using the same screen, you can find a Place in different ways:

- with the Quick search feature, you can quickly find a nearby Place by its name
- with the Preset search feature, you can find frequently searched types of Places with only a few screen taps
- you can search for a Place by its category
- you can search for a Place by its name


 
In addition, you can search for special services from the 'Where Am I?' screen.

3.1.3.1 Quick search for a Place of Interest

The Quick search feature lets you quickly find a Place by its name. The search is always carried out

- along the recommended route if it exists or
- around your current location if there is no destination given.


1. Start the Quick search function:

- If you are on the Map screen, tap  and then tap .

- If you are in the Navigation menu, tap ,  and then tap .

2. Using the keyboard, start entering the name of the Place.




 
- After entering a few letters, tap  to open the list of Places with names containing the entered character sequence.








- (optional) The Places in the list are ordered by the length of the necessary detour (when navigating a route) or by their distance from the current position (when no destination is given). If you need to


reorder the list, tap .

 - Browse the list if necessary and tap one of the list items. A full screen map appears with the selected point in the middle. The name and address of the Place is displayed at the top of the screen.

- (optional) Tap  to see the details of the selected Place. Tap  to return to the map.

- If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.



- After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.

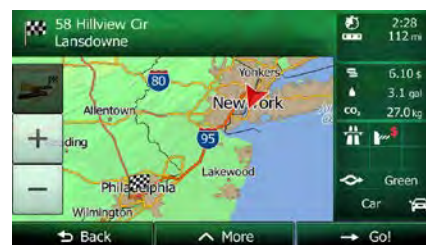

3.1.3.2 Searching for a Place of Interest using preset categories




The Preset search feature lets you quickly find the most frequently selected types of Places.

  
1. If you are on the Map screen, tap  to return to the Navigation menu.

2. In the Navigation menu, tap the following buttons: , .



   3. The preset search categories appear:

- :
 - If an active route exists, gas stations are searched along the route.
 - If there is no active route (destination is not selected), they are searched around the current position.
 - If the current position is not available either (no GPS signal), they are searched around the last known position.
- :
 - If an active route exists, parking lots are searched around the destination of the route.
 - If there is no active route (destination is not selected), they are searched around the current position.
 - If the current position is not available either (no GPS signal), they are searched around the last known position.
- :
 - If an active route exists, restaurants are searched along the route.
 - If there is no active route (destination is not selected), they are searched around the current position.
 - If the current position is not available either (no GPS signal), they are searched around the last known position.

 

- If an active route exists, accommodation is searched around the destination of the route.
- If there is no active route (destination is not selected), they are searched around the current position.
- If the current position is not available either (no GPS signal), they are searched around the last known position.

4. Tap any of the quick search buttons to get an instant list of Places.



5. (optional) The Places in the list are ordered by their distance from the current or last known position, from the destination or by the length of the necessary detour. If you need to reorder the



list, tap

6. Browse the list if necessary and tap one of the list items. A full screen map appears with the selected point in the middle. The name and address of the Place is displayed at the top of the screen.




7. (optional) Tap to see the details of the selected Place. Tap to return to the map.

8. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap to confirm the destination, or tap to select a different destination.

9. After a short summary of the route parameters, the map appears showing the entire route. The



route is automatically calculated. Tap to modify route parameters, or tap and start your journey.

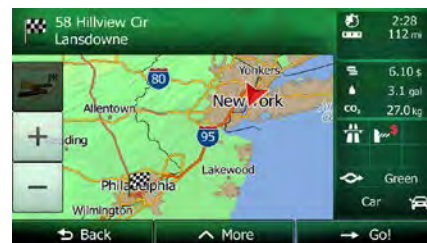


3.1.3.3 Searching for a Place of Interest by category





You can search for Places of Interest by their categories and subcategories.

  1. If you are on the Map screen, tap  to return to the Navigation menu.

 2. In the Navigation menu, tap the following buttons: , .

3. Tap .

    4. Select the area around which the Place should be searched for:

- Tap  to search around the current position or if it is not available, around the last known position. (The result list will be ordered by the distance from this position.)
- Tap  to search for a place within a selected city/town. (The result list will be ordered by the distance from the center of the selected city/town.)
- Tap  to search for a place around the destination of the active route. (The result list will be ordered by the distance from the destination.)
- Tap  to search along the active route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for upcoming gas stations or restaurants. (The result list will be ordered by the length of the necessary detour.)



5. (optional) If you have selected , select the city/town to search in.



6. Select one of the main Place categories (e.g. Accommodation) or tap **List All Places** to list all Places around the selected location or along the route.



7. Select one of the Place subcategories (e.g. Hotel or Motel) or tap **List All Places** to list all Places in the selected main category around the selected location or along the route.



8. Sometimes the list of brands in the selected Place subcategory appears. Select one brand or tap **List All Places** to list all Places in the selected subcategory around the selected location or along the route.



9. Finally, the results appear in a list.








10. (optional) The Places in the list are ordered by their distance from the current or last known position, from the selected city/town, from the destination or by the length of the necessary detour.

 

If you need to reorder the list, tap


More

11. Browse the list if necessary and tap one of the list items. A full screen map appears with the selected point in the middle. The name and address of the Place is displayed at the top of the screen.

12. (optional) Tap  to see the details of the selected Place. Tap  to return to the map.

13. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.

14. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.

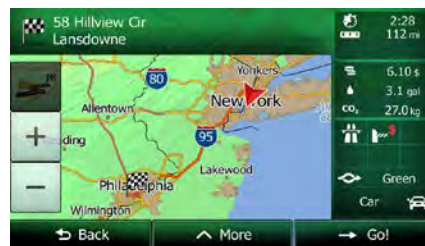


3.1.3.4 Searching for a Place of Interest by name


You can search for Places of Interest by their names. You can search around different locations or along your route in the whole Place database or in one Place category or subcategory only.

1. If you are on the Map screen, tap  to return to the Navigation menu.

 2. In the Navigation menu, tap the following buttons: , .

3. Tap .

 4. Select the area around which the Place should be searched for:

- Tap  to search around the current position or if it is not available, around the last known position. (The result list will be ordered by the distance from this position.)


- Tap **In a City** to search for a place within a selected city/town. (The result list will be ordered by the distance from the center of the selected city/town.)
- Tap **Around Destination** to search for a place around the destination of the active route. (The result list will be ordered by the distance from the destination.)
- Tap **Along Route** to search along the active route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for upcoming gas stations or restaurants. (The result list will be ordered by the length of the necessary detour.)



5. (optional) If you have selected **In a City**, select the city/town to search in.



6. Select one of the main Place categories (e.g. Accommodation) to search in or tap **Find by Name** to search among all Places.

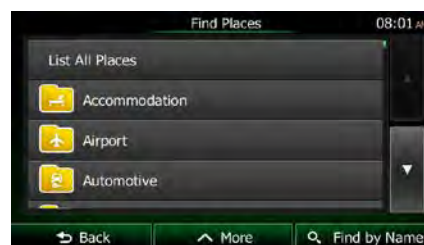

7. Select one of the Place subcategories (e.g. Hotel or Motel) to search in or tap



to search in the selected Place category.



8. Tap



if you have not done it before.



9. Using the keyboard, start entering the name of the Place.



10. After entering a few letters, tap



to open the list of Places with names containing the entered character sequence.


 





11. (optional) The Places in the list are ordered by their distance from the current or last known position, from the selected city/town, from the destination or by the length of the necessary detour.



If you need to reorder the list, tap




12. Browse the list if necessary and tap one of the list items. A full screen map appears with the selected point in the middle. The name and address of the Place is displayed at the top of the screen.

13. (optional) Tap  to see the details of the selected Place. Tap  to return to the map.

14. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.

15. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.

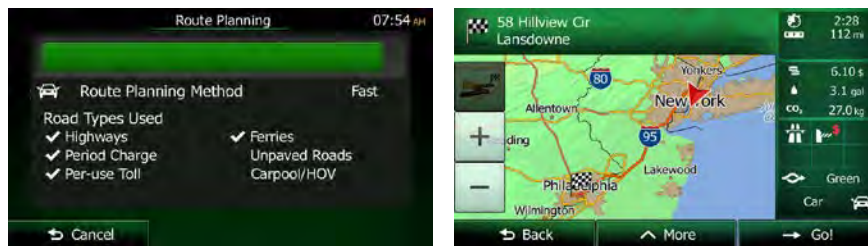

3.1.3.5 Searching for a Place of Interest by its phone number

You can search for Places of Interest by their phone number:

1. If you are on the Map screen, tap  to return to the Navigation menu.

2. In the Navigation menu, tap the following buttons:



3. The numeric keyboard appears. Enter the phone number you are looking for or a part of it.

4. Tap .

5. The list of Places with the entered sequence in their phone number appears.



 
- (optional) The Places in the list are ordered by their distance from the current or last known position, from the selected city/town, from the destination or by the length of the necessary detour.

^ More


 
 
If you need to reorder the list, tap



- Browse the list if necessary and tap one of the list items. A full screen map appears with the selected point in the middle. The name and address of the Place is displayed at the top of the screen.




- (optional) Tap to see the details of the selected Place. Tap  to return to the map.



  - If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.


- After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.

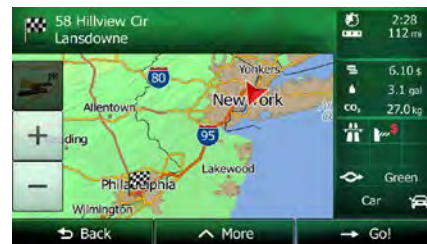

3.1.3.6 Selecting nearby assistance from 'Where Am I?'

You can quickly search for nearby assistance from the 'Where Am I?' screen.



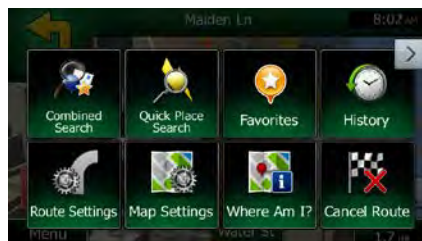

- On the Map screen, tap  to open the Quick menu.



2. Tap , and then .




3. Preset search categories appear, all for searching around the current position (or around the last known position if the current position is not available):

-  Car Repair Around Here : Car repair and roadside assistance services
-  Health Around Here : Medical and emergency services
-  Police Around Here : Police stations
-  Gas Station Around Here : Gas stations


 
4. Tap any of the quick search buttons to get an instant list of that type of Places.









5. (optional) The Places in the list are ordered by their distance from the current or last known position, from the selected city/town, from the destination or by the length of the necessary detour.

 If you need to reorder the list, tap .


 
 
6. Browse the list if necessary and tap one of the list items. A full screen map appears with the selected point in the middle. The name and address of the Place is displayed at the top of the screen.


7. (optional) Tap  to see the details of the selected Place. Tap  to return to the map.

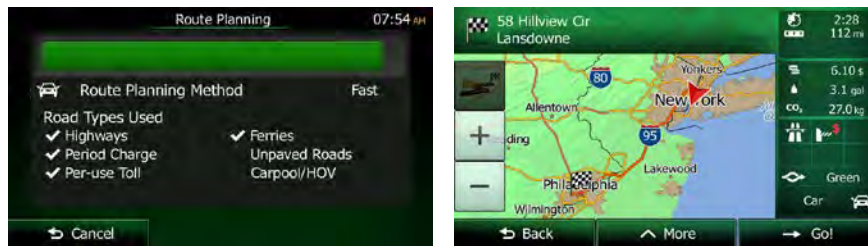

8. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.
9. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.




3.1.4 Selecting a map location as the destination

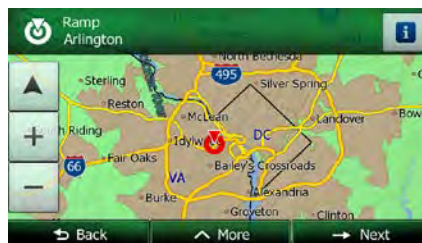
1. If you are on the Map screen, tap  to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons: , .
3. Locate your destination on the map: move and scale the map as needed.



4. Tap the location that you want to select as your destination. The Cursor () appears there.
5. Tap  to select the Cursor as the destination.

- After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap

 and start your journey.

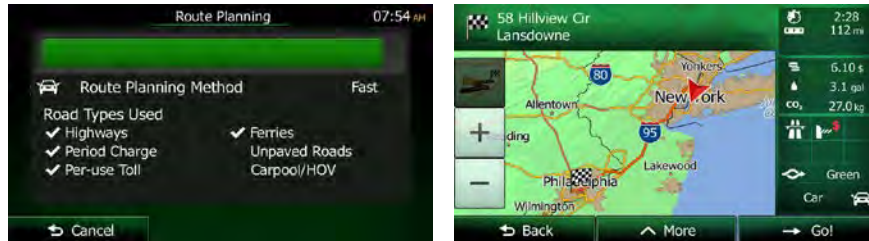

3.1.5 Selecting the destination from your Favorites



You can select a location that you have already saved as a Favorite to be your destination. Adding a location to the list of Favorite destinations is described on page 79.

- Access the list of Favorites:

- If you are on the Map screen, tap  to open the Quick menu.
- If you are in the Navigation menu, tap .

- Tap . The list of Favorite destinations is displayed.



- Tap the Favorite that you want to set as your destination. If necessary, browse down to see more of the list or tap  and enter a few letters from the name of the Favorite destination.
- A full screen map appears with the selected point in the middle. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap



to confirm the destination, or tap



to select a different destination.

- After a short summary of the route parameters, the map appears showing the entire route. The


route is automatically calculated. Tap



to modify route parameters, or tap



and start your journey.

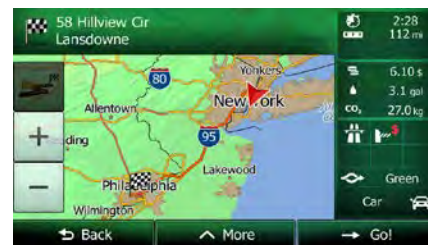


3.1.6 Selecting your Home location

To navigate to your Home location, first you need to save it. Search for your address or browse the map

 and when the Cursor is at the desired location, tap


 




and select



Now that the Home location is set, you can quickly navigate to it:

- To select the Home location, do one of the following:

- If you are on the Map screen, tap  and then tap  (this button can be added to the Quick menu in Settings - page 97).

- If you are in the Navigation menu, tap  and then tap .

- A full screen map appears with the selected point in the middle. If necessary, tap the map

 
somewhere else to modify the destination. The Cursor (




) appears at the new location. Tap




to confirm the destination, or tap



to select a different destination.

- After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap

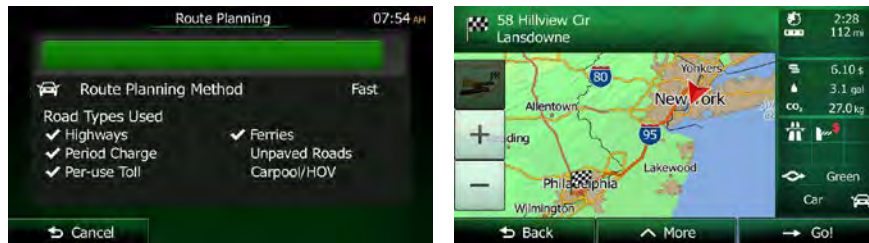

 and start your journey.



3.1.7 Selecting a recent destination from the History


The destinations that you have set earlier appear in the History.

- Access the History:


- If you are on the Map screen, tap  and then tap .


 
- If you are in the Navigation menu, tap  and then tap .

- The list of recent destinations appears. Smart History promotes three destinations to the first page based on your previous routes (most likely destinations). The rest of the destinations are ordered by time they were last selected. If necessary, scroll the list to see earlier destinations.

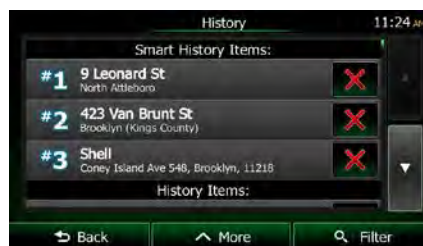

- Select a destination from the list.
- A full screen map appears with the selected point in the middle. If necessary, tap the map


somewhere else to modify the destination. The Cursor () appears at the new location. Tap

 to confirm the destination, or tap  to select a different destination.

- After a short summary of the route parameters, the map appears showing the entire route. The

route is automatically calculated. Tap  to modify route parameters, or tap


 and start your journey.

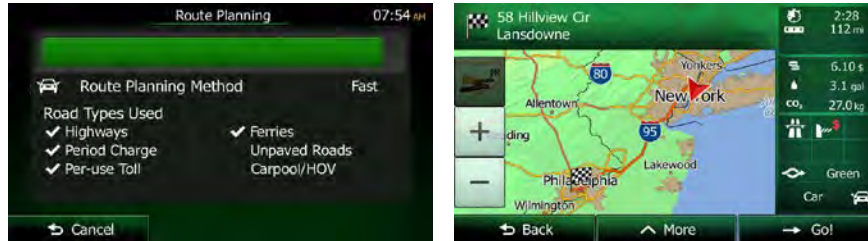

3.1.8 Entering the coordinate of the destination

You can also select a destination by entering its coordinate. Do as follows:

 - If you are on the Map screen, tap  to return to the Navigation menu.

- In the Navigation menu, tap .

- Open the  menu and tap .

- You can enter the latitude and longitude values in any of the following formats: decimal degrees; degrees and decimal minutes; or degrees, minutes and decimal seconds.




 
- (optional) If necessary, tap  then  and enter the coordinate in UTM format.



6. When finished, tap .

7. A full screen map appears with the selected point in the middle. If necessary, tap the map


somewhere else to modify the destination. The Cursor () appears at the new location. Tap

 to confirm the destination, or tap  to select a different destination.

8. After a short summary of the route parameters, the map appears showing the entire route. The


 
route is automatically calculated. Tap  to modify route parameters, or tap

 and start your journey.

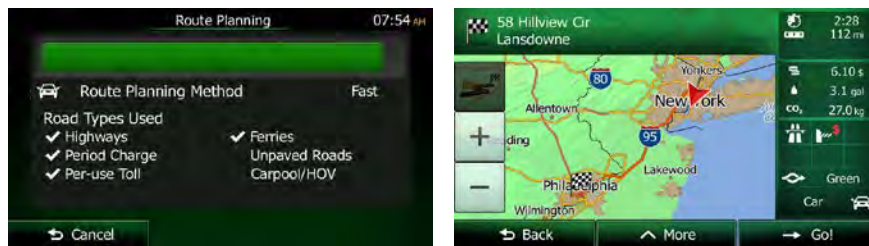
 



3.1.9 Navigate to a location stored in a photo

You can also set the location stored in a photo as your destination. Do as follows:

1. In the Find menu, tap  and then tap .
2. A list of the photos stored in the device appear. Select a photo to set its location as the destination.
3. A full screen map appears with the selected point in the middle. If necessary, tap the map


somewhere else to modify the destination. The Cursor () appears at the new location. Tap

 to confirm the destination, or tap  to select a different destination.

- After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap



and start your journey.

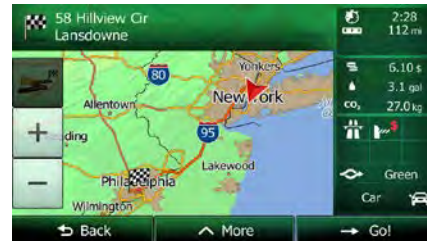

Note!

Only geotagged JPG files contain location information. That is why these kind of files can only be used in navigation. Other picture files do not appear in the list.

Files must be located on an inserted microSD card, either in the root folder or in a "pictures" folder.

3.1.10 Building a route from the list of destinations (Create Route)

You can also build your route destination by destination from the My Route menu.

- If you are on the Map screen, tap  to return to the Navigation menu.

- In the Navigation menu, tap .

- Tap .



- There is only one line in the list of route points, the start point of the route, normally the current GPS position.


- Tap  to select the destination.

6. The Destination menu appears and you can select the destination of the route the same way as described in the previous sections.





 
7. When the new destination is selected, the list returns.




8. To add more destinations, tap  where you want to insert the new route point in the list, and repeat the above procedure.

3.2 Viewing the entire route on the map



It is easy to get a map overview of the active route. Do as follows:

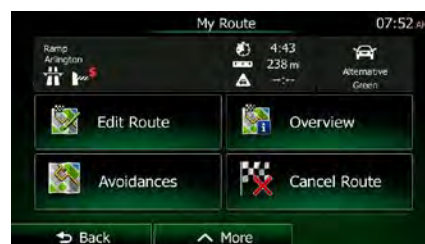
1. If you are on the Map screen, tap  to return to the Navigation menu.
2. In the Navigation menu, tap .
3. Tap . The active route is displayed in its full length on the map together with additional information and controls.









3.3 Checking route parameters and accessing route related functions

  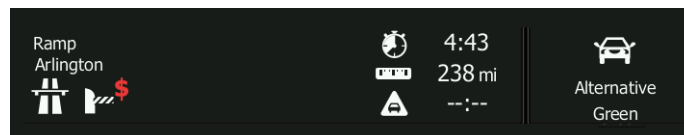You can check different parameters of the route recommended by Clarion Mobile Map.

1. If you are on the Map screen, tap  to return to the Navigation menu.
2. In the Navigation menu, tap .
3. The following pieces of information are displayed:
 - The name and/or address of the destination.
 - Warning icons (if any). They provide extra information about your route (e.g. unpaved roads or toll roads to be taken).
 - The total time of the route.
 - The total length of the route.
 - Estimated delay calculated from traffic events on your route.
 - The symbol of the vehicle type used in route calculation.
 - The route planning method (e.g. Fast).



4. You have the following options on this screen (for detailed instructions on how to use them, see the next chapter):
 - Tap  to edit the route: to add or remove destinations or change their sequence. You can also set a route start point other than your current location. This can be useful to plan and save a future trip.
 - Tap  to display the entire route on the map.
 - Tap  to bypass a part of the route.
 - Tap  to delete the active route.
 - Tap  to open a list with more options like selecting from route alternatives, changing route parameters, simulating the route, saving the active route or loading a previously saved route.
 - Tap  to return to the Navigation menu.




3.4 Modifying the route

When navigation is already started, there are several ways to modify the active route. The following sections show some of those options.

3.4.1 Selecting a new destination when already having a route: New Route, Waypoint or Final Destination

If you already have a recommended route and you select a new destination as described in the above sections, the application will ask you whether to start a new route, add a new waypoint (intermediate destination) to the route or append the newly selected destination at the end of the current route.



- Tap  to plan a new route to the newly selected location. The previous destination and waypoint(s) are deleted.
- Tap  to add the newly selected location as an intermediate destination to your route. The other destinations of the route remain intact. Note: the new waypoint is placed among destinations to keep the route optimal. To decide where a waypoint to appear, use the Edit Route feature.
- Tap  to append the newly selected destination at the end of the route. The other destinations of the route remain intact. The previous final destination is now the last waypoint.

3.4.2 Setting a new starting position for the route

 
For normal navigation, all routes are planned from the current position. In order to check future routes, simulate them or see their length in time and distance, you can turn off the GPS receiver. Then you can set the starting point of the route to a different location than the current GPS position.

1. If you are on the Map screen, tap  to return to the Navigation menu.

2. In the Navigation menu, tap




3. If you already have a route, tap



If you are starting a new route, tap




4. The first line is the start of the route, normally the current GPS position. Tap  and confirm your action at the warning message.



5. The Destination menu appears and you can select the start point of the route the same way you select a destination.



6. When the new start point is set, tap
7. The map returns with a transparent Vehimarker (showing that there is no GPS reception). If an active route already existed, it is now recalculated starting from the selected location.

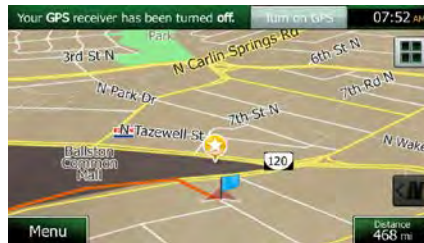

8. To return to normal navigation, tap

3.4.3 Editing the list of destinations (Edit Route)

You can edit the route by modifying the list of destinations. You can add or remove destinations, modify the start position or reorder the list.

1. If you are on the Map screen, tap

 


to return to the Navigation menu.





2. In the Navigation menu, tap



3. Tap



4. You have the following options:


 
 

 
- Tap  to add a new destination.
- Tap  to delete a destination.
- Tap  to modify the start point of the route.
- Tap  to reorder the list. You can do it manually or you can let the application optimize the route for you.

3.4.4 Pausing the active route

You do not need to pause the active route: when you start driving again, Clarion Mobile Map restarts the voice instructions from your position.

3.4.5 Canceling the active route


To cancel the navigated route, do one of the following:

- If you are on the Map screen, tap  and then tap . (If you have a route with waypoints, you need to tap  until all waypoints are deleted.)
- In the Navigation menu, tap  and then tap . The active route is deleted with all its waypoints.

3.4.6 Checking route alternatives when planning the route

You can select from different route alternatives or change the route planning method after you have selected a new destination. Do as follows:


1. Select a destination as explained earlier, and get to the route confirmation screen.

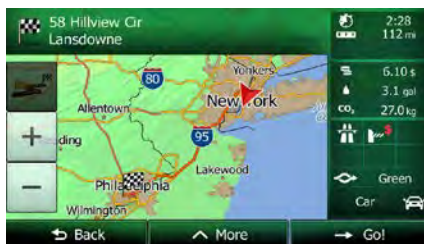


2. Tap



 
3. Tap




4. You see the basic details of three route alternatives with the selected route planning method. Tap any of them to see it on the map.

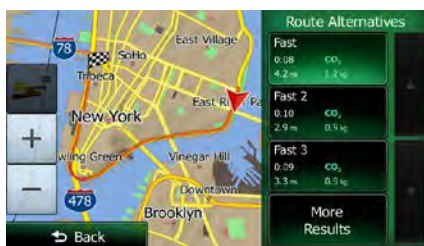

5. Or if you cannot find a good alternative, tap

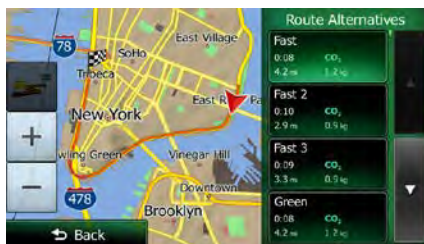

6. Select one of the route alternatives and tap  to return to the previous screen. Clarion Mobile Map recalculates the route. The orange line now shows the new recommended route.

3.4.7 Checking route alternatives for an existing route

To recalculate the active route with a different route planning method, you can modify the Route settings (page 97). There is another way to do this and to compare different route alternatives with the same route planning method. Do as follows:

1. If you are on the Map screen, tap  to return to the Navigation menu.

 
2. In the Navigation menu, tap .




3. Tap




4. Tap




5. You see the basic details of three route alternatives with the selected route planning method. Tap any of them to see it on the map.

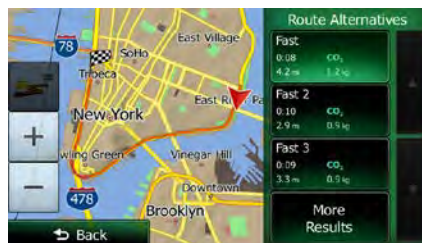

 - Or if you cannot find a good alternative, tap  and scroll down for routes with different routing methods.

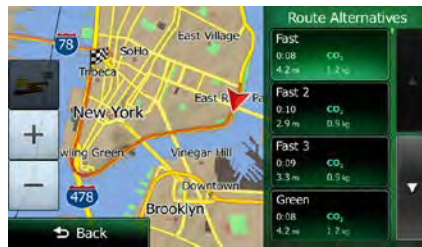


- Select one of the route alternatives then tap and hold  for a few seconds to return to the Map screen. Clarion Mobile Map recalculates the route. The orange line now shows the new recommended route.

3.4.8 Changing the vehicle used in route planning

To recalculate the active route for a different vehicle, do as follows. These changes can also be made in Settings (page 97).

- On the Map screen, tap  and then tap .



 
- Tap  and then tap one of the following:

-  Car
-  Emergency
-  Bus
-  Taxi

- Clarion Mobile Map recalculates the route optimized for the new vehicle type. The orange line now shows the new recommended route.




 

3.4.9 Changing the road types used in route planning

To recalculate the active route with different road type preferences, do as follows. These changes can also be made in Settings (page 97).

1. On the Map screen, tap  and then tap .



2. Tap any of the listed road types to modify the route. If needed, scroll the list for all road types. You have the following options (their order depends on the selected vehicle type):

-  **Motorways** - You might need to avoid freeways when you are driving a slow car or you are towing another vehicle.
-  **Period Charge** - Charge roads are pay roads where you can purchase a pass or vignette to use the road for a longer period of time. They can be enabled or disabled separately from toll roads.
-  **Per-use Toll** - Clarion Mobile Map includes toll roads (pay roads where there is a per-use charge) in the routes by default. If you disable toll roads, Clarion Mobile Map plans the best toll-free route.
-  **Ferries** - Clarion Mobile Map includes ferries in a planned route by default. However, a map does not necessarily contain information about the accessibility of temporary ferries. You might also need to pay a fare on ferries.
-  **Unpaved Roads** - Clarion Mobile Map excludes unpaved roads by default: unpaved roads can be in a bad condition and usually you cannot reach the speed limit on them.

 
3. The route has already been recalculated. Tap  to return to the Map screen. The orange line now shows the new recommended route.


3.5 Saving a location as a Favorite destination

You can add any location to Favorites, the list of frequently used destinations. Planning a route to one of the Favorite destinations is described on page 63.


1. Select a destination as described before. It can be an address, a Place, any location on the map, a previously used destination from History, etc.
2. When the full screen map appears with the selected location in the middle, tap



3. Tap . The button is dark green with a white star icon and the text "Add to Favorites" in white.

4. (optional) Using the keyboard, you can change the name offered for the Favorite. Tap  to enter numbers or symbols.


 




5. Tap  to save the location as a new Favorite destination. The button is dark green with a white checkmark icon and the text "Done" in white.

3.5.1 Editing the details of a Favorite destination

You can select a location that you have already saved as a Favorite and edit its details. Adding a location to the list of Favorite destinations is described on page 79.


1. Access the list of Favorites:

 - If you are on the Map screen, tap  and then tap .


- If you are in the Navigation menu, tap  and then tap .

 2. The list of Favorite destinations is displayed.




3. Tap the Favorite that you want to edit. If necessary, browse down to see more of the list or tap  and enter a few letters from the name of the Favorite destination.

4. A full screen map appears with the selected point in the middle.

5. Tap  to see the details of the selected Place.

 6. Tap any of the data fields and modify its content.

7. Tap and hold  to return to the map.


3.6 Saving a map location as an alert point

You can save any map location as an alert point (for example a speed camera or a railroad crossing).

1. Browse the map and select a location. The red Cursor appears there.

2. Tap

More

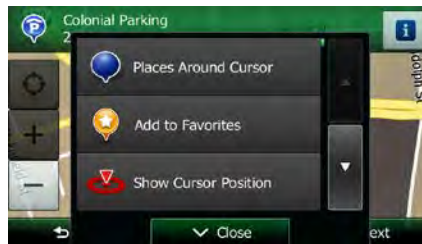

3. Scroll down the list and tap

Add Alert Point

4. On the newly opened screen, select the type of the alert point, the direction from which you expect the alert, and (if applicable) the speed limit for this alert point.



5. Tap

Save

3.7 Editing an alert point

You can edit a previously saved or uploaded alert point (for example a speed camera or a railroad crossing).

1. Browse the map and select the alert point to edit. The red circle appears around the alert point.

2. Tap

More



3. Scroll down the list and tap



4. On the newly opened screen, modify the type of the alert point, the direction from which you expect the alert, or (if applicable) the speed limit for this alert point.




5. Tap


Save

3.8 Watching the simulation of the route


You can run a simulated navigation that demonstrates the active route. Do as follows:


1. If you are on the Map screen, tap  to return to the Navigation menu.

2. In the Navigation menu, tap .

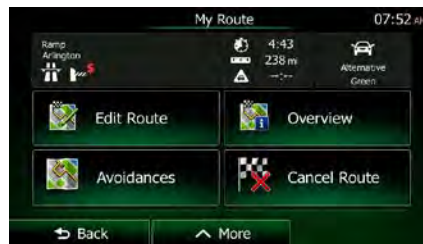

 
3. Tap .

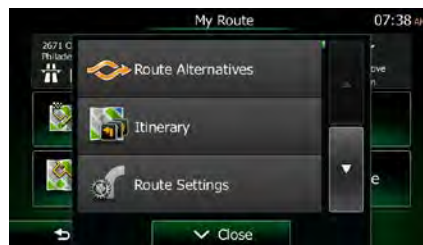




4. Scroll down the list and tap . The simulation starts from the starting point of the route, and using a realistic speed, it leads you through the whole recommended route.



 - a) (optional) You have the following controls during the simulation (the control buttons disappear after a few seconds but you can open them again if you tap the map):


 
 




- : Jump to the next route event (maneuver).

- : Pause the simulation.
- : Jump to the previous route event (maneuver).
- : Tap to increase the speed of the simulation to 4, 8 or 16 times faster. Now tap again to return to the normal speed.

b) Tap  to stop the simulation.

4 Off-road navigation

  When first started, Clarion Mobile Map calculates routes using the road network of the high quality vector maps provided with the product. You can switch the application to off-road mode in Route settings in one of the following ways:

- From the Main menu, tap , ,  and then .
- From the Map screen, tap ,  and then .

Most of the procedures described for on-road navigation also apply to off-road navigation. However, there are some that are not available in this navigation mode (for example you cannot open the itinerary as you have no maneuvers just route points and straight lines between them).

4.1 Selecting the destination of the route


Selecting the start point or a destination (waypoint or final destination) is the same as described at on-road navigation. The only difference is that route points are linked to form a route with straight lines regardless of the road network and traffic regulations.

4.2 Navigating in off-road mode

The real difference between the on-road and off-road modes is the navigation itself. When you are on the Map screen with an off-road route:

- your position and heading is not aligned with the nearest road and
- there is no turn by turn navigation just a recommended direction.

You see a orange line drawn between your current position and the next destination to reach. The Turn Preview field in the top left corner shows a compass with your bearing and the distance of the next destination.

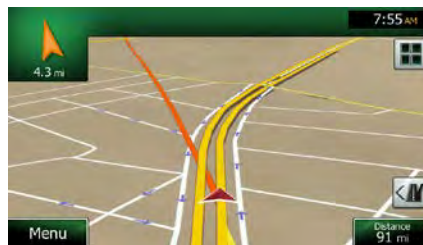

When you reach a waypoint, the orange line will show the direction to the next destination. (Future legs of the route are shown with orange lines.)

When you reach the final destination, navigation ends.

5 Reference Guide

On the following pages you will find the description of the different concepts and menu screens of Clarion Mobile Map.

5.1 Concepts

5.1.1 Smart Zoom

Smart Zoom provides much more than just a usual automatic zoom feature:

- **While following a route:** when approaching a turn, it will zoom in and raise the view angle to let you easily recognize your maneuver at the next junction. If the next turn is at a distance, it will zoom out and lower the view angle to be flat so you can see the road in front of you.
- **While driving without an active route:** Smart Zoom will zoom in if you drive slowly and zoom out when you drive at high speed.


5.1.2 Daytime and night color themes

Clarion Mobile Map uses different color themes during the day and during the night for both the map and the menu screens.

- Daytime colors are similar to paper road maps, and the menus are bright.
- The night color themes use dark colors for large objects to keep the average brightness of the screen low.

5.1.3 Tunnel view

When entering a tunnel, the map is replaced with a generic tunnel image so that surface roads and buildings cannot distract you.

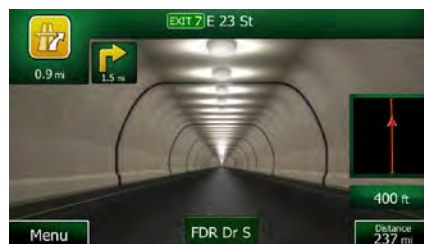

The top-down overview of the tunnel helps you orient yourself. The remaining distance in the tunnel is also displayed.





 
After leaving the tunnel, the original map view returns.

This feature can be turned off in Settings (page 101).



5.1.4 Route calculation and recalculation

Clarion Mobile Map calculates the route based on your preferences:

- Route planning methods:


-  **Fast**: Gives a quick route if you can travel at or near the speed limit on all roads. Usually the best selection for fast and normal cars.
-  **Short**: Gives a route that has the smallest total distance of all possible routes. It can be practical for slow vehicles.
-  **Green**: Gives a quick but fuel efficient route based on the fuel consumption data given in Route settings (page 97). Travel cost and CO₂ emission calculations are estimations only. They cannot take elevations, curves and traffic conditions into account.
-  **Economical**: For vehicle types where Green routing is not available, this method combines the benefits of Fast and Short: Clarion Mobile Map calculates as if it were calculating the Fast route, but it takes other roads as well to save fuel.
-  **Easy**: Results in a route with fewer turns and no difficult maneuvers. With this option, you can make Clarion Mobile Map to take, for example, the freeway instead of a series of smaller roads or streets.

  - Vehicle types:

-  **Car**:
 - Maneuver restrictions and directional constraints are taken into account when planning a route.
 - Roads are used only if access for cars is allowed.
 - Private roads and resident-only roads are used only if they are inevitable to reach the destination.
 - Walkways are excluded from routes.
-  **Emergency**:
 - All maneuvers are available in intersections.
 - Directional constraints are taken into account the way that opposite direction is allowed with a low speed.
 - A private road is used only if the destination is there.
 - Walkways are excluded from routes.




 - Maneuver restrictions and directional constraints are taken into account when planning a route.
 - Roads are used only if access for buses is allowed.
 - Private roads, resident-only roads and walkways are excluded from routes.



- Maneuver restrictions and directional constraints are taken into account when planning a route.
 - Roads are used only if access for taxis is allowed.
 - Private roads, resident-only roads and walkways are excluded from routes.

- Road types used or avoided in route calculation:

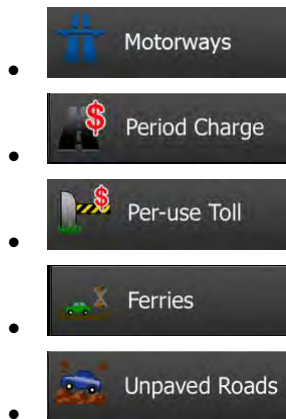

Real-time Traffic events are also taken into account and sometimes greatly modify the route.

Clarion Mobile Map automatically recalculates the route if you deviate from the proposed itinerary or if a newly received Traffic event concerns a part of the recommended route.

For further information about Route settings, see page 97.

5.1.5 Green routing

Route calculation is not only about finding the quickest or shortest route. For some of the vehicle types, you can also check the fuel consumption and CO₂ emission when planning a route, and you can create cost effective routes with less effect on the environment.


In Route settings, you can edit the parameters of the selected vehicle. Enter the fuel consumption values and the price of the fuel. You can also select whether you want to see the difference between your route and the green route even if the selected routing method is not Green.

Green


After the above parameters are set, select **Green** as route planning method to get a fast but also fuel efficient route. Note that travel cost and CO₂ emission calculations are estimations only. They cannot take elevations, turns, curves and traffic conditions into account. Also, this routing is not meant to

give you the "greenest" route of all. It is still important to travel quickly so the result is a fast route with low fuel consumption and CO₂ emission.

With a vehicle type where green routing is selectable, whichever route planning method is selected, the Green details are also shown when you confirm the route:

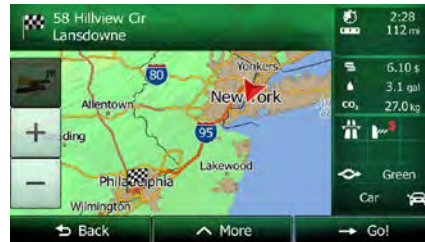

If the selected route planning method is not Green, and you have allowed the application to show the green alternative, the price, fuel consumption and CO₂ emission differences between your selected route and the Green route are also shown on this screen:

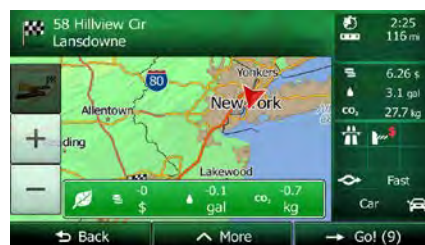

Tap the field with these details to switch the route to Green immediately.

5.1.6 Road safety cameras and other proximity alert points

There is a special proximity warning for road safety cameras (like speed or red light cameras) and other proximity alert points (like schools or railroad crossings). These alert points are not part of Clarion Mobile Map. You can download them from www.naviextras.com or you can upload points in a specific text file if needed.

You can also add your own alert points or edit the previously uploaded points. See page 81 for details.

The application can warn you when you approach road safety cameras like speed cameras or dangerous areas like school zones or railroad crossings. You can set up the different alert types individually in Sound and Warning settings (page 95).

The following alert types are available:

- Audio warning: beeps can be played while you are approaching one of these points, or extra alert sounds if you exceed the given speed limit while approaching.
- Visual warning: the type of the alert point, its distance and the related speed limit appear on the Map screen while you are approaching one of these cameras.

For some of the alert points, the enforced or expected speed limit is available. For these points, the audio alert can be different if you are below or above the given speed limit.

- Only when speeding: The audio alert is only played when you exceed the given speed limit.
- When approaching: The audio alert is always played when approaching one of these alert points. In order to draw your attention, the alert can be different when you exceed the speed limit.



Note!

The warning for road safety cameras is disabled when you are in a country where road safety camera warning is prohibited. However, you must ensure on your own liability that using this feature is legal in the country where you intend to use it.

5.1.7 Speed limit warning

Maps may contain information about the speed limits of the road segments. Clarion Mobile Map is able to warn you if you exceed the current limit. This information may not be available for your region (ask your local dealer), or may not be fully correct for all roads in the map.

Speed warning can be fine-tuned in Sound and Warning settings (page 95).

You can set the relative speed above which the application initiates the warning.

The following alert types are available:

- Audio warning: you receive a verbal warning when you exceed the speed limit with the given percentage.
- Visual warning: the current speed limit is shown on the map when you exceed it (for example:



You can also choose to see the speed limit sign on the map all the time.

5.1.8 Traffic information in route planning

The recommended route is not always the same between two points. Real-time traffic information can help you avoid current traffic events like temporary road closures or a traffic jam caused by an accident. The function is subject to data availability.

You can display the live traffic information on the map if you browse the map and select this option from the More menu. A 2D map is displayed with road segments colored by the severity of traffic events. Tap



the event type icon at the road segment and then tap the button to get information about the traffic event.

5.1.10.1 Real-time traffic information (TMC)

TMC (Traffic Message Channel) can provide you with the real-time status of the traffic. Route calculation can avoid road blocks or unexpected traffic jams caused by an accident.

TMC is a specific application of the FM Radio Data System (RDS) used for broadcasting real-time traffic and weather information.

Using traffic information is enabled by default in Clarion Mobile Map.



Note!


TMC is not a global service. It may not be available in your country or region. Ask your local dealer for coverage details.

Clarion NX604 contains the TMC receiver that is needed to receive Traffic events.

If public Traffic data is broadcast at your location, Clarion Mobile Map automatically takes into account the traffic events received. You do not need to set anything in the program. The receiver will automatically search the FM radio stations for TMC data, and the decoded information will immediately be used in route planning. When Clarion Mobile Map receives traffic information that may affect your route, the program will warn you that it is recalculating the route, and navigation will continue with a new route that is optimal considering the most up-to-date traffic conditions.


To fine-tune this recalculation, you can set the minimum delay that can trigger a route recalculation, or you can instruct Clarion Mobile Map to have you confirm the new recommended route before it takes effect. You can do these in Traffic settings (page 97).




A special icon () is displayed on the Map screen to show you whether traffic events are received. The icon shows the status of the traffic receiver when there are no traffic events on your route, otherwise it shows the type of the next traffic event on your route.


Road segments affected by traffic events are displayed with an alternate color on the map, and small symbols above the road show the nature of the event:



 1. Tap  to open the Traffic Summary screen:






2. Tap  to open the list of event categories.

3. Tap the traffic category you are interested in, or tap  to see the list of all events:



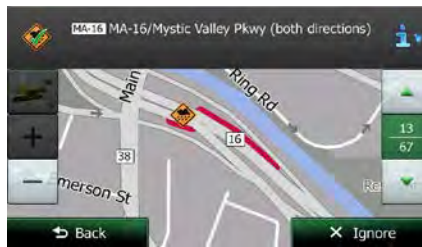

- Now tap any of the list items to see its details, and to display the affected road segment in its full length on the map:

 
 








 **Note!**  icon will open the list of significant traffic events to let you quickly check them.

5.2 'More' menu

The 'More' menu provides you with various options and additional applications. On the map screen, tap the following buttons:  , .



Button	Description
	You can configure the program settings, and modify the behavior of Clarion Mobile Map. Fine-tune route planning options, change the look of the Map screen, turn on or off warnings, or restart the Configuration wizard, and so on. See the next chapter for details.
	Visit www.naviextras.com to get additional content, such as new maps or 3D landmarks and useful applications..
	The scientific calculator helps you in all your calculation needs. Tap the Mode button for additional functions and use the memory to save your results.


	The Fuel consumption monitor helps you keep track of the consumption of your car even if you do not use navigation for all your journeys. Set the initial odometer value and then record the distance taken and fuel filled in whenever you fill your car. You can also set reminders for regular car maintenance.
	Tap this button to see the sunlit and dark areas of the world. Your current location and route points are marked on the map. Tap the Details button to see the exact sunrise and sunset times for all your route points (your current location, all waypoints and the final destination).
	If you save your trip logs when you arrive at some of your destinations or let the application automatically save the trip logs for you, those logs are all listed here. Tap one of the trips to see the trip statistics, speed and altitude profile. If track log has also been saved, you can display it on the map with the selected color. Track logs can be exported to GPX files for later use.
	Select a country from the list and see useful driving information about the selected country. Information may include speed limits on different road types, the maximum blood alcohol level and any compulsory equipment you need to show when stopped by the police.
	Run the Demo and watch sample route simulations to see how navigation works. The About section provides you with product information. Read the Software and Database End User License Agreement, or check the map and other contents of the application. You can also access program usage statistics.



5.3 Settings menu





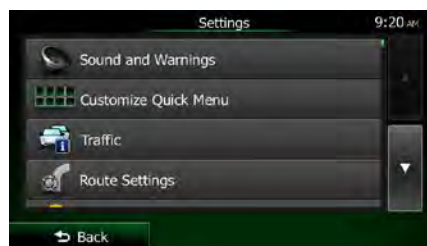






You can configure the program settings, and modify the behavior of Clarion Mobile Map.

On the map screen, tap the following buttons: , , .

The Settings menu has several options. Tap  or scroll with your finger to see the full list.




Button	Description
 Sound and Warnings	Adjust the different sounds of the application or change the voice guidance language. In addition, you can enable and set up different warnings and alerts.
 Customize Quick Menu	The content of the Quick menu (page 21) is fully customizable. Tap the button you want to change, and select its new function from the list.

 Traffic	<p>The recommended route is not always the same between two points. Whenever suitable data exists, traffic information can be taken into account in the route calculation.</p>
 Route Settings	<p>These settings determine how routes will be calculated. Select the type of vehicle you are driving, the road types used in route planning, and the route planning method.</p>
 User Profiles	<p>If more drivers use Clarion Mobile Mapfor navigating, their settings can be remembered by using one of the user profiles.</p>
 Map Settings	<p>You can fine-tune the appearance of the Map screen. Adjust the map view to your needs, choose suitable color themes from the list for both daytime and night use, change the blue arrow to a 3D car model, show or suppress 3D buildings, turn track logging on or off, and manage your Place visibility sets (which Places to show on the map).</p>
 Visual Guidance Settings	<p>Adjust how the software helps you navigate with different kinds of route related information on the Map screen.</p>
 Display	<p>Display related settings.</p>
 Regional	<p>These settings allow you to customize the application for your local language, measurement units, time and date settings and formats, as well as to choose the time zone.</p>
 Trip Monitor	<p>Trip logs and track logs contain useful information about your trips. Trip logs can be saved manually when you reach your destination or you can turn on the automatic saving here.</p>
 Log Collection	<p>The application collects usage information and GPS logs that may be used for improving the application and the quality and coverage of maps. Here you can enable or disable collecting these logs.</p>
 Start Configuration Wizard	<p>Modify the basic software parameters set during the initial setup process. For details, see page 7.</p>
 User Data Management	<p>These settings determine how user data is managed. There are three options:</p> <ul style="list-style-type: none"> • Backup User Data: All user data and the current settings are saved on the inserted microSD card, and each backup is stored in a new file. • Restore User Data: All user data and the settings are overwritten with the information stored in the latest backup file. • Delete User Data: All the user backup files are deleted.

5.3.1 Sound and Warnings

 Adjust the different sounds of the application or change the voice guidance language. In addition, you can enable and set up different warnings and alerts.


Button	Description
Volume	Tap this button to adjust the volume of the different sounds in the application. A new screen shows the different sound types and their controls. See below for details.
Voice Language	<p>This button shows the current voice guidance profile. By tapping the button, you can select a new profile from the list of available languages and speakers. Tap any of these to hear a sample voice prompt. Just tap  when you have selected the new spoken language.</p>
Verbosity Level	Tap this button to set the verbosity of the voice instructions: how much they tell and how often they speak.
Speed Warning Settings	<p>Maps may contain information about the speed limits of the road segments. Clarion Mobile Map is able to warn you if you exceed the current limit. This information may not be available for your region (ask your local dealer), or may not be fully correct for all roads in the map.</p> <p>This setting lets you decide whether you wish to receive visible and/or audible warnings.</p> <p>Adjust the slider to set the relative speed above which the application initiates the warning.</p> <p>The following alert types are available:</p> <ul style="list-style-type: none">• Audio warning: you receive a verbal warning when you exceed the speed limit with the given percentage.• Visual warning: the current speed limit is shown on the map when you exceed it. <p>If you prefer to see the speed limit sign on the map all the time (normally it is shown only if your speed exceeds it), you can set it here.</p>

Alert Point Settings	<p>This feature allows you to receive a warning when approaching a Road Safety Camera or other alert points like school zones or railroad crossings. You must ensure on your own liability that using this feature is legal in the country where you intend to use it.</p> <p>You can set the alert for the different alert point categories individually. The following alert types are available:</p> <ul style="list-style-type: none"> • Audio warning: beeps can be played while you are approaching one of these points, or extra alert sounds if you exceed the given speed limit while approaching. • Visual warning: the type of the alert point, its distance and the related speed limit appear on the Map screen while you are approaching one of these cameras. <p>For some of the alert points, the enforced or expected speed limit is available. For these points, the audio alert can be different if you are below or above the given speed limit.</p> <ul style="list-style-type: none"> • Only when speeding: The audio alert is only played when you exceed the given speed limit. • When approaching: The audio alert is always played when approaching one of these alert points. In order to draw your attention, the alert is different when you exceed the speed limit.
Warning Sign Alerts	Maps may contain driver alert information. Tap this button to turn on or off these warnings and to set the distance from the hazard to receive the warning at. These can be set individually for the different warning types.
Notify GPS Signal Lost	This button turns the voice notification on or off for the event that the GPS signal is lost during navigation.

You can control the volume of the following sound types:

Button	Description
Voice	These controls affect the volume of the guidance sounds (verbal instructions). They can also be accessed from the Quick menu.

Controls for each sound type:

Button	Description
Volume slider	Adjusts the volume of the related sound.
	Use the switch to mute the related sound. The slider becomes inactive. Tap again to re-enable.




5.3.2 Customize Quick menu

The content of the Quick menu (page 21) is fully customizable. Tap the button you want to change, and select its new function from the list.

The list of available functions and their descriptions are on page 21.

5.3.3 Traffic settings

The recommended route is not always the same between two points. Whenever suitable data exists, traffic information can be taken into account in the route calculation.

Button	Description
 Traffic Receiver	Use this switch to enable or disable the TMC receiver that can receive real-time traffic information. The rest of the buttons below are all related to the TMC function and are available only if the receiver is enabled.
 Detour	This setting determines how Clarion Mobile Map uses the received real-time traffic information in route calculation. When calculating a new route, or when recalculation becomes necessary based on the received Traffic events, Clarion Mobile Map avoids traffic events if it makes sense. You can also set the minimum delay that triggers route recalculation, and you can instruct the application if you want to confirm every recalculation.
 Event Types	Tap this button to open the list of traffic event types, and select which events to take into account in route calculation.

5.3.4 Route settings


 

 
 

These settings determine how routes will be calculated.

Button	Description
Vehicle	You can set the type of vehicle you will use to navigate the route. Based upon this setting, some of the road types can be excluded from the route, or some of the restrictions may not be taken into account in route calculation.
Navigation Mode	On-road navigation creates a turn by turn itinerary using the road network on the map. Switch to off-road navigation to navigate between destinations in a straight line.
Route Planning Method	The route calculation can be optimized for different situations and vehicle types by changing the planning method. See below for details.

To let the route fit your needs, you can also set which road types are to be considered for or to be excluded from the route if possible.

Excluding a road type is a preference. It does not necessarily mean total prohibition. If your destination can only be accessed using some of the excluded road types, they will be used but only as much as necessary. In this case a warning icon will be shown on the My Route screen, and the part of the route not matching your preference will be displayed in a different color on the map.

In the list of road types you can see in how many segments and what total length of the road type is used in the current route.

Button	Description
 Motorways	You might need to avoid freeways when you are driving a slow car or you are towing another vehicle.
 Period Charge	Charge roads are pay roads where you can purchase a pass or vignette to use the road for a longer period of time. They can be enabled or disabled separately from toll roads.
 Per-use Toll	Clarion Mobile Map includes toll roads (pay roads where there is a per-use charge) in the routes by default. If you disable toll roads, Clarion Mobile Map plans the best toll-free route.
 Ferries	Clarion Mobile Map includes ferries in a planned route by default. However, a map does not necessarily contain information about the accessibility of temporary ferries. You might also need to pay a fare on ferries.
 Unpaved Roads	Clarion Mobile Map excludes unpaved roads by default: unpaved roads can be in a bad condition and usually you cannot reach the speed limit on them.
 Calculate Green Alternative	If the selected routing method is not Green, you can have your route compared to the best green alternative on the screen when confirming the route. If this alternative is much better than the selected method, you can quickly switch to Green mode.

Vehicle types:

 
• Car :

- Maneuver restrictions and directional constraints are taken into account when planning a route.
- Roads are used only if access for cars is allowed.
- Private roads and resident-only roads are used only they are inevitable to reach the destination.
- Walkways are excluded from routes.


• Emergency :

- All maneuvers are available in intersections.
- Directional constraints are taken into account the way that opposite direction is allowed with a low speed.

- A private road is used only if the destination is there.
- Walkways are excluded from routes.



 - :
 - Maneuver restrictions and directional constraints are taken into account when planning a route.
 - Roads are used only if access for buses is allowed.
 - Private roads, resident-only roads and walkways are excluded from routes.



- :
 - Maneuver restrictions and directional constraints are taken into account when planning a route.
 - Roads are used only if access for taxis is allowed.
 - Private roads, resident-only roads and walkways are excluded from routes.

Route Planning Method types:

Button	Description
Fast	Gives a quick route if you can travel at or near the speed limit on all roads. Usually the best selection for fast and normal cars.
Short	Gives a short route to minimize the distance to travel. It can be practical for slow vehicles. Searching for a short route regardless of the speed, this route type is rarely practical for normal vehicles.
Green	Gives a quick but fuel efficient route based on the fuel consumption data given in Route settings (page 97). Travel cost and CO ₂ emission calculations are estimations only. They cannot take elevations, curves and traffic conditions into account.
Economical	For vehicle types where Green routing is not available, this method combines the benefits of Fast and Short: Clarion Mobile Map calculates as if it were calculating the Fast route, but it takes other roads as well to save fuel.
Easy	Results in a route with fewer turns and no difficult maneuvers. With this option, you can make Clarion Mobile Map to take, for example, the freeway instead of a series of smaller roads or streets.

5.3.5 User profiles


If more drivers use Clarion Mobile Mapfor navigating, their settings can be remembered by using one of the user profiles. Rename the profiles after tapping the edit button on the right so that all users know which profile to use and switch between profiles by tapping its name. If you select a new profile, the application restarts so that the new settings can take effect.









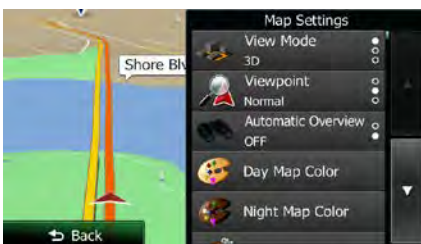





5.3.6 Map settings

You can fine-tune the appearance of the Map screen. Adjust the map view to your needs, choose suitable color themes from the list for both daytime and night use, change the blue arrow to a 3D car model, show or hide 3D buildings, turn track logging on or off, and manage you Place visibility sets (which Places to show on the map).

The map is always shown on the screen so that you can see the effect when you change a setting.














Button	Description
 View Mode 3D	Switch the map view between a 3D perspective view, a 2D heading-up view and a 2D north-up view.
 Viewpoint Normal	Adjust the basic zoom and tilt levels to your needs. Three levels are available.
 Automatic Overview ON	When selected, the map zooms out to show an overview of the surrounding area if the next route event (maneuver) is far. When you get close to the event, the normal map view returns.
 Day Map Color	Select the color scheme used in daytime mode.
 Night Map Color	Select the color scheme used in night mode.

 3D Vehicle Gallery	<p>Replace the default position marker to one of the 3D vehicle models. You can select separate icons for different vehicle types selected for route planning. Separate icons can be used for car, pedestrian and the other vehicles.</p>
 Landmarks ON	<p>Show or suppress 3D landmarks, 3D artistic or block representations of prominent or well-known objects.</p>
 Buildings ON	<p>Show or suppress 3D city models, 3D artistic or block representation of full city building data containing actual building size and position on the map.</p>
 3D Terrain ON	<p>Show or suppress the 3D elevation of the surrounding terrain.</p>
 Track Logs ON	<p>Turn on or off track log saving, that is, saving the sequence of the locations your journeys go through.</p>
 Place Markers	<p>Select which Places to show on the map while navigating. Too many Places make the map crowded so it is a good idea too keep as few of them on the map as possible. For this, you have the possibility to save different Place visibility sets. You have the following possibilities:</p> <ul style="list-style-type: none"> • Tap the checkbox to show or hide the Place category. • Tap the name of the Place category to open the list of its subcategories. • Tap  to save the current Place visibility set or to load a previously saved one. Here you can also revert to the default visibility settings.

5.3.7 Visual guidance settings

Adjust how the software helps you navigate with different kinds of route related information on the Map screen.

 Data Fields	<p>The data fields in the corner of the Map screen can be customized. Tap this button and select the values you want to see. The values can be different when you navigate a route from when you are just cruising without a given destination. You can select general trip data like your current speed or the altitude, or route data related to your final destination or the next waypoint on your route.</p>
 Offer Freeway Services	<p>You may need a gas station or a restaurant during your journey. This feature displays a new button on the map when you are driving on freeways. Tap this button to open a panel with the details of the next few exits or service stations. Tap any of them to display it on the map and add it as a waypoint to your route if needed.</p>
 Facility Types	<p>Select the service types displayed for the freeway exists. Choose from the POI categories.</p>

 Signposts	<p>Whenever adequate information is available, lane information similar to the real ones on road signs above the road is displayed at the top of the map. You can turn this feature on or off.</p>
 Junction View	<p>If you are approaching a freeway exit or a complex intersection and the needed information exists, the map is replaced with a 3D view of the junction. You can turn this feature on or let the map be displayed for the whole route.</p>
 Tunnel View	<p>When entering tunnels, the surface roads and buildings can be disturbing. This feature shows a generic picture of a tunnel instead of the map. A top-down overview of the tunnel and remaining distance are also displayed.</p>
 Route Progress Bar	<p>Turn on the route progress bar to see your route as a straight line on the left side of the map. The blue arrow represents your current position and moves up as you travel. Waypoints and Traffic events are also displayed on the line.</p>
 Offer Congestion Detour on Highways	<p>When you slow down while driving on a freeway, there is a chance that you are in a traffic jam so Clarion Mobile Map offers you a detour using the next exit. The message shows you distance of the exit and the difference in distance and estimated time compared to the original route. You can choose from one of the following options:</p> <ul style="list-style-type: none"> • Tap Dismiss or just ignore the message if you want to keep the original route. • Tap Preview to see the overview of the original route and the detour to make the decision. You can accept the detour as offered or increase the bypassed freeway segment before accepting. • Turn to the suggested new direction and the route will be automatically recalculated.
 Offer Real-time Route Alternatives	<p>Similar to the above possibility, alternative routes can be suggested when driving on normal roads. Clarion Mobile Map will select a different turn in the upcoming intersection and offers you a different route for the next section of the route.</p> <p>Your options are the similar as above but you cannot modify the offered detour.</p>
 Offer Parking Around Destination	<p>Parking at the destination may not be easy in city areas. As you approach the destination, Clarion Mobile Map can offer parking category Places near your destination. Tap the "P" button to open a top-down map with the destination and the offered parking Places. Select one and modify the route accordingly.</p>
 Offer Hints Upon Detour	<p>If you leave the recommended route and suddenly exit the freeway, the application offers different alternatives near the exit like gas stations or restaurants. Also, if there are avoidable parts of the original route ahead (like a tunnel, a toll road or a ferry), you will find them in the list in case you want to bypass them with the help of Clarion Mobile Map.</p>

5.3.8 Display settings

Display related settings include menu animations, separate skins for daytime and night use and the brightness of the display.

Menu Animation	When animation is turned on, buttons on menus and keyboard screens appear in an animated way. Screen transitions are also animated.
----------------	---

5.3.9 Regional settings

These settings allow you to customize the application for your local language, measurement units, time and date settings and formats, as well as to choose the time zone.

Button	Description
Program Language	This button displays the current written language of the user interface. By tapping the button, you can select a new language from the list of available languages. The application will restart if you change this setting; you are asked to confirm this.
Units and Formats	You can set the distance units to be used by the program. Clarion Mobile Map may not support all the listed units in some voice guidance languages. You can also set other country specific units used to display different values in the application.
Time Zone	By default, time zone is taken from the map information and adjusted by your current location. Here you can set time zone and daylight saving manually.

5.3.10 Trip monitor settings


 
Trip logs contain useful information about your trips. Trip logs can be saved manually when you reach your destination or you can turn on the automatic saving here. You can access these logs in the Trip monitor. Trip monitor is available from the More menu.

Enable Auto-Saving	Trip monitor can record statistical data of your trips. If you need these logs later, you can let the application save them automatically for you.
Trip database size	This is not a button. This line shows the current size of the trip database, the sum of all trip and track logs saved.
Save track log	Track logs, the sequence of the positions given by the GPS receiver, can be saved together with trip logs. They can later be displayed on the map. You can let the application save the track log whenever it saves a trip.

5.3.11 Log collection settings

If you accept this when first using the application, it collects usage information and GPS logs that may be used for improving the application and the quality and coverage of maps. The data is processed anonymously; no one will be able to track any personal information.

Here you can enable or disable collecting these logs.

 Application Usage Information	Anonymous statistical information on using the navigation software is collected for later development purposes. Understanding how different people use the application can help us improve the user interface and the program workflow.
 GPS Tracks	Anonymous track logs are collected for later development purposes. Your trips can help us improve the quality and coverage of maps.

6 Glossary

2D/3D GPS reception

The GPS receiver uses satellite signals to calculate its (your) position and needs at least four signals to give a three-dimensional position, including elevation. Because the satellites are moving and because objects can block the signals, your GPS device might not receive four signals. If three satellites are available, the receiver can calculate the horizontal GPS position but the accuracy is lower and the GPS device does not give you elevation data: only 2D reception is possible.

Active route

The currently navigated route. Whenever the destination is set, the route is active until you delete it, reach your destination or you quit Clarion Mobile Map. See also: Route.

City Center

The city/town center is not the geometric center of the city/town but an arbitrary point the map creators have chosen. In towns and villages, it is usually the most important intersection; in larger cities, it is one of the important intersections.

Color theme

Clarion Mobile Map comes with different color themes for daytime or night use of the map and menu screens. Themes are custom graphic settings and they can have different colors for streets, blocks or surface waters in 2D and 3D modes, and they display shades or shadows in different ways in 3D mode.

One daytime scheme and one night scheme is always selected for the map and for the menus. Clarion Mobile Map uses them when it switches from day to night and back.

GPS accuracy

Several factors have impact on the deviation between your real position and the one given by the GPS device. For example, signal delay in the ionosphere or reflecting objects near the GPS device have a different and varying impact on how accurately the GPS device can calculate your position.

Map

Clarion Mobile Map works with digital maps which are not simply the computerized versions of traditional paper maps. Similarly to the paper road maps, the 2D mode of digital maps show you streets, roads, and elevation is also shown by colors.

In 3D mode, you can see the altitude differences, for example valleys and mountains, elevated roads, and in selected cities 3D landmarks and 3D buildings are also displayed.

You can use digital maps interactively: you can zoom in and out (increase or decrease the scale), you can tilt them up and down, and rotate them left and right. In GPS-supported navigation, digital maps facilitate route planning.

North-up map orientation

In North-up mode the map is rotated so its top always faces North. This is the orientation for example in Find on Map.

Road Safety Camera

Special alert points for speed, red light or bus lane cameras. Different data sources are available. You can configure Clarion Mobile Map to warn you when you approach one of these cameras.

Detecting the location of Road Safety Cameras is prohibited in certain countries. It is the sole responsibility of the driver to check whether this feature can be used during the trip.

The software is capable of showing and warning for more than just cameras. Various other types of proximity alert points like school zones and railroad crossings are also available.

Route

A sequence of route events, i.e. maneuvers (for example, turns and traffic circles) to reach the destination. The route contains one start point and one or more destinations. The start point is the current (or last known) position by default. If you need to see a future route, the start point can be replaced with any other given point.

Track-up map orientation

In Track-up mode the map is rotated so its top always points in the current driving direction. This is the default orientation in 3D map view mode.

Vehimarker

The current position is shown with a blue arrow on the map by default. The direction of the blue arrow shows the current heading. This position marker can be replaced with different 3D vehicle symbols. You can even specify different Vehimarkers for different route types (depending on which vehicle type is selected for route calculation).

7 Copyright note

The product and the information contained herein are subject to change without prior notification.

This manual may not, in whole or in part, be reproduced or transmitted in any form either electronically or mechanically, including photocopying and recording, without the express written consent of Clarion.

© 2014 - Clarion

© 2006 – 2014 TomTom. All rights reserved. This material is proprietary and the subject of copyright protection, database right protection and other intellectual property rights owned by TomTom or its suppliers. The use of this material is subject to the terms of a license agreement. Any unauthorized copying or disclosure of this material will lead to criminal and civil liabilities.

All rights reserved.

Clarion Co., Ltd.

All Rights Reserved. Copyright © 2014: Clarion Co., Ltd.

2014/4

QY-1110U
QCA-306-100



Notice of Correction

Remarque de correction / Aviso de corrección / Korrekturhinweis /
Avviso di correzione / Kennisgeving van correctie / Rättelse /
Powiadomienie o korekcie / Ειδοποίηση διόρθωσης

English

There is a mistake in "What is Smartphone linking?" in "Using Smart Access" of the "Owner's Manual" and "QUICK START GUIDE". Please read this notice instead of the original incorrect description.

Français

Une erreur existe dans "Qu'est-ce que le raccordement du smartphone ?" ou "Qu'est-ce que le raccordement du téléphone intelligent ?" dans "Utilisation de Smart Access" du "Manuel de l'utilisateur" et "GUIDE DE DÉMARRAGE RAPIDE". Veuillez lire cette remarque plutôt que la description incorrecte d'origine.

Español

Existe un error en "¿Qué es Enlazando Smartphone?" o "¿Qué es Enlazando con el Smartphone?" en "Utilización de Smart Access" o "Cómo usar Smart Access" del "Manual de usuario" y la "GUÍA DE INICIO RÁPIDO". Lea este aviso en lugar de la descripción original que es errónea.

Deutsch

Im Abschnitt "Verwenden von Smart Access" in der Bedienungsanleitung und der KURZANLEITUNG hat sich ein Fehler unter "Was ist die Smartphone-Verknüpfung?" eingeschlichen. Lesen Sie deshalb statt der fehlerhaften Originalbeschreibung diesen Hinweis.

Italiano

È presente un errore in "Cos'è una connessione smartphone?" in "Uso di Smart Access" del "Manuale utente" e "GUIDA DI AVVIO RAPIDO". Leggere il presente avviso anziché la descrizione originaria sbagliata.

Nederlands

Er is een fout in "Wat is Smartphone-koppeling?" in de afdeling "Gebruik van Smart Access" van de "Handleiding" en de "BEKNOPTE HANDLEIDING". Lees deze kennisgeving in plaats van de oorspronkelijke, foutieve beschrijving.

Svenska

Det är ett fel i "Vad är länka smarttelefon?" under "Använda Smart Access" i "Användarhandbok" och "SNABBGUIDE". Läs detta meddelande istället för den ursprungliga, felaktiga beskrivningen.

Polski

Wystąpił błąd w „Co to takiego powiązanie ze smartfonem?” w „Korzystanie z usługi Smart Access” i „Podręczniku użytkownika” oraz „PODRĘCZNIK WPROWADZAJĄCYM”. Należy zapoznać się z niniejszym powiadomieniem a nie z oryginalnym, niewłaściwym opisem.

ελληνικά

Υπάρχει ένα σφάλμα στο "Τι είναι η Σύνδεση Smartphone;" της ενότητας "Χρήση του Smart Access" στο "Εγχειρίδιο χρήσης" και τον "ΟΔΗΓΟ ΓΡΗΓΟΡΗΣ ΕΚΚΙΝΗΣΗΣ". Παρακαλούμε να λάβετε υπόψη σας αυτήν την ειδοποίηση αντί για την αρχική λανθασμένη περιγραφή.

English

Using Smart Access

Smart Access is a cloud information network service provided by Clarion so that all automobile users can enjoy comfortable, safe and convenient driving.

By "linking" vehicles to Smart Access by smartphone, etc., Smart Access provides customers in vehicles with various conveniences such as entertainment, driving related information and Internet information.

What is Smartphone linking?

You can connect the unit to your smartphone and operate the various applications that run on your smartphone from the unit.

For example, you can output audio that is played from the speakers connected to the unit or display images displayed in applications on the unit. This is called "Smartphone linking."

The following lists the smartphones that can be linked to the unit:

- Covered models: iPhone 4, iPhone 4s, Android smartphones (as of March 2014)

<Android devices only>

- Compatible Bluetooth profile: SPP (serial port profile) HID (human interface device profile)
- HDMI output resolution: 480p (720X480/640X480) 576p (720X576)

MEMO:

- With some Android devices, the HDMI output setting on the smartphone must be enabled.

Also, with this function, only applications compatible with Smartphone linking can be used. This User's Manual refers to these as "linking-compatible applications."

— Attention

- Use of Smartphone linking function is charged to smartphone communications fees. Charges are borne by the person contracted to the smartphone being used. Charges billed from the cellphone carrier may be expensive depending on the method of use. Before use, check the price plans and methods of use with the cellphone carrier you are contracted to. We recommend using the optimum price plan, such as a flat-rate data plan based on the frequency of use.

— Notice

- While you are driving, some applications cannot be operated so as to prevent obstruction to driving.
- Information content that is distributed in real time belongs to third parties having the rights concerned. The content of services might be changed or suspended for reasons of third parties having the rights concerned.

□ Linking-compatible applications

To use Smartphone linking, linking-compatible applications and application management software "Smart Access" must be installed on the software. First, search for "Smart Access" from the App StoreSM or Google PlayTM and install this.

Next, install the linking-compatible applications. Start up Smart Access on the smartphone and install the linking-compatible applications from recommended lists.

Linking-compatible applications are scheduled to be added as they become available.

For details on how to use applications, refer to the Help for each application that is started up on the smartphone.

□ Procedure up to Smartphone linking

The Smartphone linking procedure is as follows.

— Notice


- During Smartphone linking, operations on the iPhone are not possible.

(For iPhone)


1. Set "iPhone" for "Linked device" on the Settings menu.
2. Start Smart Access on the iPhone.
3. Connect the iPhone to the unit
For the device with 30-pin connector, connect iPhone with the CCA-750 video jack (sold separately) still connected to the VTR cable.
4. Start the application on the unit.

(For Android smartphones)

1. Set "Android" for "Linked device" on the Settings menu.
2. Start Smart Access on the smartphone.
3. Set "Usage Setting" in "BT Devices Connection" on the Settings menu, and then connect your smartphone via Bluetooth.
4. Connect the unit to the smartphone.
The following two connection methods are also available for some smartphones.

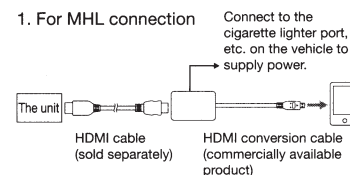

 2. For HDMI connection



— Attention

- Use only an HDMI conversion cable that supports EDID transfer.

5. Start the application on the unit.

NX604/FX503

Owner's manual

COMPACT
disc

clarion®

© 2014 Clarion Co., Ltd.

Made in Japan

QY-1110U

QZ-3110U

This is data CD and does not contain any music.
Playback on an audio system can cause damage
to your hearing and speakers.
This CD contains application software and
Owner's manual.



QCA-306-100

clarion**GARANTIE LIMITÉE DE 1 AN CLARION**

Pour le Canada et les États-Unis seulement

Ce produit Clarion vendu par un marchand autorisé Clarion est garanti contre tous défauts de matériel et de fabrication pour une durée **d'un (1) an** à compter de la date de vente initiale lorsque l'achat est effectué chez un marchand autorisé Clarion; les items tels les piles sont couverts par une garantie de 6 mois suivants la date d'achat. Tous câblages, fils et autres accessoires Clarion achetés chez un marchand autorisé Clarion, sont garantis contre tous défauts de matériel **ET** de fabrication pour une durée de quatre-vingt-dix (90) jours suivant la date d'achat initiale.

TOUT ACHAT DE PRODUITS CLARION EFFECTUÉ CHEZ UN MARCHAND NON-AUTORISÉ CLARION SERA SOUMIS À DES RESTRICTIONS DE GARANTIES DÉCRITES CI-DESSOUS.

Les conditions de cette garantie limitée et l'implication de la responsabilité de Clarion Corporation of America ou Clarion Canada Inc. "Clarion" sous cette garantie limitée sont les suivantes:

1. **UNE PREUVE DE DATE D'ACHAT D'UN MARCHAND AUTORISÉ CLARION EST REQUISE POUR SERVICE SOUS GARANTIE DE CE PRODUIT. DES INFORMATIONS SUPPLÉMENTAIRES CONCERNANT LES CENTRES DE SERVICES AUTORISÉS PAR CLARION PEUVENT ÊTRE OBTENUES EN CONTACTANT CLARION À UNE DES ADRESSES ÉNUMÉRÉES CI-BAS.**
2. Cette Garantie Limitée sera annulée si un dommage est survenu au bien lors d'un service effectué par une personne ou entreprise qui n'est pas accrédité comme un Centre de Service et Garantie Clarion.
3. Cette Garantie Limitée n'est aucunement applicable à un produit sujet à l'abus, négligence, accidentés, mal installé ou utilisation incorrects ou que les numéros de série ont été modifiés, obstrués ou effacés, ou qui a été raccordés, installés, ajustés ou réparés autrement qu'indiqué par Clarion.
4. Cette Garantie Limitée ne couvre pas les interférences électrostatiques, électriques ni les frais reliés à la manutention pour le retrait ou la réinstallation.
5. La responsabilité de Clarion sous cette Garantie Limitée est limitée uniquement à la réparation ou au remplacement du produit, qui est sujet uniquement à la discrétion de Clarion.
6. Ce produit doit être retourné dans son emballage d'origine ou équivalent. Le colis doit être entièrement assuré et tous frais de transport doivent être prépayés. Clarion n'assumera aucune responsabilité en cas de perte ou dommages survenue lors du transport.
7. **TOUS PRODUITS CLARION ACQUIS PAR L'ENTREMISE AUTRE QUE PAR UN MARCHAND AUTORISÉ PAR CLARION, INCLUANT TOUS ACHATS VIA UN MARCHAND VIRTUEL (ACHAT INTERNET) QUI N'EST PAS AUTORISÉ PAR CLARION, NE SONT PAS COUVERTS PAR LES GARANTIES LIMITÉES DE CLARION, ET CE, EN ACCORD AVEC LES LIMITATIONS DÉFINIES PAR LA LOI. DANS LE CAS OÙ LES LOIS APPLICABLES NE PERMETTENT PAS L'ÉLIMINATION DES GARANTIES SOUS CES CONDITIONS, LA PÉRIODE DE GARANTIE LIMITÉE QUI S'APPLIQUE AU PRODUIT SERA DE QUINZE(15) JOURS À PARTIR DE LA DATE D'ACHAT INITIALE.**
8. **AUCUNE GARANTIE IMPLICITE NE POURRA S'ÉTENDRE AU-DELÀ DE LA PÉRIODE DE GARANTIE DÉCRITE CI-DESSUS, ET CE, EN ACCORD AVEC LES LIMITES DÉFINIES PAR LA LOI. CLARION NE POURRA EN AUCUN CAS ÊTRE TENUE RESPONSABLE DES PERTES OU DOMMAGES DIRECTS OU INDIRECTS DUS À L'UTILISATION OU L'IMPOSSIBILITÉ D'UTILISATION DU PRODUIT. PUISQUE CERTAINS ÉTATS OU PROVINCES NE PERMETTENT PAS DE LIMITER LA DURÉE DES GARANTIES IMPLICITES, OU DE LIMITER LA RESPONSABILITÉ EN CAS DE DOMMAGES DIRECTS OU INDIRECTS, CES LIMITATIONS OU EXCLUSIONS PEUVENT NE PAS S'APPLIQUER À VOUS.**
9. **CETTE GARANTIE LIMITÉE VOUS DONNE DES DROITS LÉGAUX PRÉCIS. VOUS POUVEZ POSSÉDER DES DROITS SUPPLÉMENTAIRES SELON VOTRE LIEU DE RÉSIDENCE.**
10. Les lois de l'état de la Californie régissent totalement cette garantie limitée, son interprétation et sa mise en exécution.
11. Si vous éprouvez des problèmes de performance du produit pendant la période de garantie, veuillez communiquer avec Clarion ou visitez notre site Web à l'adresse ci-dessous afin d'obtenir une résolution de tout problème relié aux produits Clarion.

Aux États-Unis:
Clarion Corporation of America
Attn: Customer Service Manager
6200 Gateway Drive Cypress, CA 90630
1-800-GO-CLARION
www.clarion.com

Au Canada:
Clarion Canada Inc.
Centre de Service et Garantie
2239 Winston Park Drive
Oakville, Ontario L6H 5R1
(905)829-4600
www.clarion.com

clarion**CLARION 1 YEAR LIMITED WARRANTY**

For USA and Canada only

This Clarion product purchased from an authorized Clarion dealer are warranted against all defects in materials and workmanship for a period of **one (1) year** from the date of original purchase other than consumable parts, such as the battery pack, which are covered for 6 months from the date of purchase, when purchased from **AND** installed by an authorized Clarion dealer.

All Clarion cables, wires and other accessories if purchased from an authorized Clarion dealer are warranted against all defects in materials and workmanship for ninety (90) days unless otherwise specified from the date of original purchase.

ALL PURCHASES OF CLARION PRODUCTS FROM NON-AUTHORIZED CLARION DEALERS ARE SUBJECT TO FURTHER WARRANTY RESTRICTIONS AS DESCRIBED BELOW.

The conditions of this Limited Warranty and the extent of responsibility of Clarion Corporation of America ("Clarion") under this Limited Warranty are as follows :

1. **PROOF OF DATE OF PURCHASE FROM AN AUTHORIZED CLARION DEALER WILL BE REQUIRED FOR WARRANTY SERVICE OF THIS PRODUCT. CENTERS MAY BE OBTAINED BY CONTACTING CLARION AT THE ADDRESS LISTED BELOW.**
2. This Limited Warranty will become void if service performed by anyone other than an approved Clarion Warranty Service Center results in damage to the product.
3. This Limited Warranty does not apply to any product which has been subject to misuse, neglect or accident, or which has had the serial number altered, defaced or removed, or which has been connected, installed, adjusted or repaired, other than in accordance with the instructions furnished by Clarion.
4. This Limited Warranty does not cover car static or other electrical interferences, tape head or laser pick-up cleaning or adjustments, or labor costs for the removal or reinstallation of the unit for repair.
5. The sole responsibility of Clarion under this Limited Warranty shall be limited to the repair of the product or replacement of the product, at the sole discretion of Clarion.
6. Product must be shipped in its original carton or equivalent carton, fully insured, with shipping charges prepaid. Clarion will not assume any responsibility for any loss or damage incurred in shipping.
7. **CLARION PRODUCTS PURCHASED FROM A SOURCE OTHER THAN AN AUTHORIZED CLARION DEALER, INCLUDING ANY AND ALL PURCHASES VIA THE INTERNET FROM A NON INTERNET AUTHORIZED CLARION DEALER, SHALL NOT BE COVERED BY ANY CLARION LIMITED WARRANTY TO THE EXTENT ALLOWED BY APPLICABLE LAW. IN THE EVENT AND TO THE EXTENT APPLICABLE LAW PROHIBITS ELIMINATION OF WARRANTIES UNDER THESE CIRCUMSTANCES, THE APPLICABLE LIMITED WARRANTY PERIOD SHALL BE DEEMED TO BE FIFTEEN (15) DAYS FROM THE DATE OF ORIGINAL PURCHASE.**
8. **ALL IMPLIED WARRANTIES EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW SHALL HAVE NO GREATER DURATION THAN THE WARRANTY PERIOD SET FORTH ABOVE. UNDER NO CIRCUMSTANCES SHALL CLARION BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT. BECAUSE SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.**
9. **THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.**
10. The laws of the State of California shall govern and control this Limited Warranty, its interpretation and enforcement.
11. Should you have any difficulties with the performance of this product during the warranty period, please call Clarion or visit our web site for a listing of Authorized Warranty Service Centers in your area. You may also contact Clarion Customer Service at the address listed below for any service help you may need with Clarion products.

In USA:
Clarion Corporation of America
Attn:Customer Service Manager
6200 Gateway Drive
Cypress, CA 90630
1-800-GO-CLARION
www.clarion.com

In Canada:
Clarion Canada Inc.
Warranty Service Center
2239 Winston Park Drive
Oakville, Ontario L6H 5R1
(905) 829-4600
www.clarion.com